


Installation Instructions

SARGENT®
ASSA ABLOY

P700 NE & WE Series

Freewheeling Lever Handle with Exit Trim Spindle Interaction

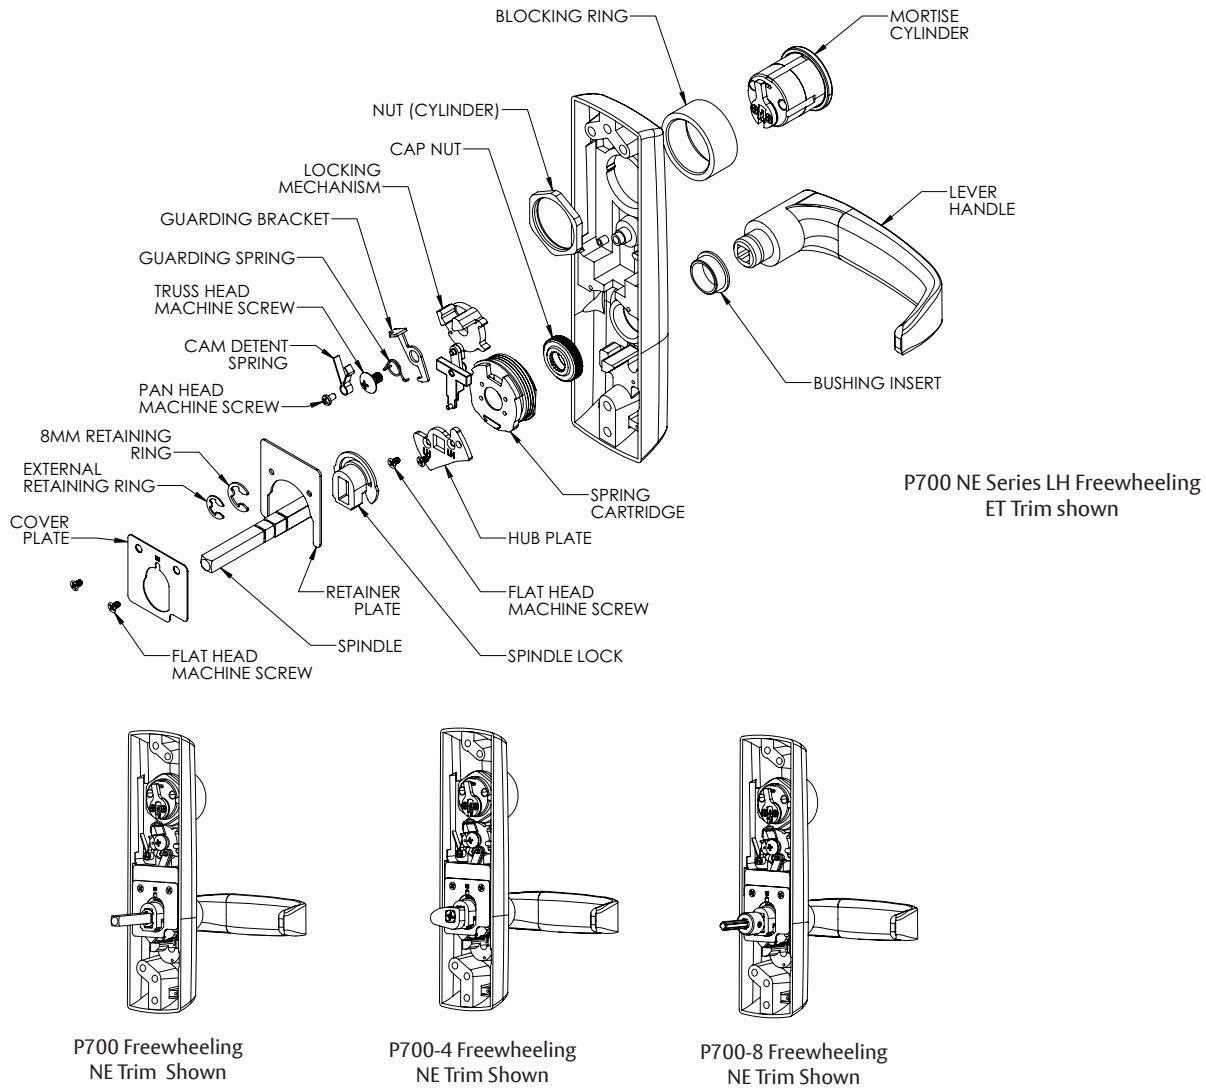

⚠️ WARNING

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

Experience a safer
and more open world

P700 NE & P700 WE Series


SARGENT®

ASSA ABLOY

Freewheeling Lever Handle with Exit Trim

Installation Instructions

P700-8 series trim used with PE8500, PE8800, 12-PE8800, PE8888, 12-PE8888, HC-PE8800 and 12-HC-PE8800 rim type exit devices.

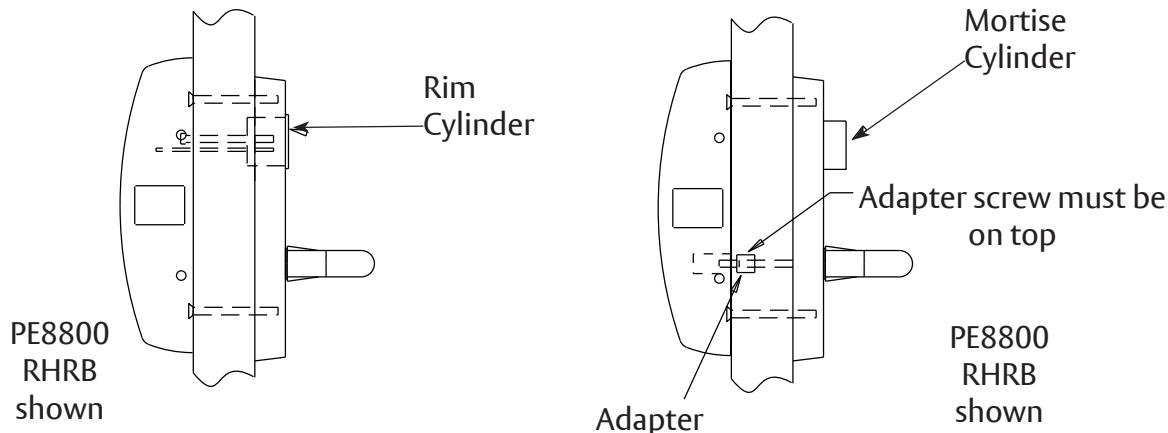

Important: See instruction sheet A8301 for (12-) PE8888 and (12-) HC-PE8800 and A8302 for PE8500 exit devices mounting. Securely fasten adapter to spindle with set screw before mounting.

P700-4 series trim used with PE8400, 12-MD-PE8400, MD-PE8600, 12-MD-PE8600, WD-PE8600 and 12-WD-PE8600 concealed vertical rod exit devices.


Important: See proper instruction sheet for exit device mounting.

A8302 - for PE8500

A8305 - for MD-PE8600 and 12-MD-PE8600

A8306 - for PE8400 and 12-MD-PE8400

A8315 - for WD-PE8600 and 12-WD-PE8600

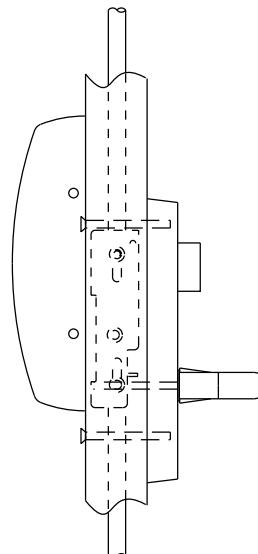

PE8600
RHRB shown


P700 NE & P700 WE Series

SARGENT®

ASSA ABLOY


Freewheeling Lever Handle with Exit Trim Installation Instructions

1

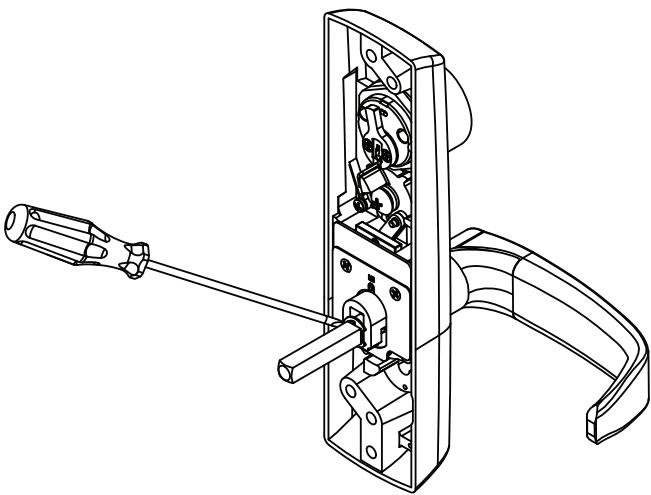


Remove the external retaining ring.

2

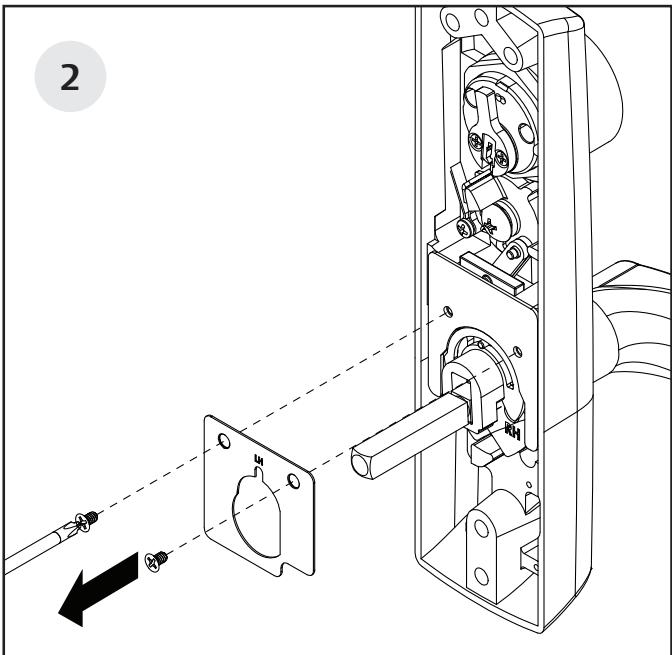


Loosen #4-40 x 3/16" flat head screws with a screwdriver. Remove the flat head screws and cover plate.

3

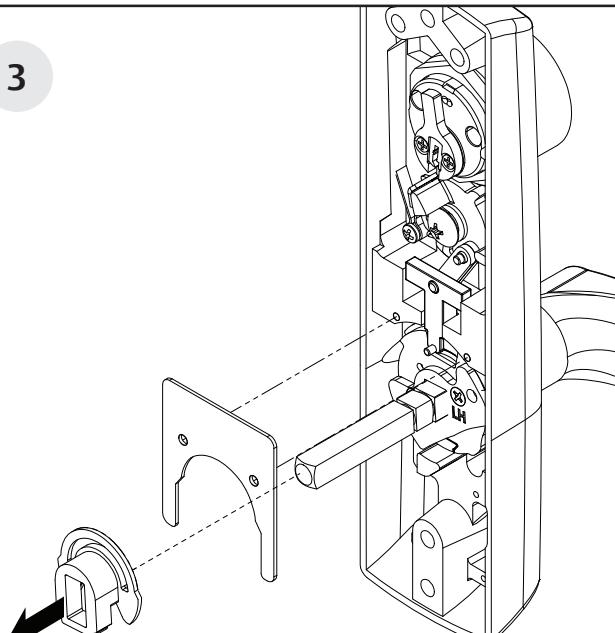

Remove the spindle lock and retaining plate.

4

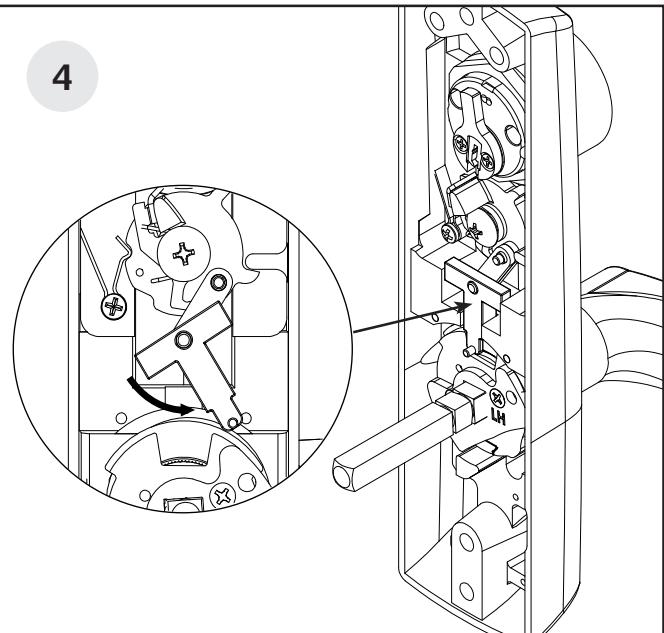

Push the locking mechanism to the right.

P700 NE & P700 WE Series

SARGENT®

ASSA ABLOY

Freewheeling Lever Handle with Exit Trim


Installation Instructions

5



Remove the cartridge.

6

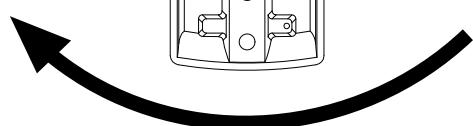


Move the lever to the opposite side.

7



Reinstall the cartridge.

8

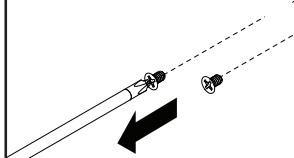

Remove two #4-40 x 3/16" flat head screws from the hub plate.


P700 NE & P700 WE Series

SARGENT®

ASSA ABLOY


Freewheeling Lever Handle with Exit Trim Installation Instructions

9

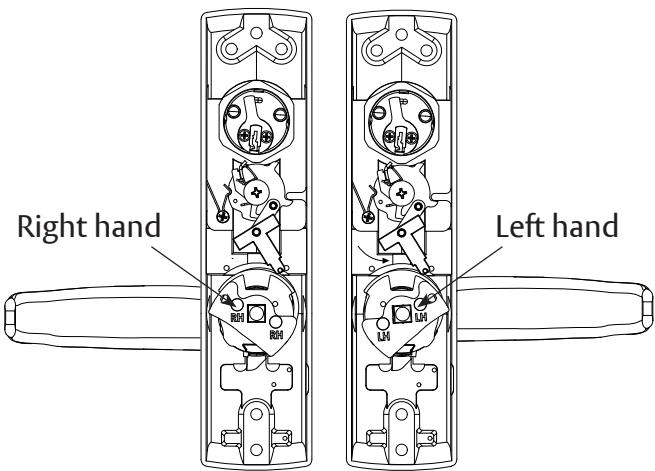


Turn the hub plate according to the door's handing.

10

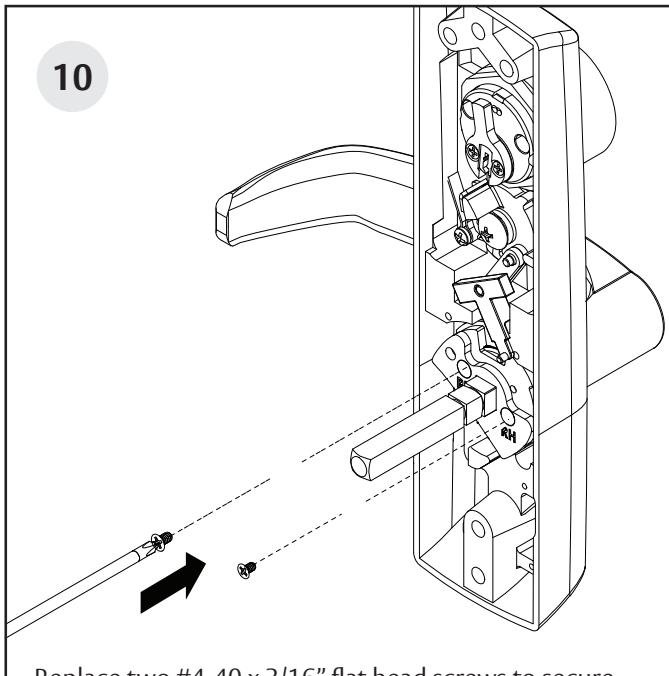


Replace two #4-40 x 3/16" flat head screws to secure the hub plate.

11

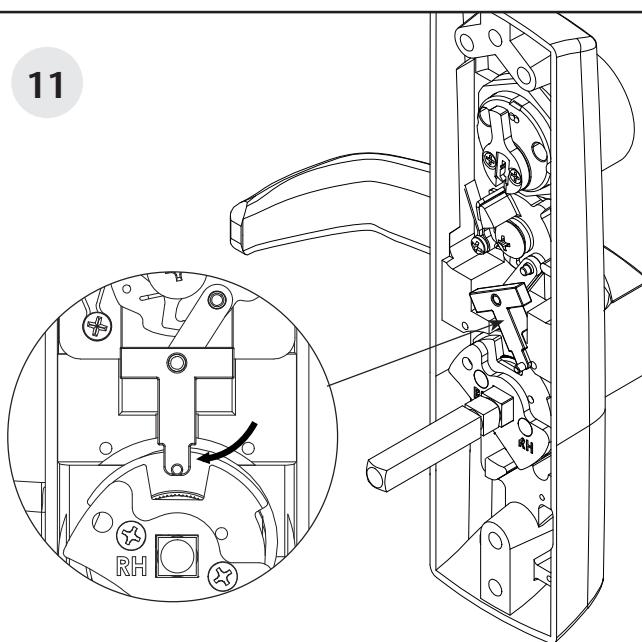

Move the locking mechanism to its original position.

12

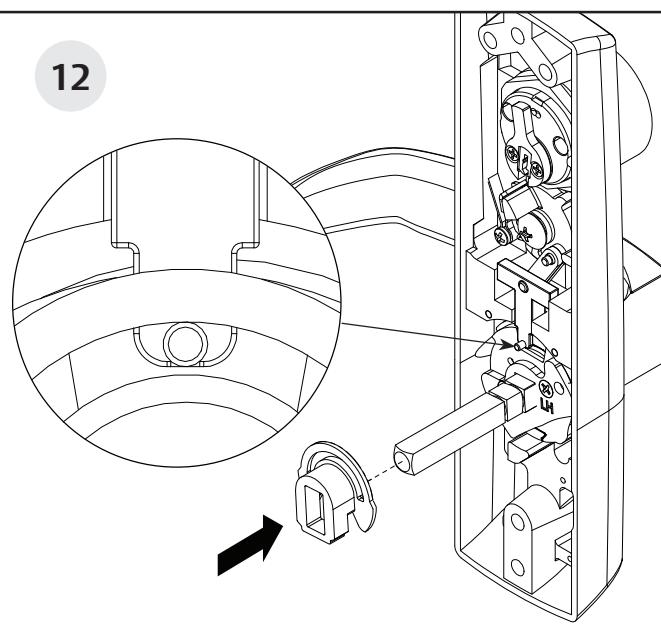

Insert the spindle lock. Make sure that the locking mechanism inserts into the slot.

P700 NE & P700 WE Series


SARGENT®

ASSA ABLOY

Freewheeling Lever Handle with Exit Trim


Installation Instructions

13

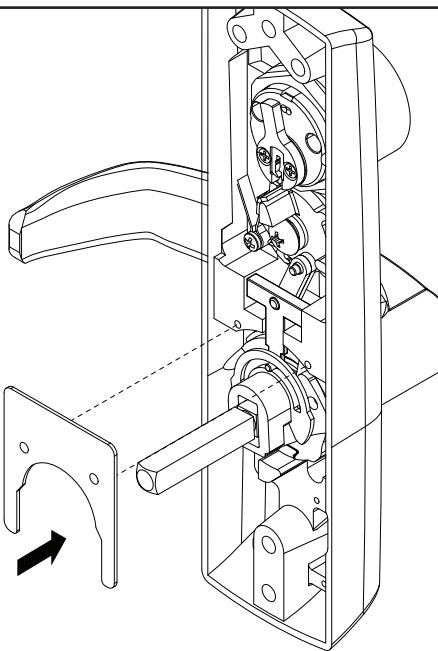


Reinstall the retainer plate.

14

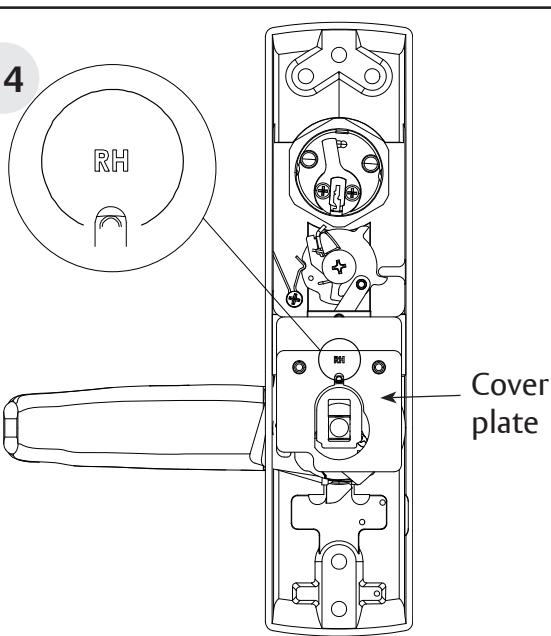


Determine the door handing, then reinstall the cover plate accordingly.

15

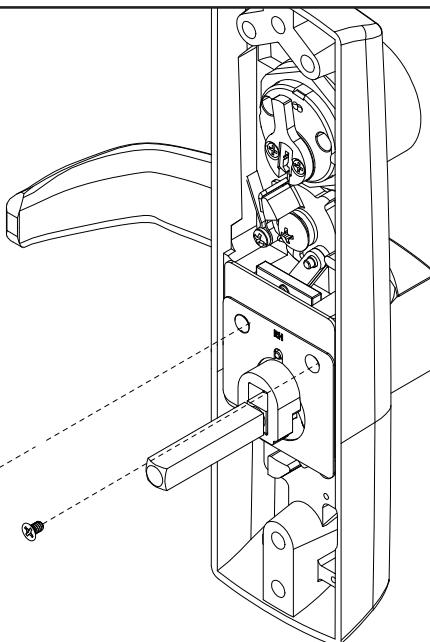

Secure the cover plate with two #4-40 x 3/16" flat head screws.

16

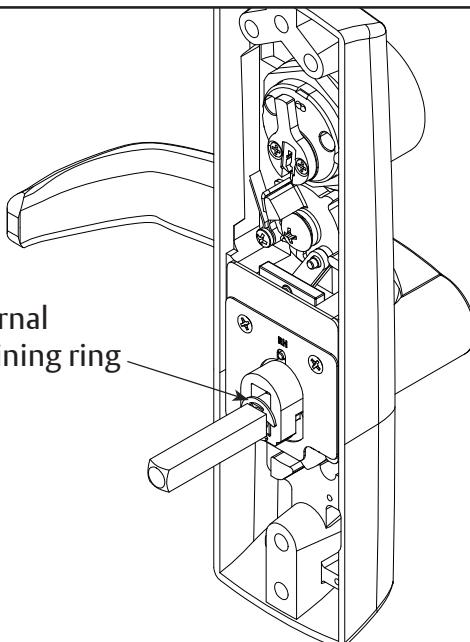

Reinstall the external retaining ring.

P700 NE & P700 WE Series

Freewheeling Lever Handle with Exit Trim

Installation Instructions

SARGENT®

ASSA ABLOY

 **WARNING**

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

1-800-727-5477 • www.sargentlock.com

Copyright © 2023, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloyss.com/patents.

A8313-1 5/23

Experience a safer
and more open world