



Installation Instructions

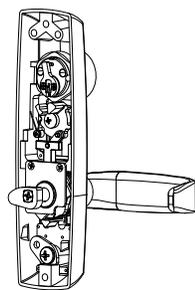


800PT & 900PT Series


Lever Handle with Exit Trim Spindle Interaction

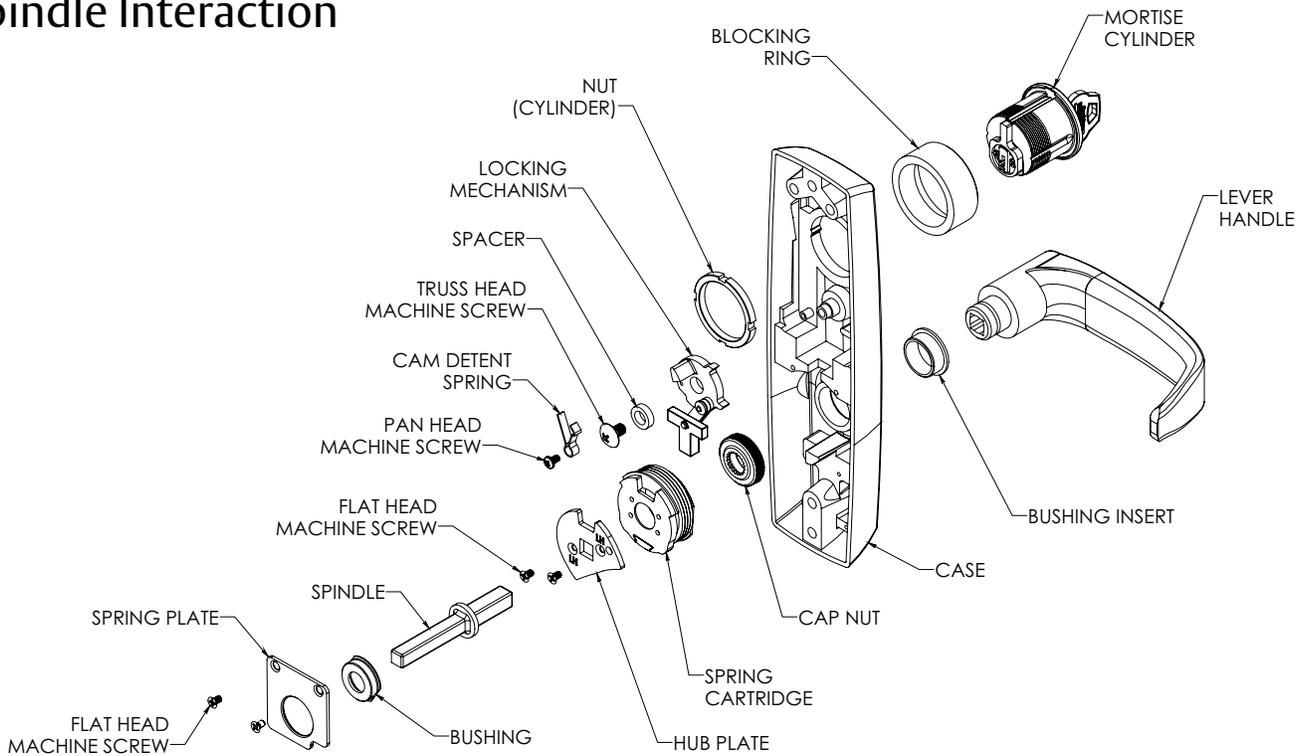

8CV00PT Trim shown

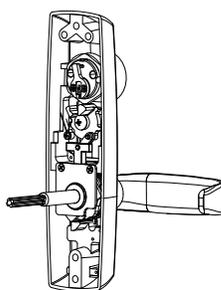

800PT Trim shown

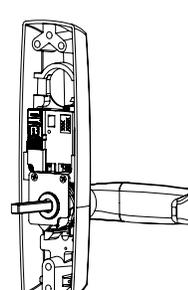

8M910PT/8M930PT Trim shown

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

FM605 01/23

Experience a safer
and more open world

800PT & 900PT Series


Lever Handle with Exit Trim



ASSA ABLOY


Installation Instructions

8M00PT/9M00PT series trim used with PED5400 and NB-PED5400 surface mounted vertical rod exit devices.

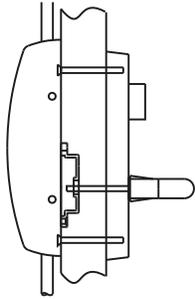


PED5400 RHRB shown

8M00PT/9M00PT series trim used with PED5242 rim exit devices.

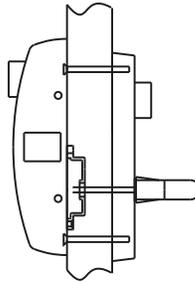


PED5242 RHRB shown

8M00PT/9M00PT series trim used with PE5600 Mortise lock exit devices.

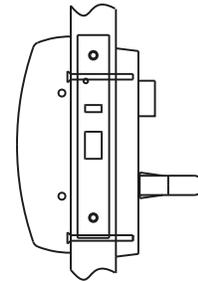

PED5600 RHRB shown

800PT/900PT series used with PED4200, PED5200, PED5200 A, PED5200 HC, and PED5200 A HC rim type exit devices.

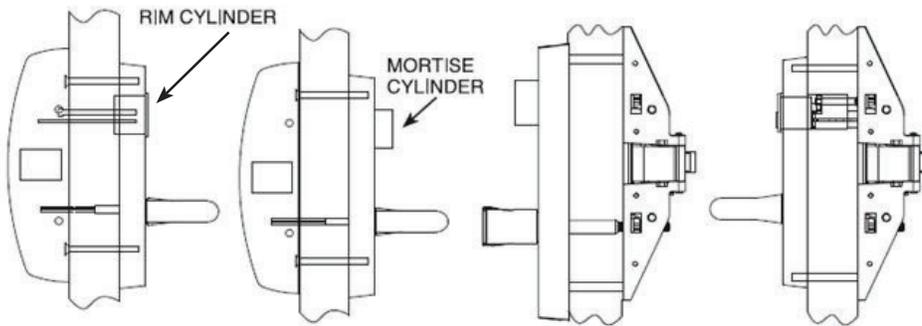

PED5200 x 9903PT RHRB shown


PED5200 x 945PT RHRB shown

PED4200 x 945PT, 910PT LHRB shown

PED4200 x 947PT LHRB shown

Important: See instruction sheet FM577 for PED5200 (A) and PED5200 (A) HC exit device mounting, or FM578 for PED4200.

8CV00PT / 9CV00PT series trim used with PED4800, PED4800 A MD, PED5800 MD, PED5800 A MD, PED5800 WD and PED5800 A WD concealed vertical rod exit devices.

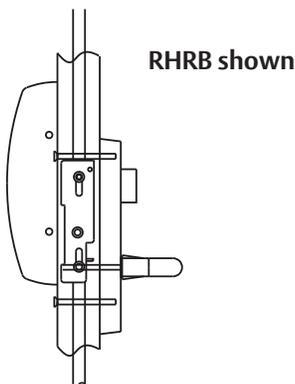

RHRB shown

Important: See instruction sheet for exit device mounting:

- FM582 - for PED4800 and PED4800 A MD
- FM608 - for PED5800 WD and PED5800 A WD
- FM581 - for PED5800 MD and PED5800 A MD





800PT & 900PT Series

Lever Handle with Exit Trim



Installation Instructions

Trim Lever Handing

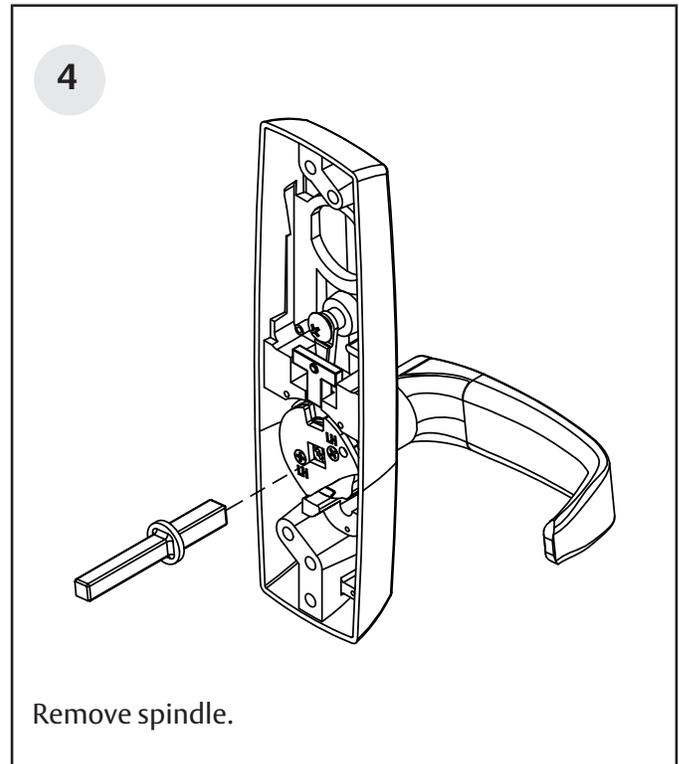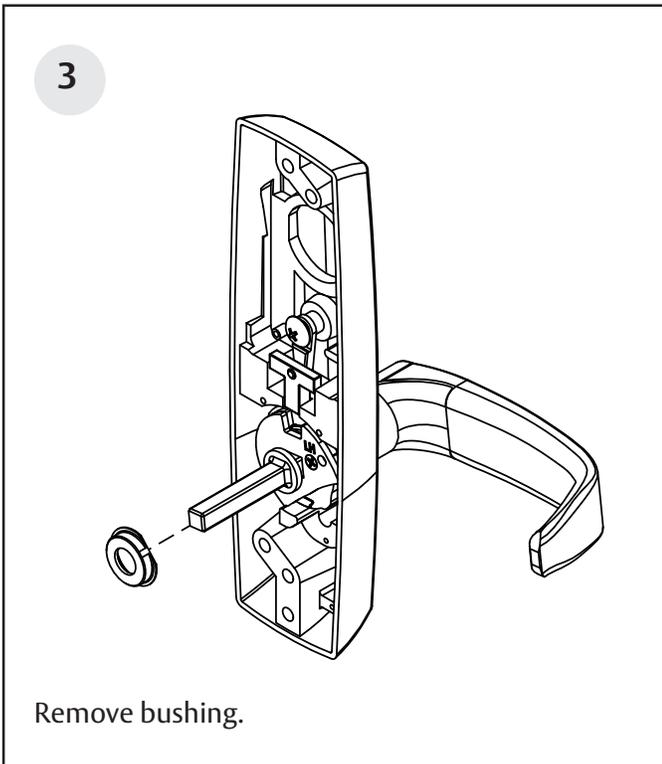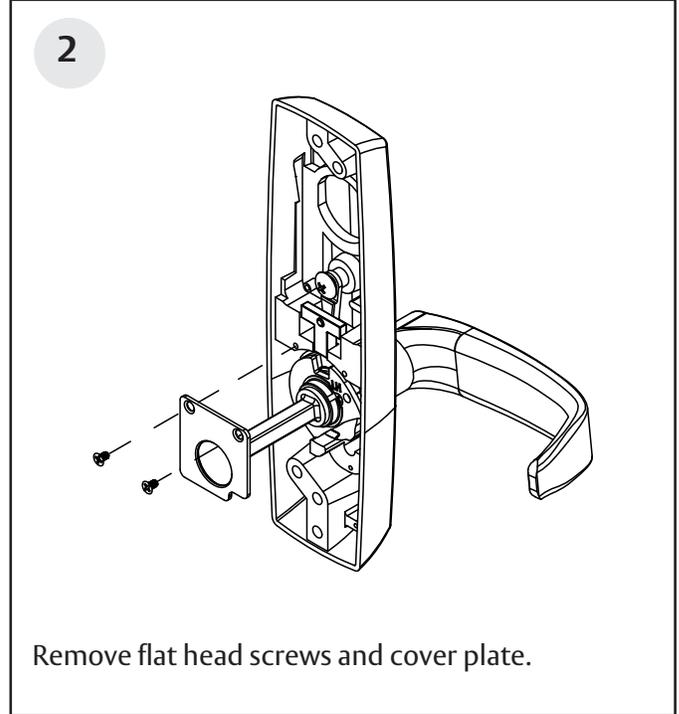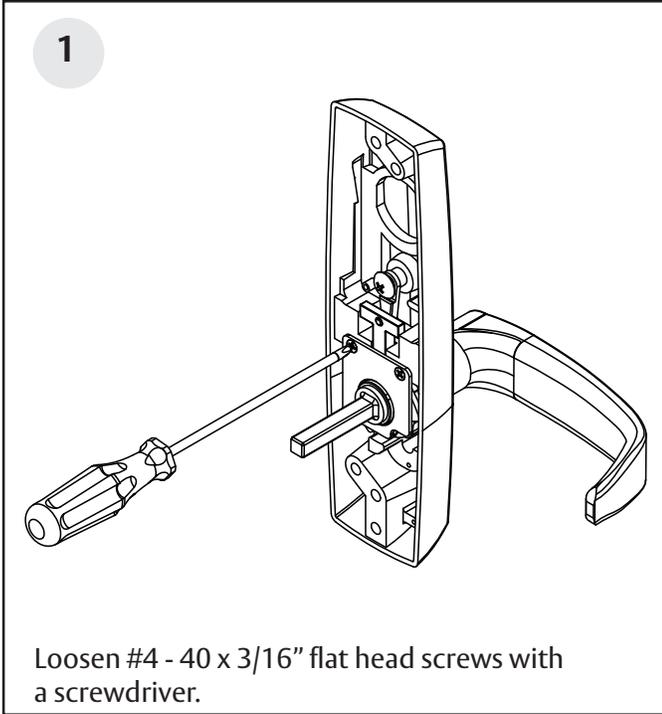

FM605 01/23

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

800PT & 900PT Series

Lever Handle with Exit Trim



Installation Instructions

5

Remove #4 - 40 x 3/16" flat head screws.

6

Flip hub plate.

7

Reinstall flat head screws.

8

Remove cartridge.

FM605 01/23





1-800-543-3658 • techsupport.corbinruswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

800PT & 900PT Series Lever Handle with Exit Trim



Installation Instructions

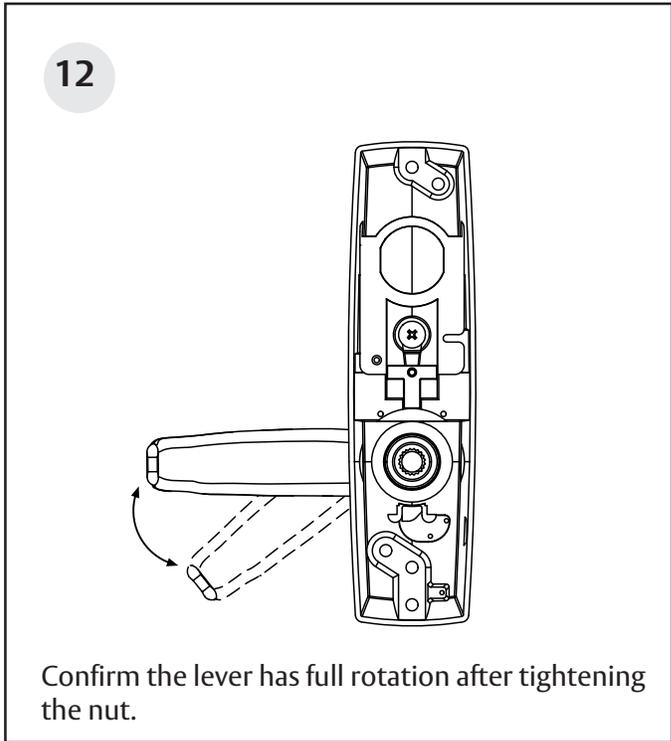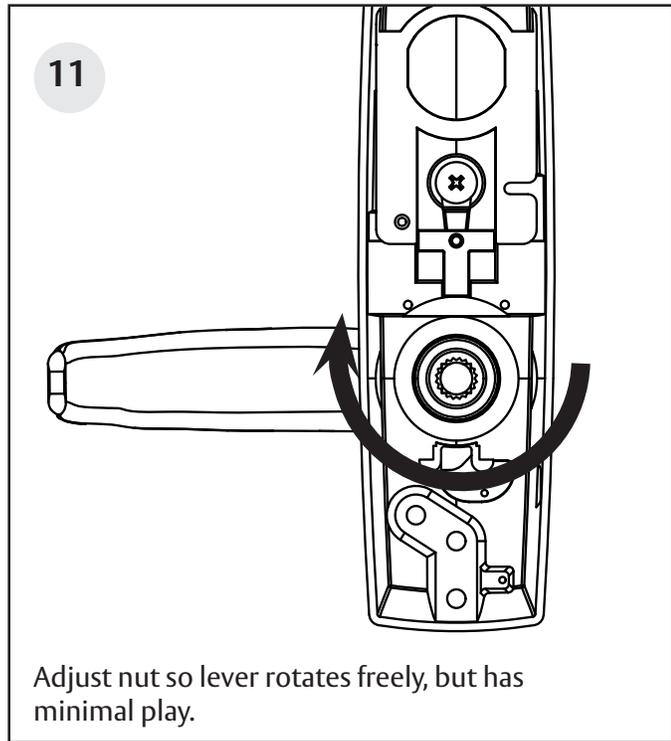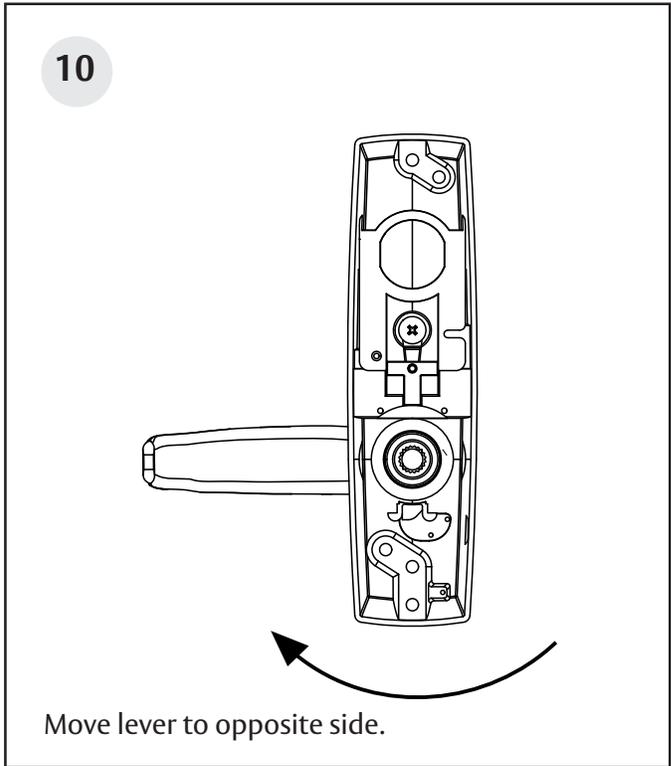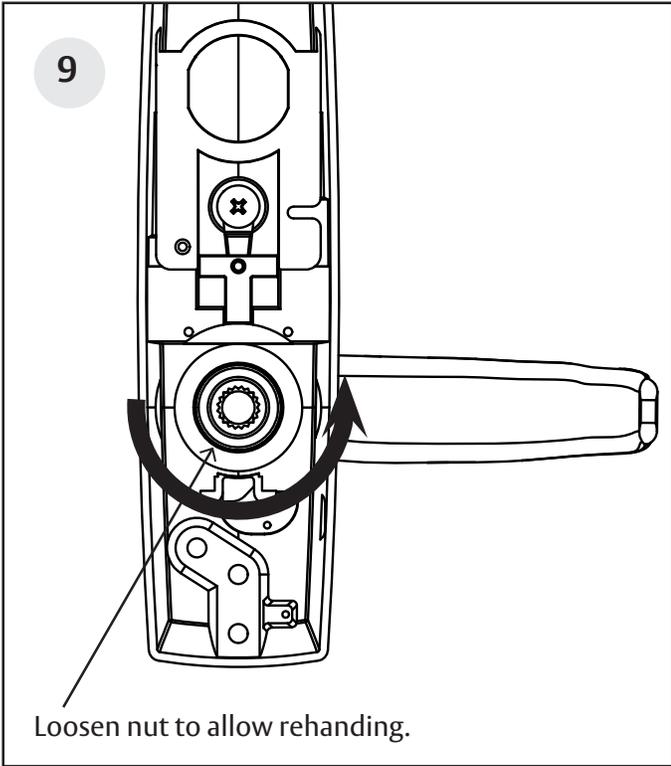

FM605 01/23

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

800PT & 900PT Series


Lever Handle with Exit Trim



ASSA ABLOY


Installation Instructions

13

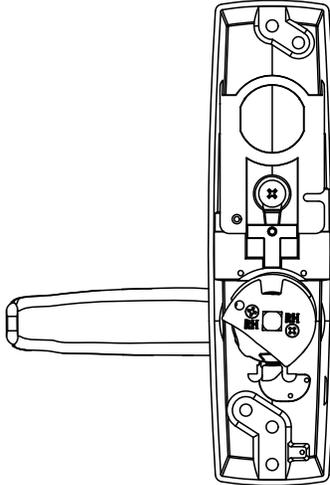


Put cartridge back into trim.

14

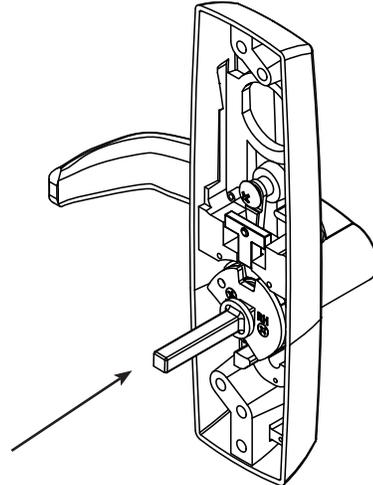


Insert spindle.

15

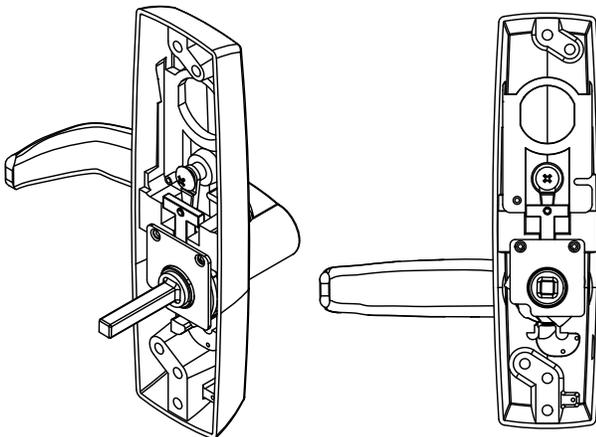

Insert bushing and then insert cover plate.

16

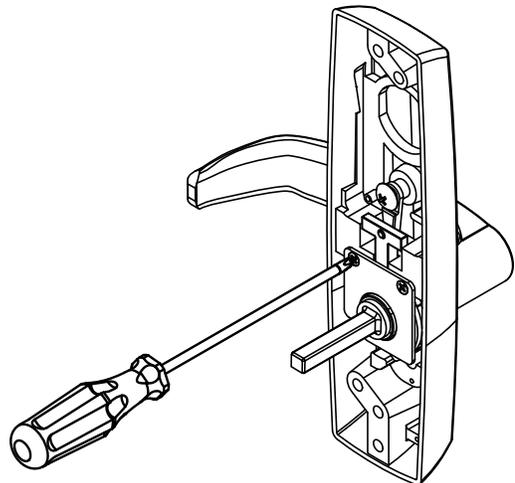

Reinstall #4 - 40 x 3/16" flat head screws.

FM605 01/23

1-800-543-3658 • techsupport.corbinruswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

800PT & 900PT Series

Lever Handle with Exit Trim

Installation Instructions



