


StormPro® Tornado Resistant System Replaceable Glass Module Installation Instructions


Strong in the Storm®

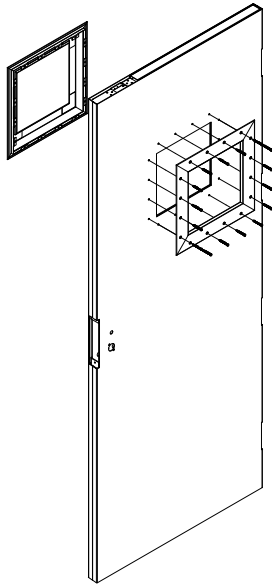

1 Remove all trim screws and trim.

Set interior trim and spacer plate aside for use with new glazing module.

Discard screws and exterior trim piece.


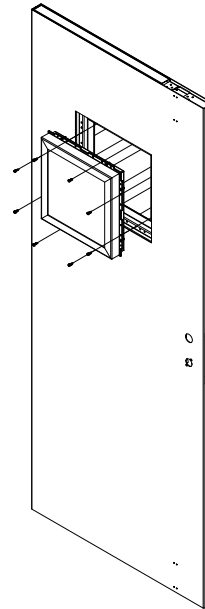


2 Remove glazing module screws and glazing module and discard.

3 Install replacement glazing module using #8 x 5/8" pan head screws included in kit.

- 8 screws required for 10" x 10" vision lite


- 10 screws required for 4" x 25" narrow lite

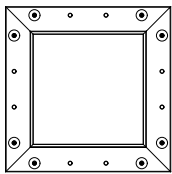

4 Re-install interior trim and spacer plate using #10 x 1-3/4" oval head screws included in kit at the marked locations.

- 8 screws required for 10" x 10" vision lite

- 12 screws required for 4" x 25" narrow lite

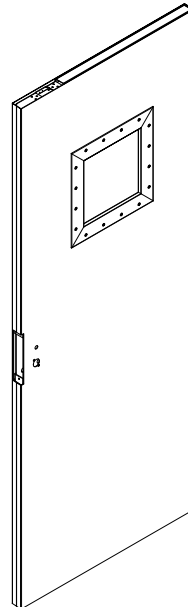

5 Install replacement exterior trim using #10 x 1-3/4" oval head screws included in kit at the remaining locations.

- 8 screws required for 10" x 10" vision lite

- 8 screws required for 4" x 25" narrow lite

For routine cleaning, use a soft, clean, grit-free cloth and a mild soap, detergent, or non-stringent widow cleaning solution (safe for polycarbonate glass).

Care must be taken not to scratch the interior protective surfaces. Do not use bristle brushes or abrasive cleaning materials. A soft cloth or clean synthetic sponge is recommended for washing and do not use the same cloth or sponge for wiping sills or frames. It is recommended to use a different sponge, cleaning cloth and water for cleaning the outside and the inside of the windows.

1502 12th Street NW
 Mason City, IA 50401
 Phone: 641-423-1334
 Fax: 641-424-8305
 www.curries.com

Experience a safer
 and more open world

Curries is a brand associated with AADG, Inc., an ASSA ABLOY Group company. Copyright © 2025, AADG, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of AADG, Inc. is prohibited.