

INSTALLATION INSTRUCTIONS 322

Effective date: August 15, 2023
Supercedes: All Previous


NOT TO SCALE

ROCKWOOD®

ASSA ABLOY

Experience a safer
and more open world

322 LATCH PROTECTOR

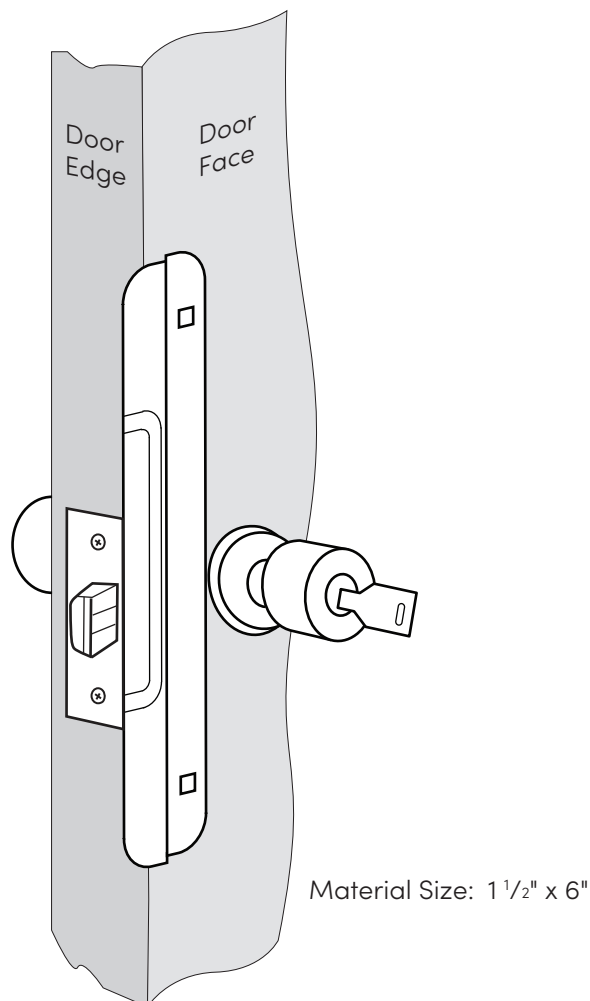

1. Mark holes $\frac{3}{4}$ " from door edge.
2. Drill $\frac{5}{16}$ " holes through door.
3. Recessed cap nuts require $\frac{3}{8}$ " bore.
4. Tighten nuts with $\frac{3}{16}$ " hexagon wrench.

Reversible Unit.