


ESK-9100-WOOD-SWING4 Single Electric Strike for Wood Doors Swing 4

Experience a safer
and more open world

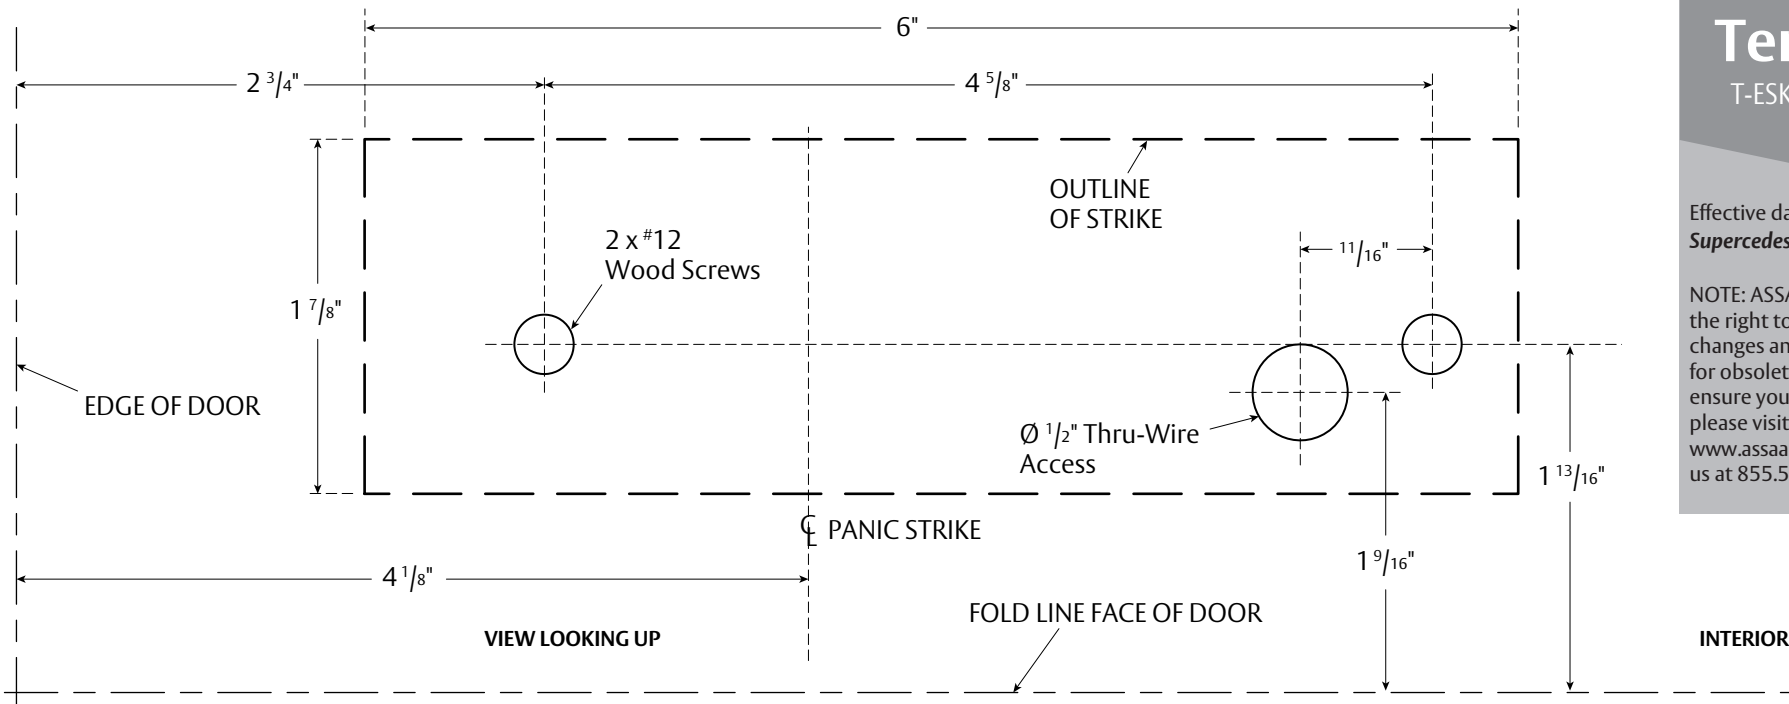

Template

T-ESK-9100 WOOD
SWING4

Effective date: Feb. 1, 2024
Supersedes: All Previous

NOTE: ASSA ABLOY reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.assaabloyglass.us or call us at 855.594.6989.

Notes:

1. Allowable distance from edge of door to centerline of strike is $4\frac{1}{8}$ " , consult factory if distance to centerline is different.
2. View is from bottom of header.
3. Prep shown is for wood doors only.
4. Attach w/ (2) #12 wood screws by others. Screws must extend thru jamb and fasten to blocking material or sub frame.
6. For headers less than or equal to $5\frac{1}{4}$ " wide, cover is required by others to conceal a portion of electric strike.

PRINT AT 1:1 SCALE. VERIFY MEASUREMENTS AFTER PRINTING BEFORE USING THIS AS A TEMPLATE.

INTERIOR

EXTERIOR