


Installation Instructions

PED4800 CVR Series AD01


Supplement

The AD01 will be installed as per the PED4800 Series (AD, MD, A MD) Narrow Concealed Vertical Rod Exit Devices Installation Instructions (FM582). Reference the table on the next page for the proper fasteners.

AD01 concealed components will be shipped with 1/2" standoffs for proper alignment inside of the door.

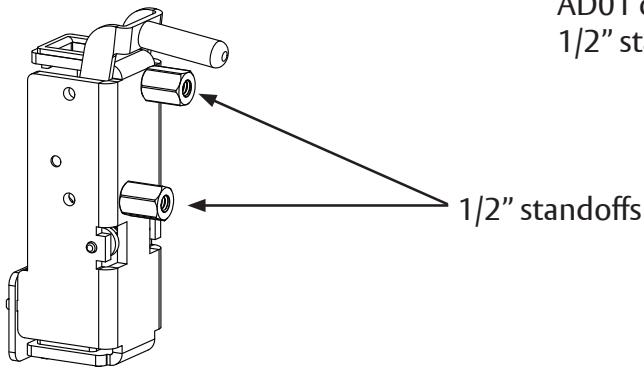


AD01 Top Case
Sub-Assembly

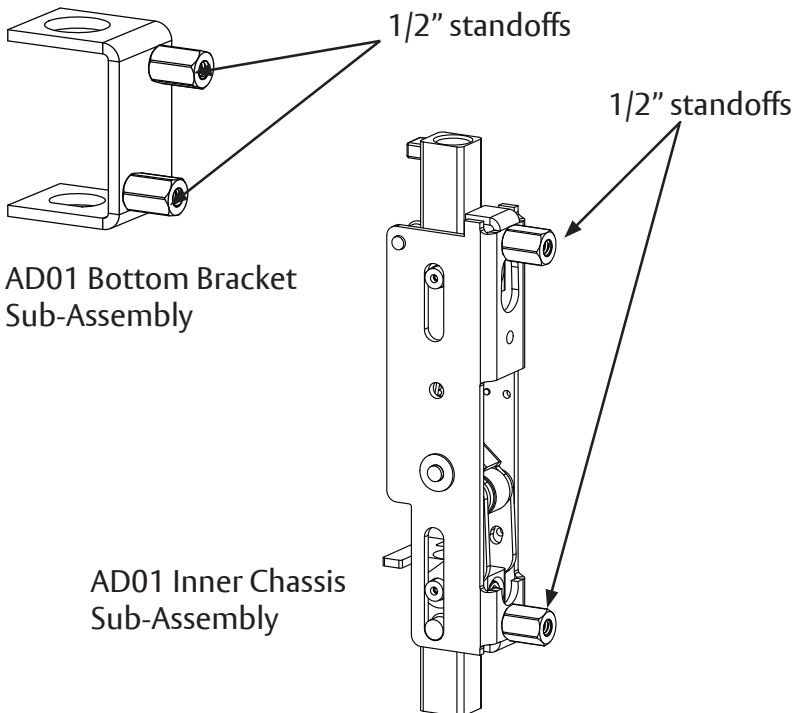




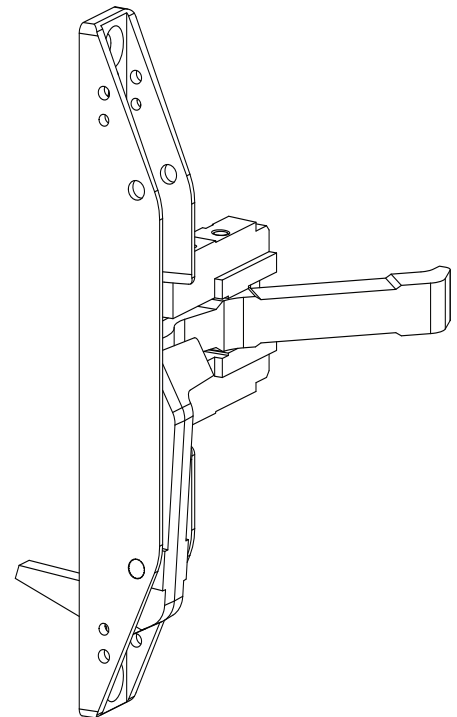

AD01 Bottom Bracket
Sub-Assembly

AD01 Inner Chassis
Sub-Assembly



1/2" Cladded Door
CVR Center Chassis Sub-Assembly

SCREW	TOTAL QTY SUPPLIED	WHERE USED
 1/4"-20 X 1/2" ROUND HEAD MACHINE SCREW	1	(1) CHASSIS TOP MOUNTING HOLE
 #10-24 X 3/8" U'CUT FLAT HEAD MACHINE SCREW	1	(1) INNER CHASSIS TOP MOUNTING HOLE
 #10-24 X 1/2" U'CUT FLAT HEAD MACHINE SCREW	5	(1) CHASSIS TO INNER CHASSIS BOTTOM MOUNTING HOLE
 #10-24 X 3/8" OVAL HEAD MACHINE SCREW	4	(2) TOP CASE (2) BOTTOM BRACKET
 1/4"-20 X 2-7/8" KNURLED FLAT HEAD MACHINE SCREW	2	(2) EXIT TRIM FOR 2-1/4" THICK DOORS (IF USED)

For 640 strike installation, add 1/2" to the standard offset from the door stop. Reference 640 strike template (MEDT6).

WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2024 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

WARNING

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

FM812 05/24

Experience a safer
and more open world