

Multi Point Locks

Template and installation instruction guide

46120



MP9800 SERIES MULTI POINT LOCK TEMPLATES

Template Name & Doc #	Device	Notes
Metal/Aluminum Template Doc# T31242	Main Mounting	Metal/Aluminum Only
Wood Template Doc# T31243	Main Mounting	Wood Only
Aluminum Door Strikes Template Doc# T31244	Strikes	Aluminum Door
Wood Door Strikes Template Doc# T31241	Strikes	HM and Wood Door
Aux Control Template Doc# T31240	Aux Control	Metal Door

MP9800 SERIES MULTI POINT LOCK INSTALLATION INSTRUCTIONS

Product Description	Installation Instruction
MP9800 Aluminum and Metal Door Applications	FM438
MP9800 Wood Door Applications	FM436
MP9800 w/Auxiliary Control	FM439
MP9800 w/MELR	FM435
MP9800 w/Fail Safe of Fail Secure Locking Trim	FM499
MP9800 w/SN200/210 Access Control	FM564

Multi Point Locks

Template and installation instruction guide

46120



MP6600 SERIES MULTI POINT LOCK TEMPLATES

Template Name & Doc #	Category	Notes
Template Form	Template Form	Ceco and Curries Multi-Solution Opening doors and frames and McKinney StormPro® hinges in order to meet ASTM Response Categories 1 and 2, and UFC 4-010-01 DoD Minimum Anti-terrorism Standards for Buildings.


MP6600 SERIES MULTI POINT LOCK INSTALLATION INSTRUCTIONS

Product Description	Installation Instruction
MP6600 Multi-Point Lock	FM523
MP6600 w/Escutcheon Trim	FM524
MP6600 w/Standard Lever Trim	FM525
MP6600 w/Museo Lever Trim	FM526
MP6600 w/M19V & M19S Occupancy Indicators	FM527
MP6600 w/M19VN & M19SN Occupancy Indicators	FM528
MP6600 w/IN100 Access Control	FM558
MP6600 w/IN120/220 Access Control	FM455
MP6600 w/Dogging Indicator (AUX188)	FM489
MP6600 w/NAC Electrified Lock w/High Security Monitoring Options	FM459

Multi Point Locks

Template and installation instruction guide

46120

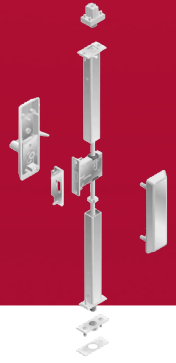

FE6700 SERIES MULTI POINT LOCK TEMPLATES

Template Name & Doc #	Category	Notes
Template Form	Template Form	This product must be fully Integrated with Ceco Door StormPro® 361 or Curries StormPro® 361 doors and frames and McKinney StormPro® hinges in order to meet ICC500 (2014), FEMA P-361 (2015), and FEMA P-320 (2014) certification.
Metal Door Template	Mounting Template	Metal Doors Only

FE6700 SERIES MULTI POINT LOCK INSTALLATION INSTRUCTIONS

Product Description	Installation Instruction
FE6700 Multi-Point Shutter Lock Application	FM327

Multi Point Locks

Template and installation instruction guide

46120



FE6600 SERIES MULTI POINT LOCK TEMPLATES

Template Name & Doc #	Category	Notes
Template Form	Template Form	This product must be fully Integrated with Ceco Door StormPro® 361 or Curries StormPro® 361 doors and frames and McKinney StormPro® hinges in order to meet ICC500 (2014), FEMA P-361 (2015), and FEMA P-320 (2014) certification.

Multi Point Locks

Template and installation instruction guide

46120



BL6600 SERIES MULTI POINT LOCK TEMPLATES

Template Name & Doc #	Category	Notes
Template Form	Template Form	This product requires utilizing Ceco and Curries Multi-Solution Opening doors and frames and McKinney StormPro® hinges in order to meet ASTM Response Categories 1 and 2, and UFC 4-010-01 DoD Minimum Anti-terrorism Standards for Buildings

BL6600 SERIES MULTI POINT LOCK INSTALLATION INSTRUCTIONS

Product Description	Installation Instruction
BL6600 Multi-Point Lock	FM440
BL6600 w/Escutcheon Trim	FM467
BL6600 w/Standard Lever Trim	FM468
BL6600 w/Museo Lever Trim	FM469
BL6600 w/M19V & M19S Occupancy Indicators	FM470
BL6600 w/M19VN & M19SN Occupancy Indicators	FM471
BL6600 w/IN100 Access Control	FM558
BL6600 w/IN120/220 Access Control	FM455
BL6600 w/NAC Electrified Lock w/High Security Monitoring Options	FM459