


GT1850 FOAM INTUMESCENT GLAZING TAPE

TOOLS REQUIRED


- Tape measure
- Scissors




INSTALLATION INSTRUCTIONS

This product has been designed to provide an effective fire and smoke seal when used with listed and labeled fire rated metal vision lite kits and glass.

GT1850 is to be installed as illustrated above in each half of the metal vision kit.

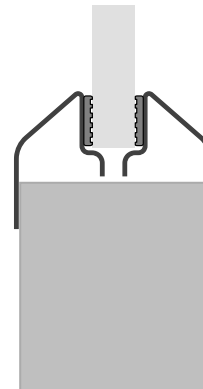

Listed and Labeled
Fire Rated
Wood Doors

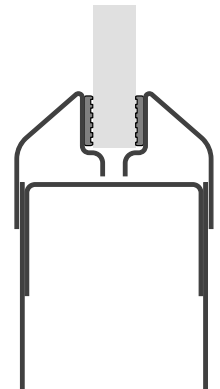

Listed and Labeled
Fire Rated
Hollow Metal Doors

Care should be taken to install this product without stretching or damaging it in any way. The temperature of the frame should be above 40° F. The frame should be thoroughly cleaned removing dust, oil, grease or dirt. Certain paint products may make adhesion difficult. If necessary, lightly sand the painted surface and then thoroughly clean. **Secure adhesion is crucial to the proper performance of this product!**

1. Measure the frame at the top and both sides.
2. Cut the product to fit using scissors.
3. Remove protective backing one foot at a time.
4. Adhere glazing to the exact location on frame where it is to be installed.
5. Inspect glazing to assure proper location. Do not overlap the glazing.
6. Assemble lite kit per Mfg instructions, (there should be no gaps between glass, glazing and or light kit frame once assembled.)

LISTING DESCRIPTION

- 3 Hour Rating
- Certified to UL10C, NFPA 252 and CAN/ULC S104

*Refer to Intertek's Directory of Building Products for test standards and ratings.

