
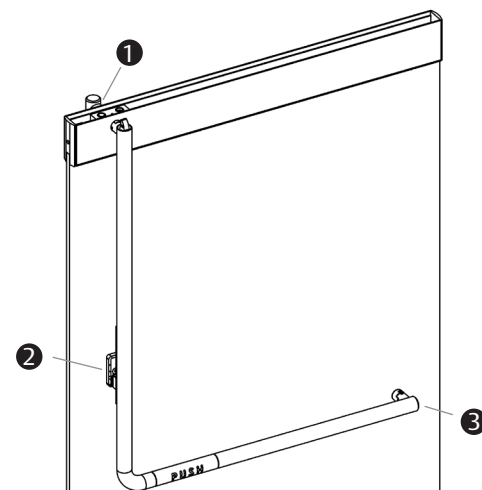


Dogging and Less Dogging Swap in Field Instructions

Experience a safer
and more open world


- Remove Panic Device from door, by removing the Set Screw Pins ④ at the Vertical Door Mount Location ① and Horizontal Door Mount Location ③.
- With the Panic Device removed from door, lay the panic device down on a flat surface with the dog button and actuator pocket are facing up.

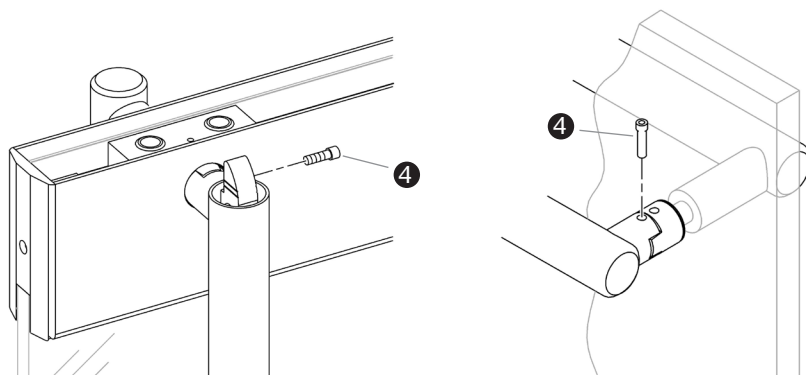

- ① Vertical Door Mount Assembly
- ② Actuator Post-Cylinder Housing Assembly
- ③ Horizontal Door Mount Assembly
- ④ Set Screw Pin

Swap Panic from Dogging to Less Dogging

- Thread the current dog button from the Panic Device using a $\frac{1}{8}$ " Allen Key. Heat may be required to remove current dog button due to threadlocker being used.
- Position less dogging trim plate over slot in panic tube.
- Apply threadlocker to threads of #10-24 x $\frac{5}{8}$ " flathead screw and install into location where old dog button was installed.
- Torque to 22.8 in/lbs. using a $\frac{1}{8}$ " Allen Key.

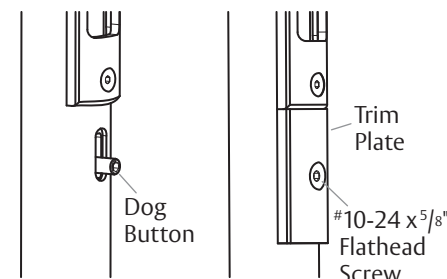

Swap Panic from Less Dogging to Dogging

- Thread the current #10-24 x $\frac{5}{8}$ " flathead screw from the Panic Device using a $\frac{1}{8}$ " Allen Key. Heat may be required to remove current screw due to threadlocker being used.
- Remove less dogging trim plate.
- Apply threadlocker to threads of Dogging Button and install into location where #10-24 x $\frac{5}{8}$ " flathead screw was installed.
- Torque to 22.8 in/lbs. using a $\frac{1}{8}$ " Allen Key.

