

INSTALLATION INSTRUCTIONS 630

Effective date: June 15, 2026
Supercedes: All Previous

NOT TO SCALE

ROCKWOOD®


ASSA ABLOY

Experience a safer
and more open world


ROCKWOOD 630 SURFACE BOLT ASSEMBLY

Installation Instructions


1. Slide mounting bracket, nearest the knob, against the stop pin (retracted position).

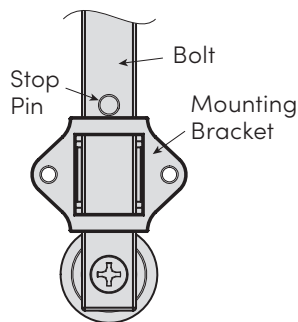


2. Align end of bolt with edge of door.

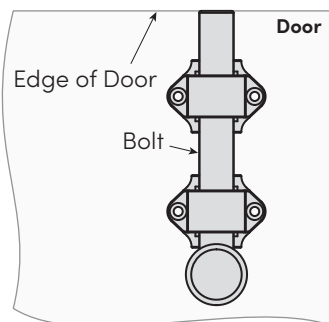


3. Move top bracket nearest edge of door into position so that mounting holes are $\frac{3}{4}$ " from edge of door, and fasten to door with (2) #6 screws.

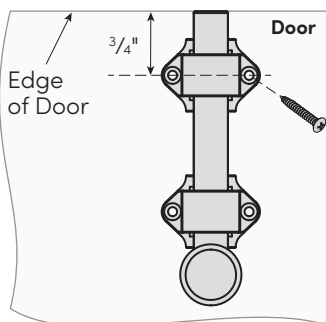


4. Fasten bracket, which is against stop pin, to door with (2) #6 screws.

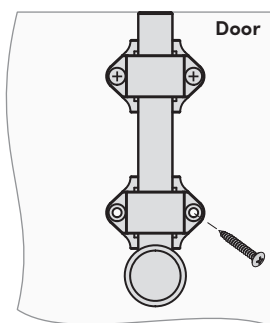

5. Move other mounting brackets into position so that they are equal distance from each other and fasten each in place with (2) #6 screws. (#630-4 and #630-8 have no intermediate brackets, #630-12 has one intermediate bracket, #630-24 has 2 intermediate brackets.)

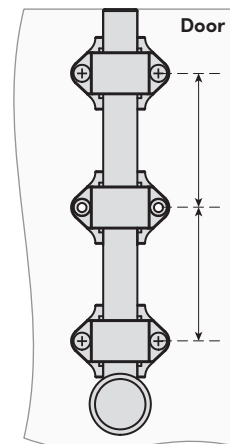

6. Mount surface strike to frame, (or door section of Dutch Door) by aligning with bolt, marking location and mortising. Install with (2) #6 screws.

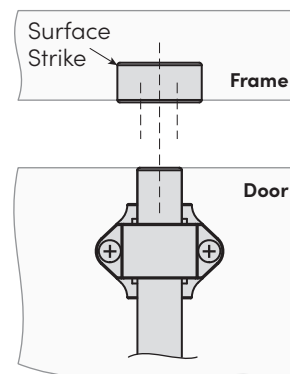

7. Some situations require the use of the optional shelf strike (provided). When this is used mounting is like the surface strike.

