


INSTALLATION SHEET

RUGGED LINER


2023+ F250/350 BEDLINER/TAILGATE

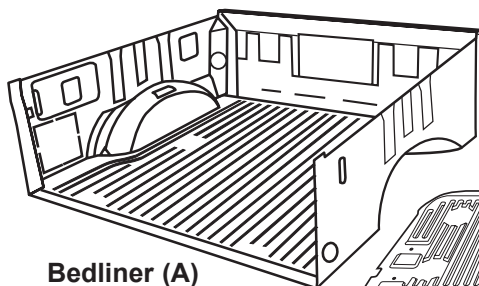

Bedliner (A)

LIST OF CONTENTS:

- (A) 1 - Bedliner
- (B) 1 - Tailgate Cover



Tailgate Cover (B)

LIK85:

- (C) 6 - 3/4" Plastic washers



- (D) 6- 3/4" Plastic Spacer



MISSING PARTS???

Call Rugged Liner at

800-433-3604

Any required parts will be shipped to you directly.
(DO NOT return whole kit to store)

TOOLS REQUIRED:

- Screwdriver with T20 Torx bit in steps 3&4.
- Utility knife in step 6.

1


**PLEASE READ INSTRUCTIONS CAREFULLY
BEFORE STARTING THE INSTALLATION.**
One person can perform the installation.



2


VEHICLE PREPARATION:

It is important that all areas of the cargo box of your truck are clean and free of debris prior to installing.

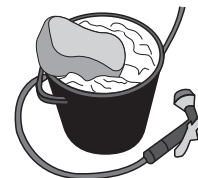

3


Remove the six screws from the verification plate using the screw driver Torx (T20) "Save the screws".

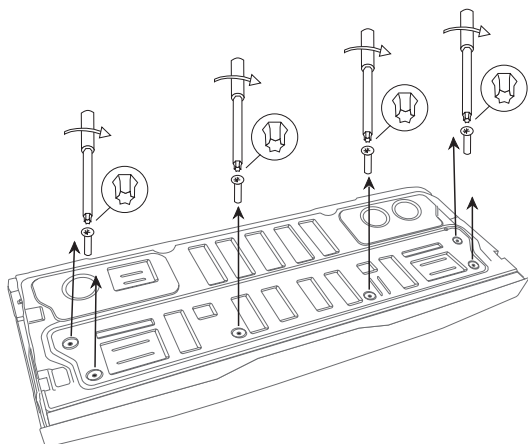

4

Install the plastic tailgate cover in this order:

1. Place one of the plastic spacers (D) on top of each of the six holes on the metal tailgate.
2. Then place the plastic tailgate piece on top of the six spacers.
3. Then place the six plastic washers (C) on top of the plastic tailgate piece at the six hole locations and put the six screws back in that you saved in step 3.

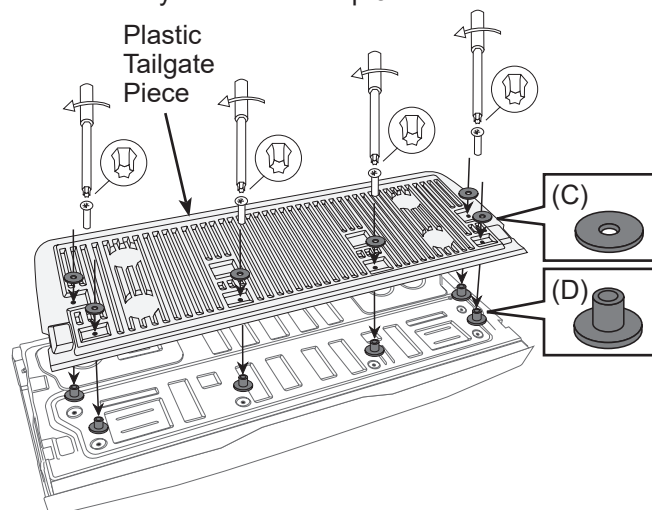


INSTALLATION SHEET

RUGGED LINER


2023+ F250/350




- 5** If your truck comes with the optional tie-downs (1,2,3,4). See step 6. In this step you must remove lower rear passenger tie-down (5) Only.

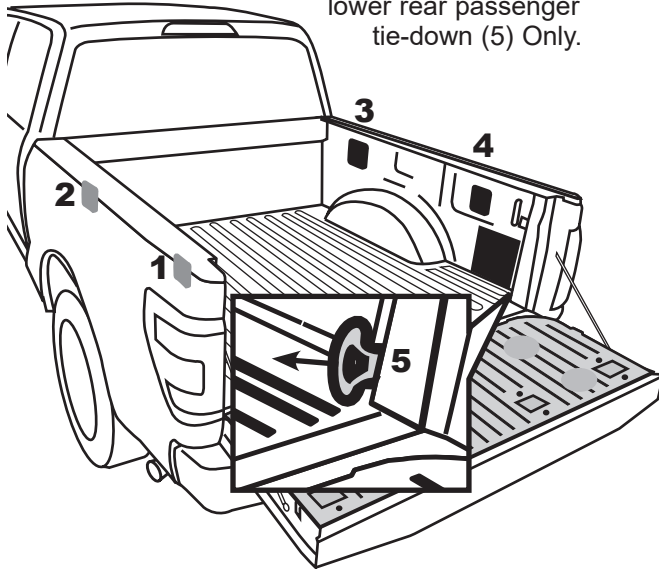

- 6** If your vehicle is equipped with the optional 110v power outlet (5), please cut out the scribe lines found on the back side of the bedliner.

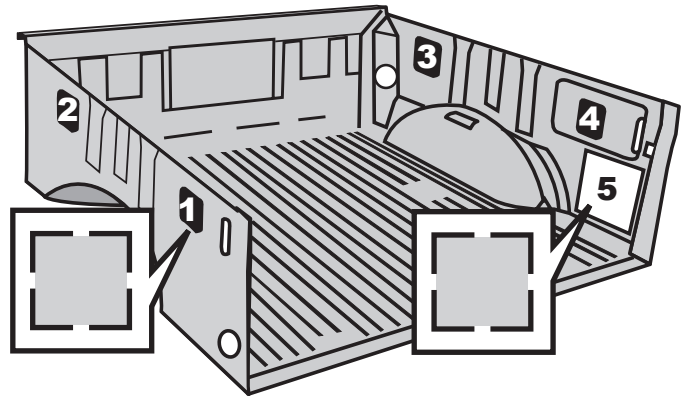

- 7** Drop the bedliner (A) straight down, then push the side walls under the truck side rails. Make sure the center locking column on each side are fully engaged under the rail lip.

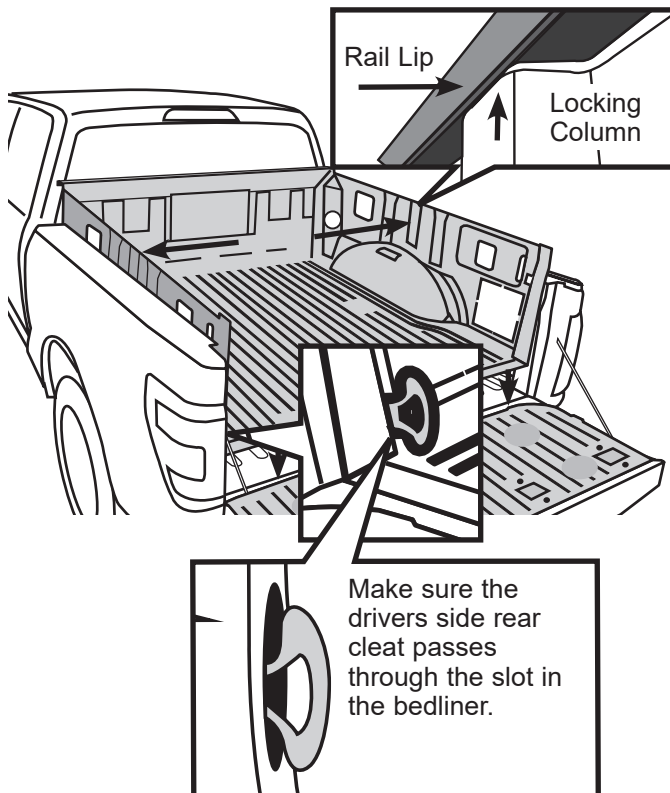

- 8** Reinstall the lower rear passenger tie-down that you removed in step 5.

