



RADIATOR RECOVERY CAN KIT

KIT CONSISTS OF:

<u>No.</u>	<u>Qty.</u>	<u>Part No.</u>	<u>Description</u>
1.	1	716672A	RECOVERY CAN
2.	4	716672B	1/4" x 3/8" SITE TUBE FITTINGS
3.	2	301612	CLAMPS
4.	5.5"	301613	HOSE

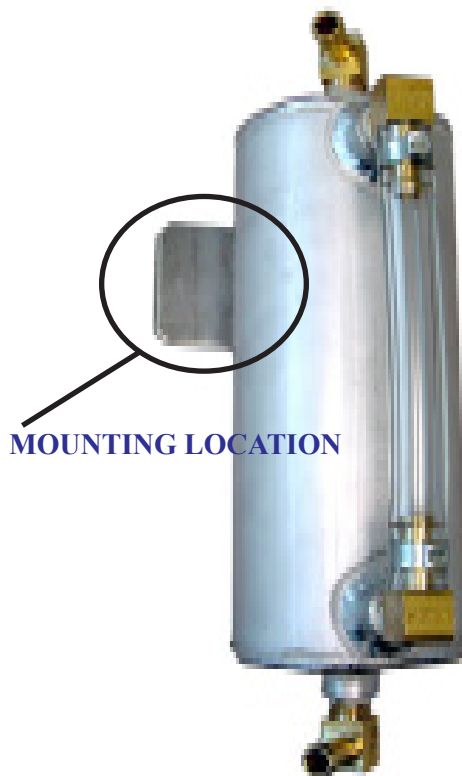

MOUNTING LOCATION

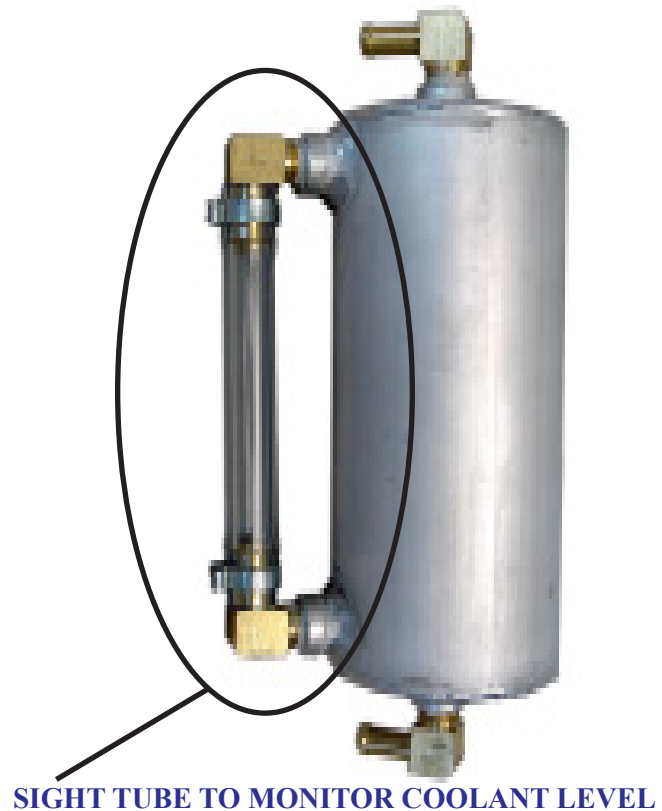

SIGHT TUBE TO MONITOR COOLANT LEVEL

When used correctly, this canister will accumulate any "overflow" from the radiator cap. This accumulated fluid will be pulled back into the radiator once the engine has cooled.

SPECIAL NOTE: The components packaged in this kit have been assembled and machined for specific type of conversions. Modifications to any of the components will void any possible warranty or return privileges. If you do not fully understand modifications or changes that will be required to complete your conversion, we strongly recommend that you contact our sales department for more information. This instruction sheet is only to be used for the assembly of Advance Adapter components. We recommend that a service manual pertaining to your vehicle be obtained for specific torque values, wiring diagrams and other related equipment. These manuals are normally available at automotive dealerships and parts stores.