


ROOF WINDOW

FR Fenêtre de toit • DE Dachfenster • DK Ovenlysvindue • NL Dakvenster • IT Finestra per tetti • HU Tetőtéri ablak • SK Strešné okná
PL Okno dachowe • RO Ferestre de mansarda • CZ Střešní okna • SI Strešno okno • HR Krovni prozor




See the installation video and pictures at: www.dakstra.com


01

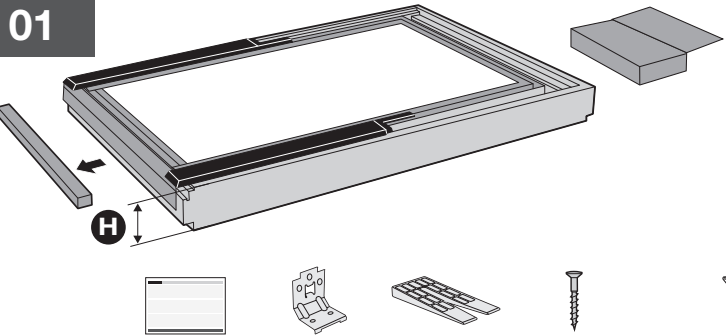

02

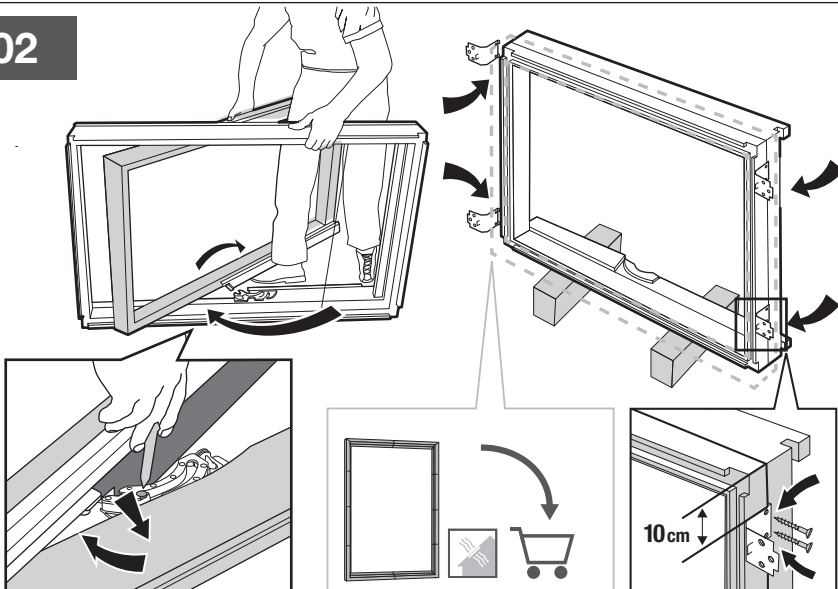

03a

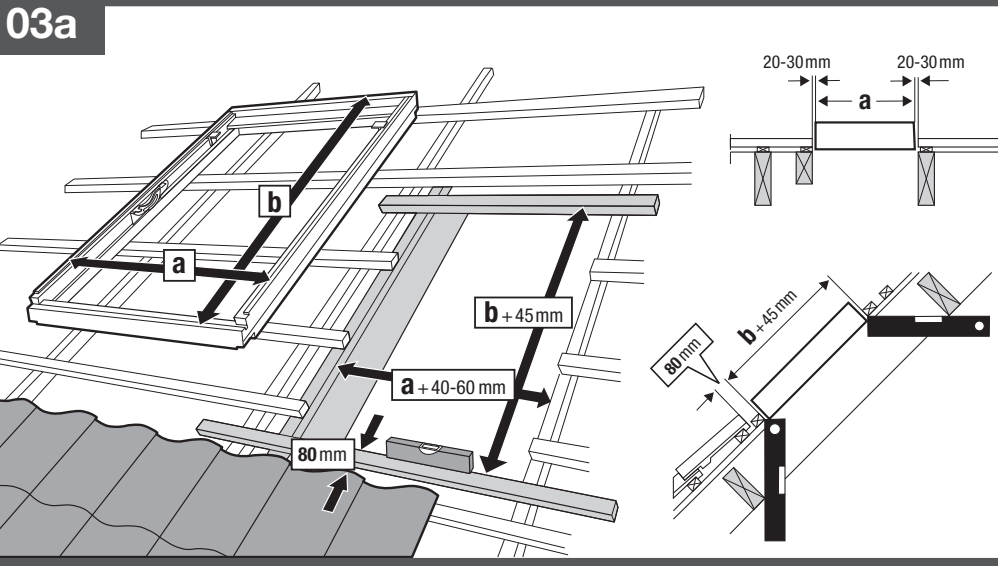


TFX
UFX




$H = 120 \text{ mm}$	PVC	x1	x4: C2A, C4A, F6A, M4A, M6A, x5: S6A x6: M8A	x1	x18: C2A, C4A, F6A, M4A, M6A, M8A, S6A	x10: C2A, C4A, F6A, M4A, M6A, x12: S6A x14: M8A	$\emptyset$
$H = 120 \text{ mm}$		x1	x4: C2A, C4A, F6A, M4A, M6A, x5: S6A, x6: M8A	x1	x18: C2A, C4A, F6A, M4A, M6A, x27: M8A, S6A	$\emptyset$	$\emptyset$
$H = 91 \text{ mm}$		x1	x4: C2A, C4A, F6A, M4A, M6A, x5: S6A x6: M8A	x1	x18: C2A, C4A, F6A, M4A, M6A, x27: M8A, S6A	$\emptyset$	x1


03b

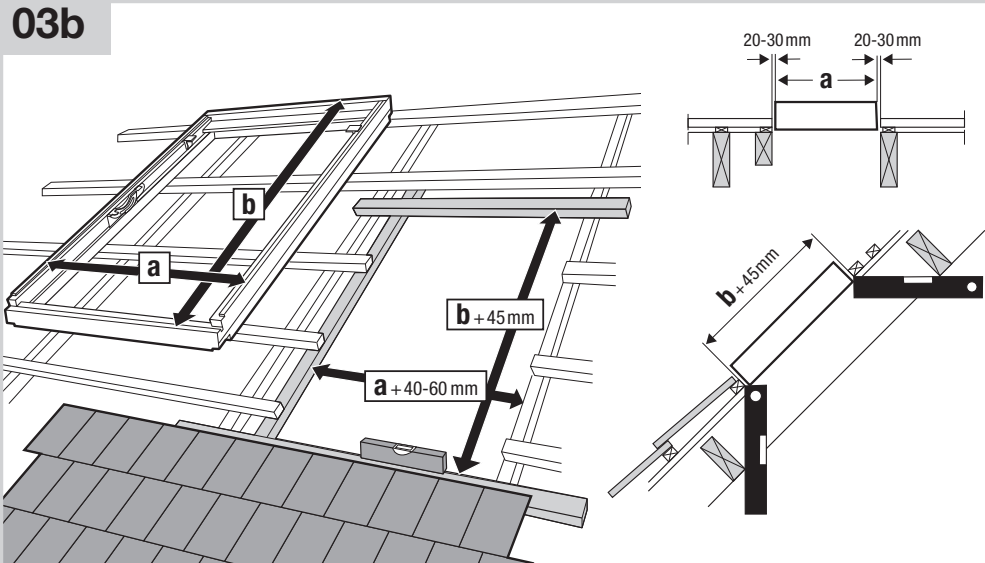



SFX




04

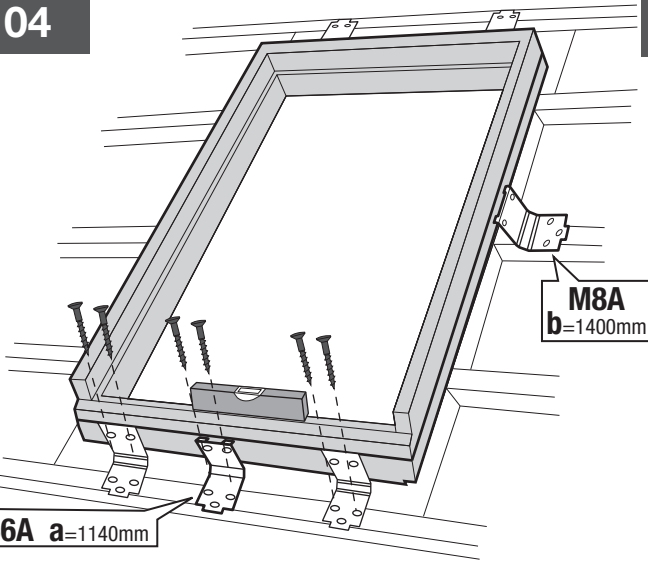



05/1

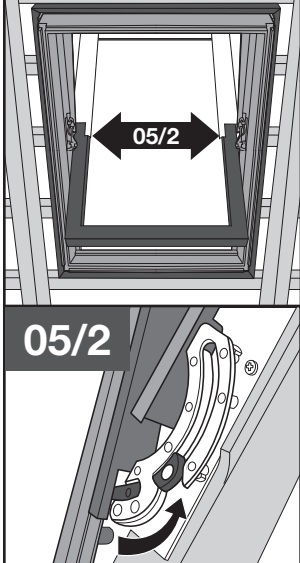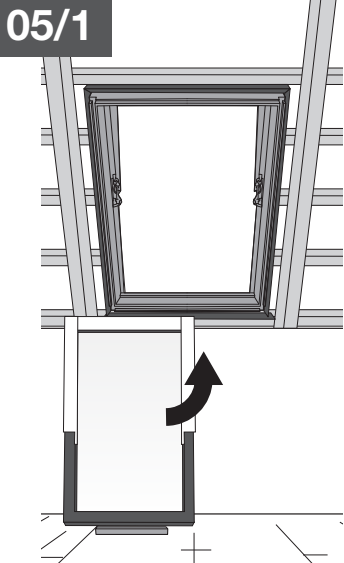


06

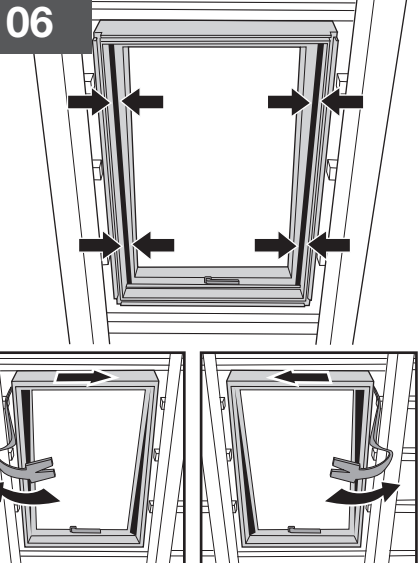


07

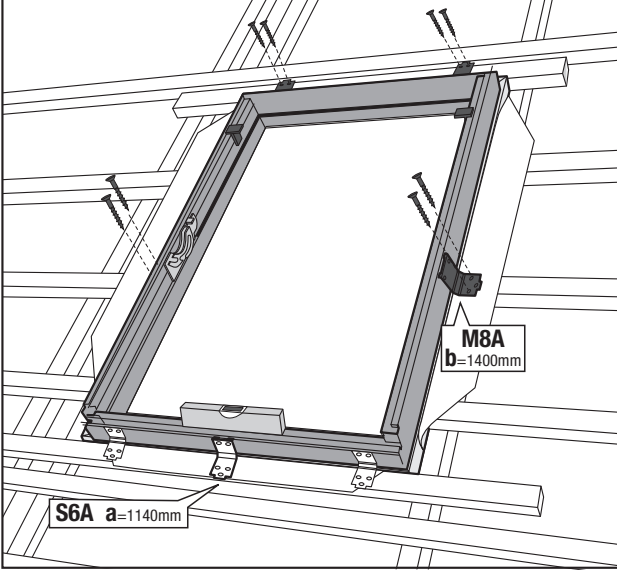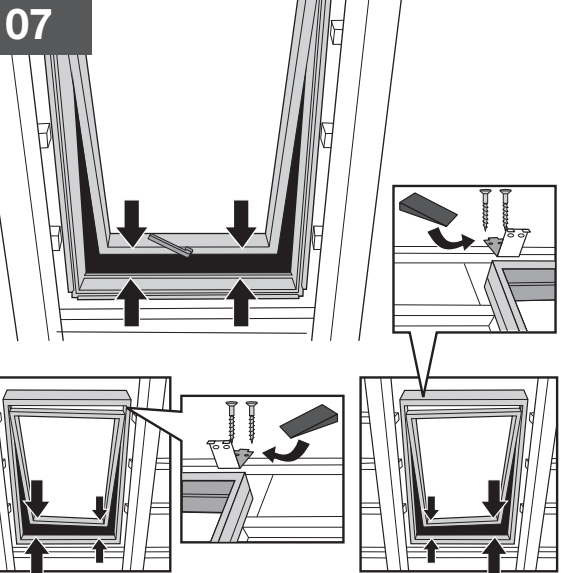


08

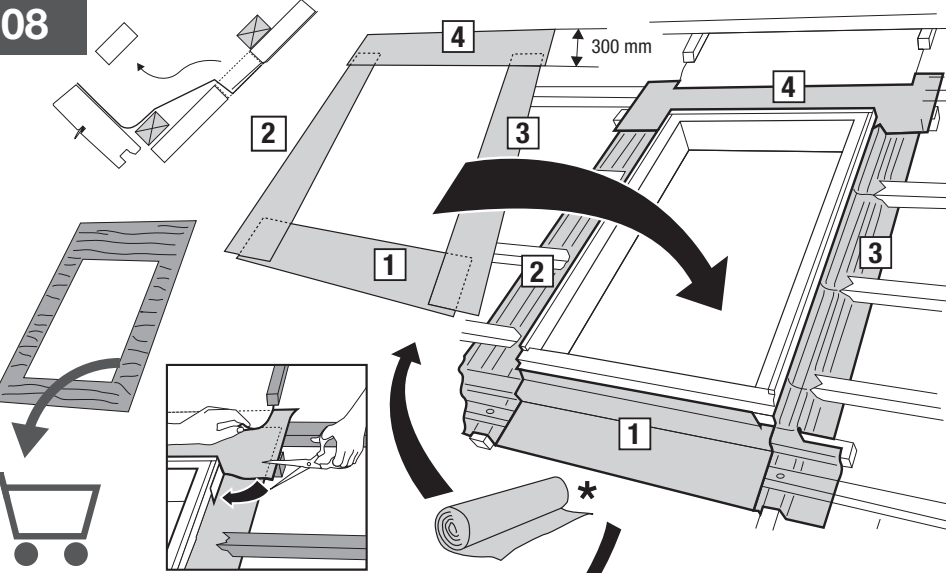

09

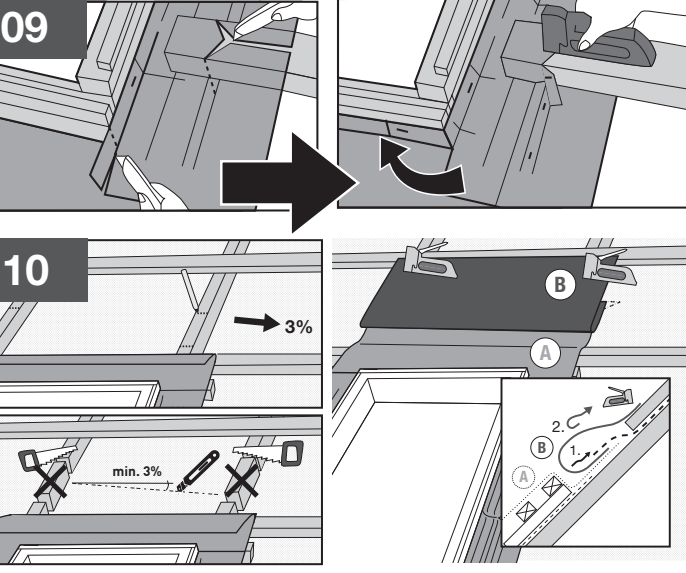

10

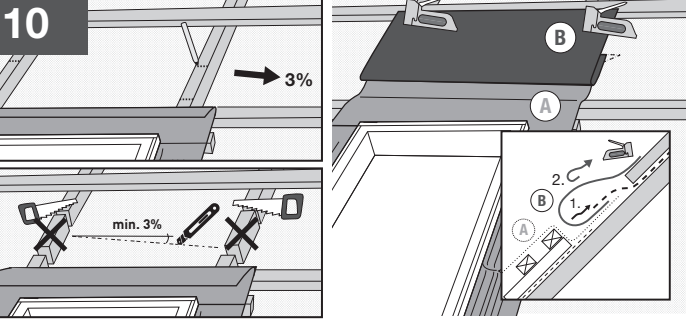


* EN: Roofing underlay not included • HR: Krovna folija nije u kutiji • CZ: Střešní folie není součástí dodávky. • NL: Waterkerende manchet / dampfolie wordt niet meegeleverd • FR: Film sous-toiture non inclus • DE: Dachfolie ist nicht in der Verpackung enthalten
HU: A doboz nem tartalmazza a tetőfóliát • IT: Foglio impermeabile non incluso • PL: Folia wstępnego krycia nie jest załączona • RO: Membrana de acoperis nu este inclusa • SK: Strešná fólia nie je súčasťou balenia • ES: Lámina impermeable no incluida

www.dakstra.com




TFX, UFX


11a

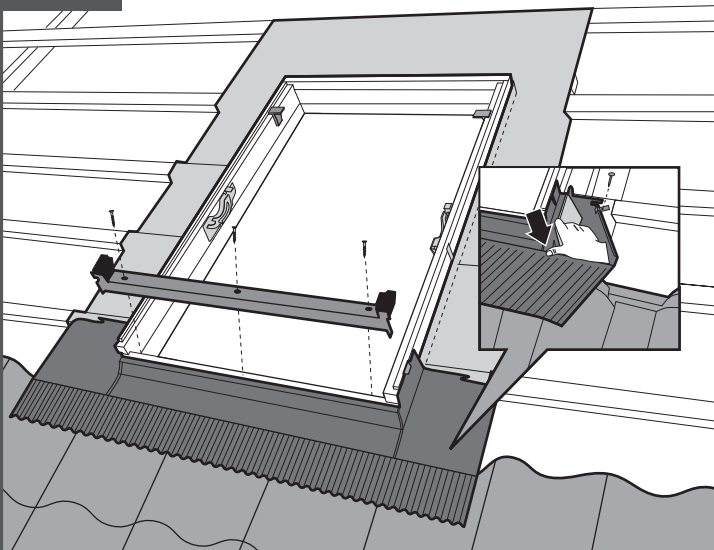


12a

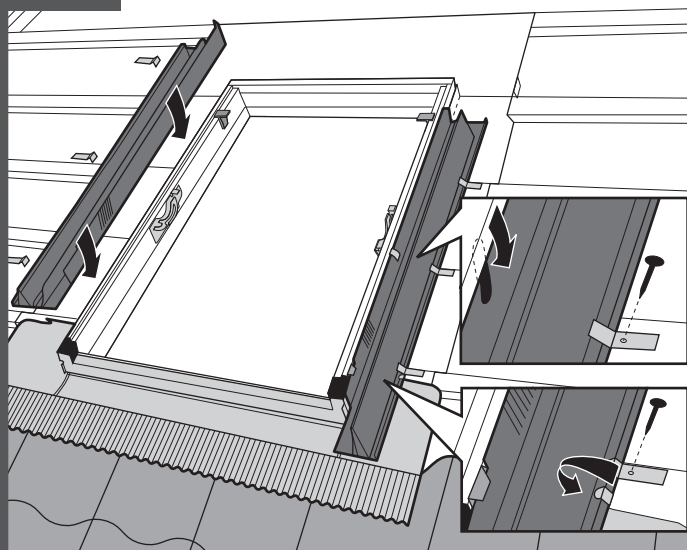


13a

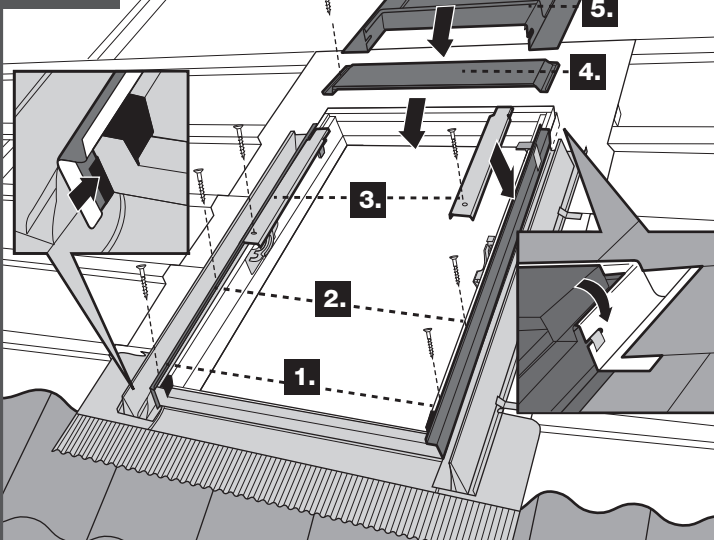


14a

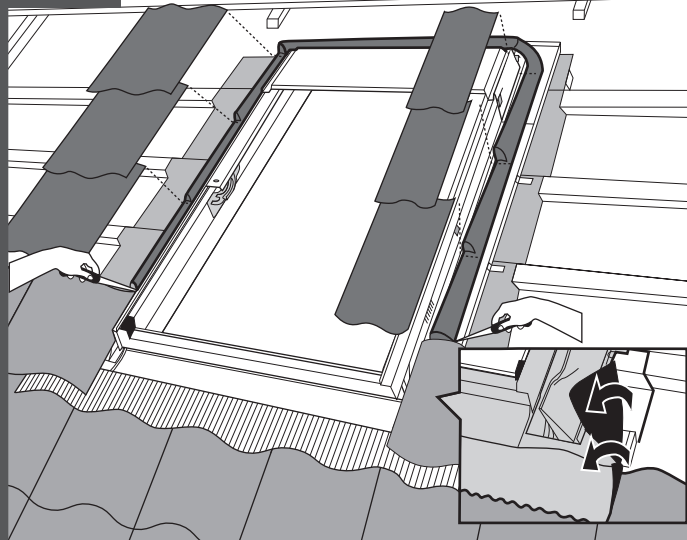

15a

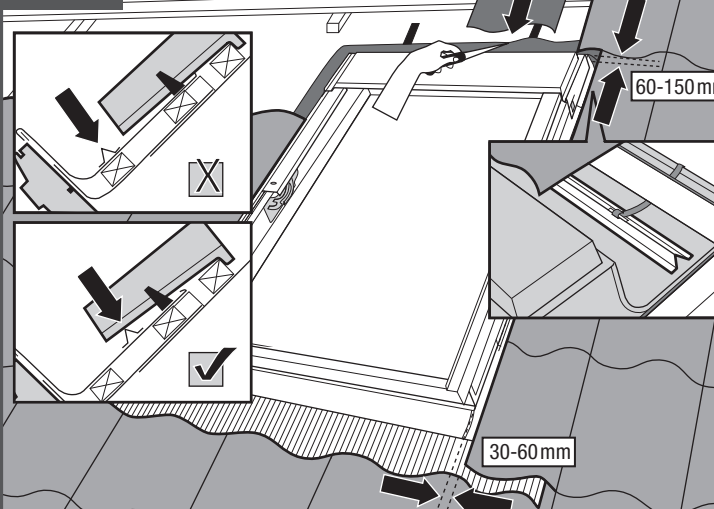


16a

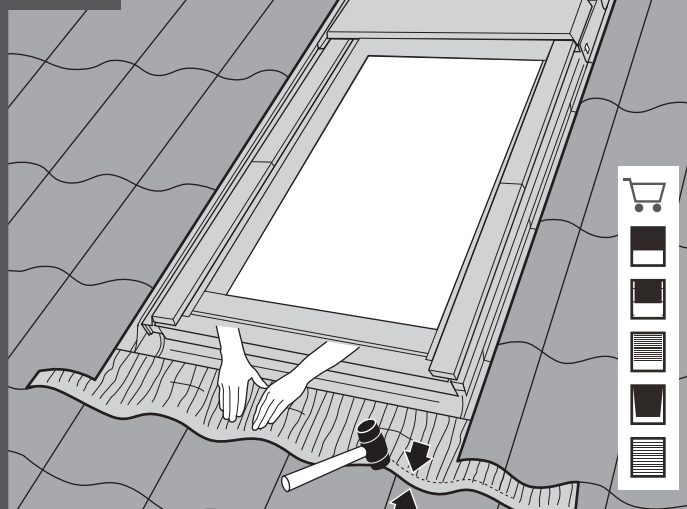


SFX


11b

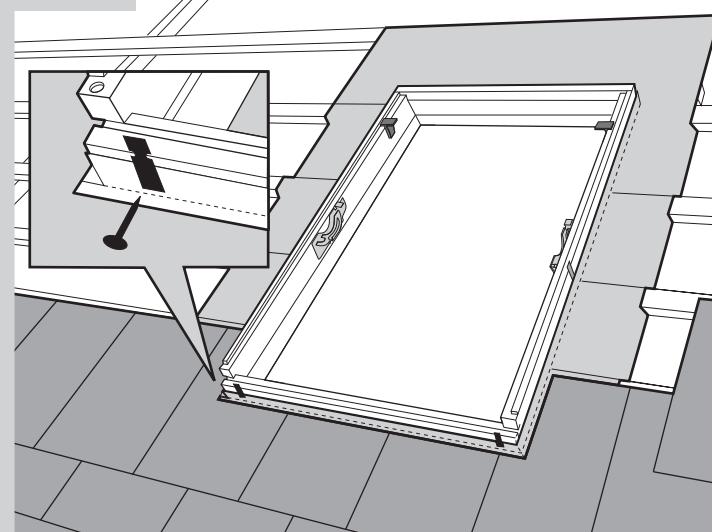


12b

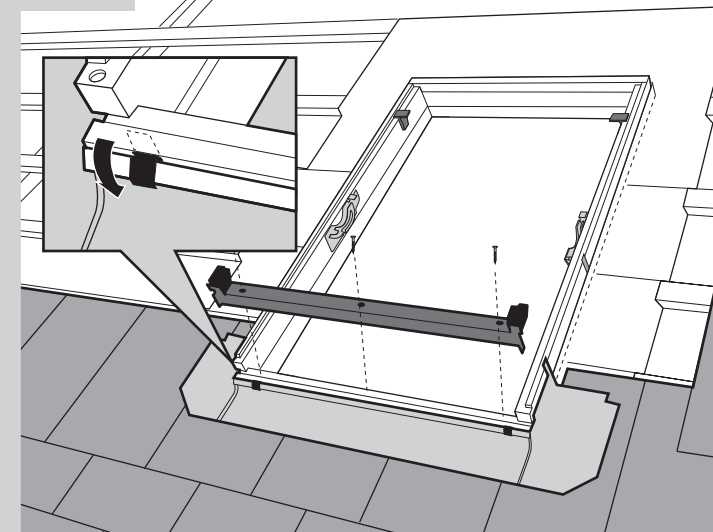


13b

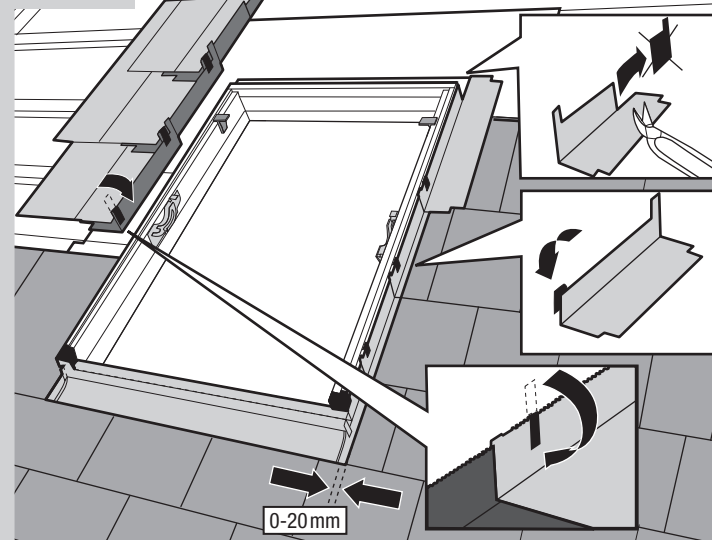

14b

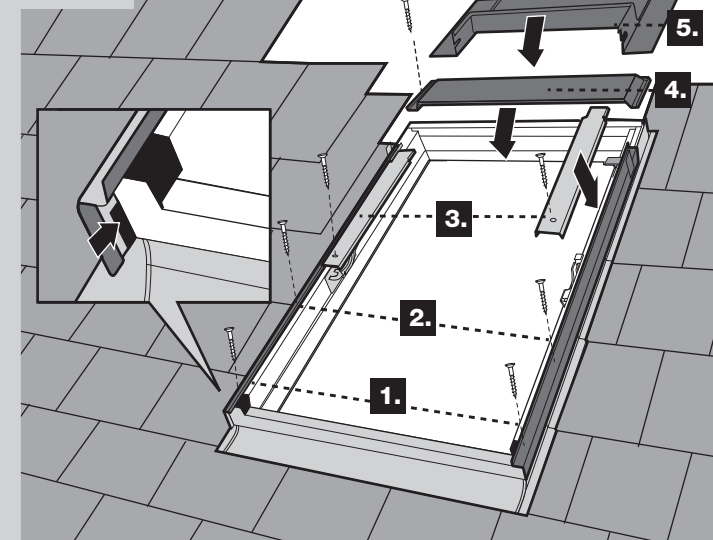

15b

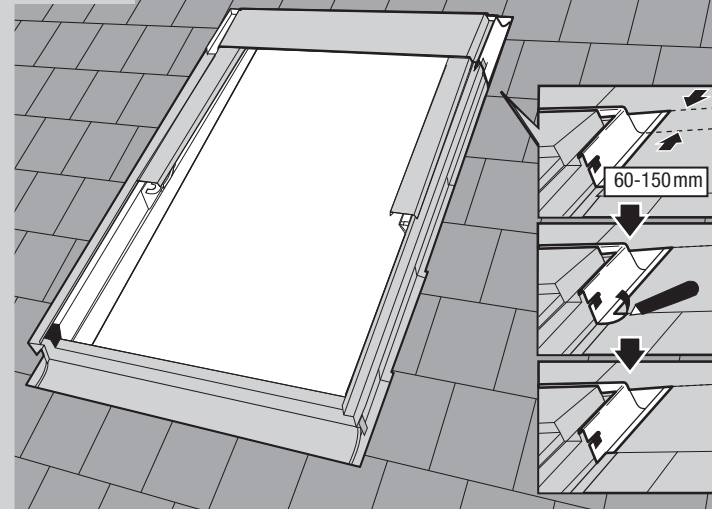

16b

