



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




VW TOURAN (2002-2006)




VW TOURAN (2006-2010)

TOUR 1 BEZ KL

SOLARRIDE Zaslónki do VW/Volkswagen Touran (2003-2010) BEZ KŁAPY Żłg

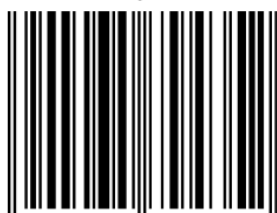


5 904035 794352 >

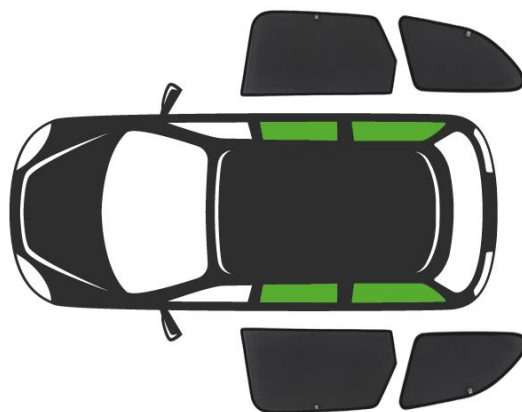

6 x



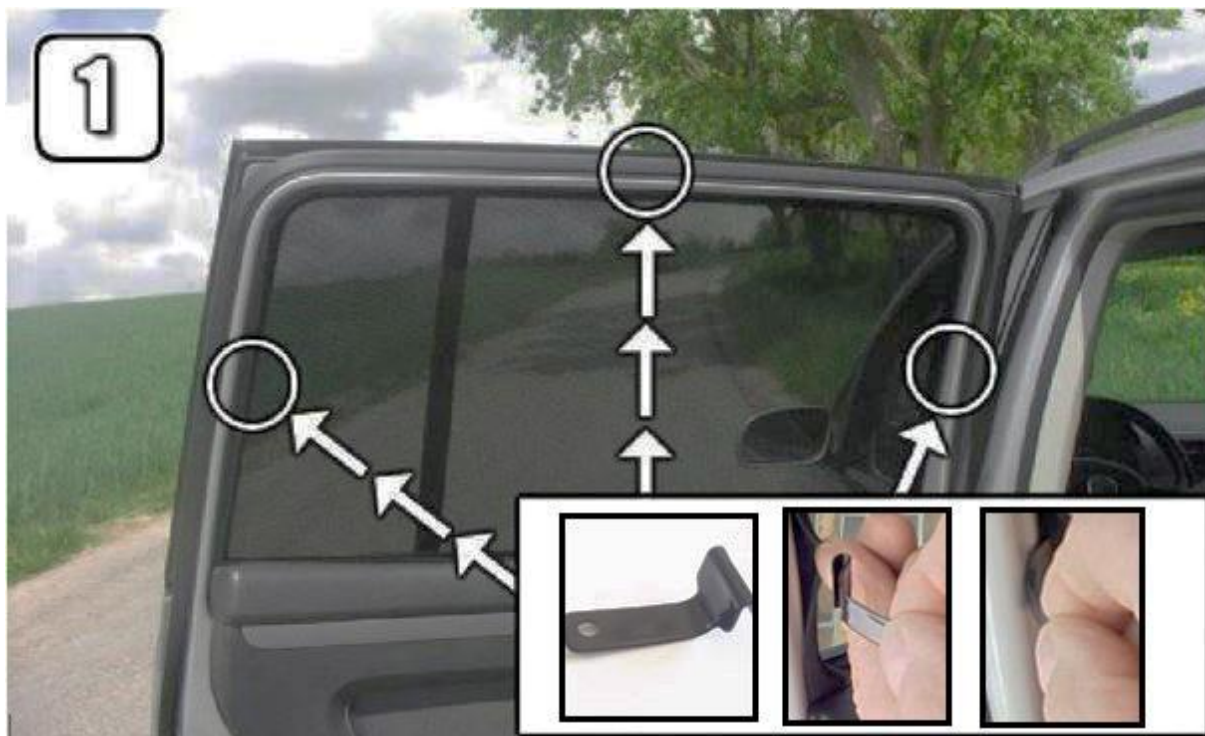

- Zastlonki przestrzeni bagażowej instaluje się na wcisk.
- Car shades of the luggage compartment are installed press-fit without mounting clips.
- Stínítka zavazadlového prostoru se instalují lisováním bez montážních klipsů.
- Der Sonnenschutz des Gepäckraums wird durch Einpressen ohne Befestigungsklammern montiert.
- Le pare soleil du compartiment à bagages est installé par pression sans clips de montage.
- As cortinas laterais da bagageira são montadas por pressão sem cliques de fixação.
- Las cortinillas laterales del maletero se montan a presión, sin clips de fijación.
- Le tendine laterali del bagagliaio sono montate a pressione senza clip di fissaggio.
- Bočne zavjese prtljažnika su presovane bez kopči za pričvršćivanje.
- Perdelele laterale ale compartimentului pentru bagaje sunt montate prin presare, fără cleme de fixare.
- Bočné clony batožinového priestoru sa montujú lisovaním bez upevňovacích svoriek.

