



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Opel Zafira B (2005-2014)

ZAF B BEZ KL

SOLARRIDE, Sudebki / reikiši / odlovy proizvoditelstva SolarRide do Opel Zafira B (2005-2014) BEZ KLUPY 2kg



5 904035 795441 >

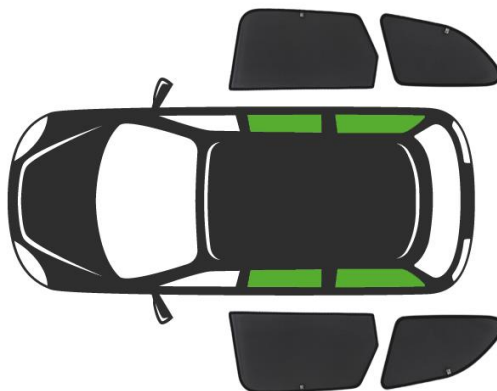

4 x



2 x







Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

