



1. Fit straps with screws and nuts on each pedal pad. Then place the pedal pad in the right position to fold the straps around the original pedal.

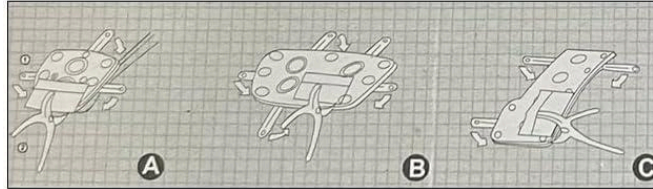

2. Now fold the straps tight around the original pedals. Use the pliers and rags to fix the straps real tight so they can not move anymore.

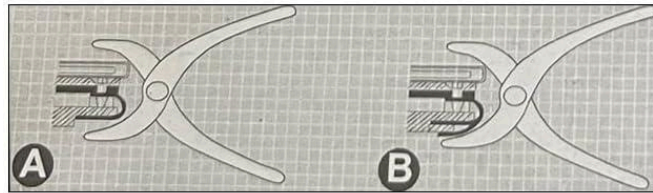

3. Check if straps can be folded around the pedals.

Installation

