



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Peugeot 3008 II (2016->>)

3008 II KPL

SOLARRIDE Zastlonki, oslony przeciwsloneczne do PEUGEOT 3008 II (2016-) KPL 3kg



5 904035 792266 >

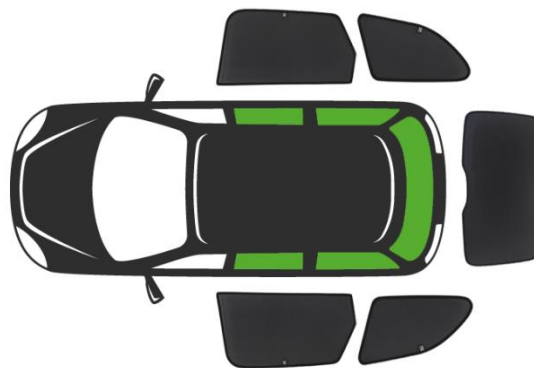


4 x



4 x



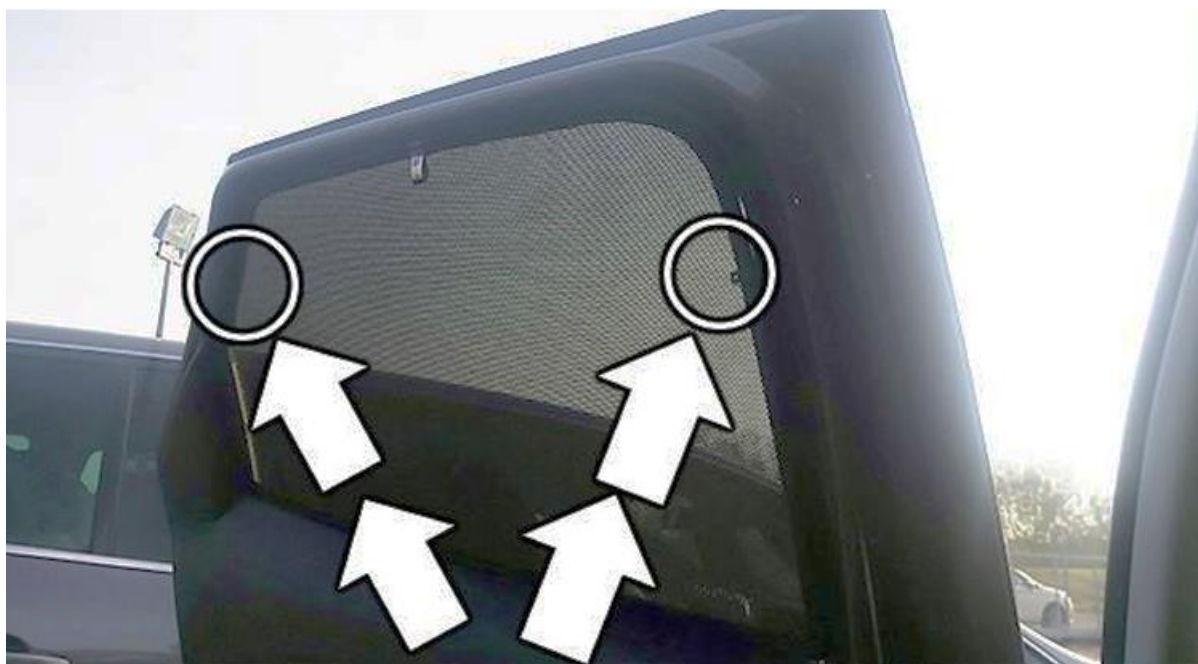



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

