



VW Volkswagen Up! 5dr 2011-2023

UP DR




Škoda Citigo 2011-2019

CITIGO DR



SEAT Mii 2011-2019

MII DR

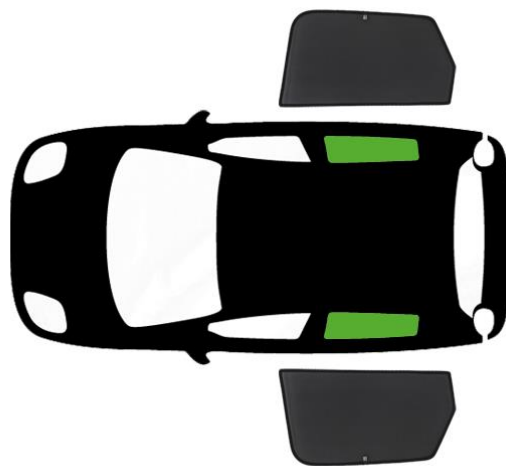




Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

SOLARRIDE Zaslónki do VW Volkswagen Upl 5dr (od 2011) DRZM 1kg

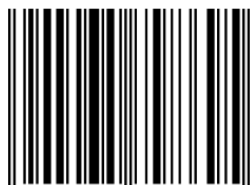

5 904035 798695 >

SOLARRIDE Zaslónki do SKODA CITYGO (2011-2019) DR 1kg



5 904035 798442 >

SOLARRIDE Zaslónki do SEAT Mi 5dr (2011-2021) DRZM 1kg



5 904035 798718 >

