



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



Citroën C4 Picasso II (2013-2019)


C4 PICASSO II

KPL

SOLARRIDE Żadonki, odsony przeciwsłoneczne do Citroën C4 Picasso II 2013-2019 KPL 3kg



5 904035 792082 >

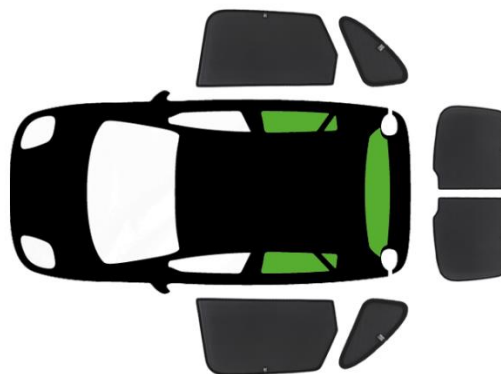


4 x



4 x



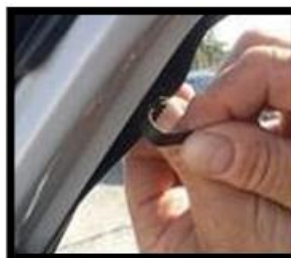



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

