



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




**Toyota Corolla 11 XI Sedan (E160)  
(2013-2019)**

**COR11S DR**

SOLARRIDE Zakoník, odory przeciwśoneczne do Toyota Corolla 11 XI (E160) (2013-2019) DR 1lg



5 904035 797261 >

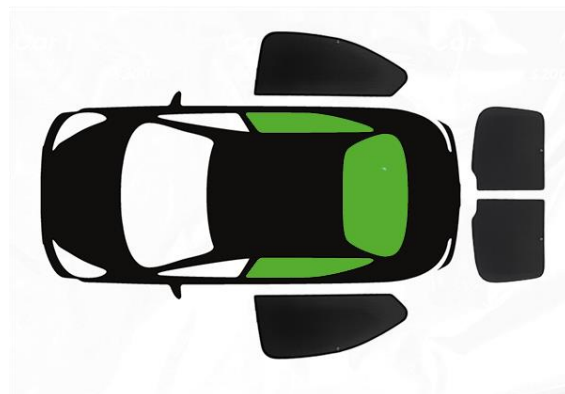

**6 x**





