



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




BMW X3 F25 (2010-2017)

X3 F25 DR

SOLARRIDE Zastlonki do BMW X3 F25 (2010-2017) DRZWI 1kg

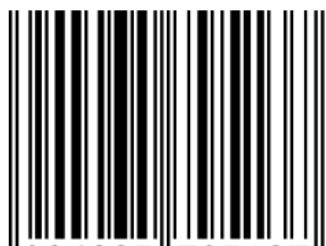

5 904035 795137 >

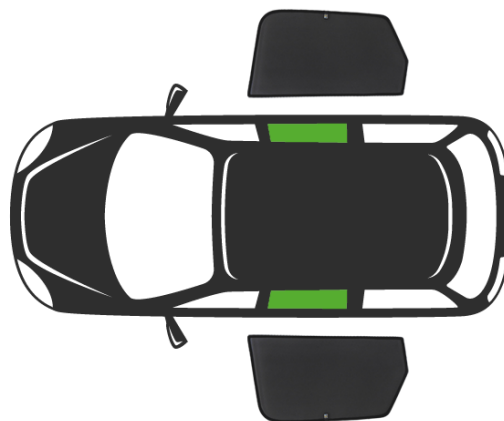

2 x



4 x

