



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



VW Volkswagen Golf 5 V Variant (2003-2009)

G5K KPL



VW Volkswagen Golf 6 VI Variant (2008-2014)

G6K KPL

SOLARRIDE Zakaznik: VW Volkswagen Golf 5 V Variant (2003-2009) G5K KPL 3kg




5 904035 790712 >

SOLARRIDE Zakaznik: Volkswagen Golf 6 VI Variant (2008-2014) G6K KPL 3kg



5 904035 790705 >

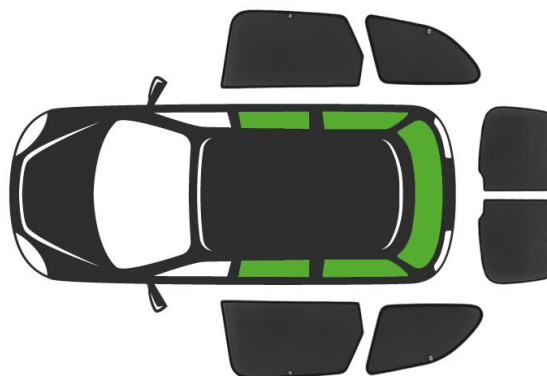

4 x



4 x





