



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




BMW X5 E70 (2006-2013)

X5 E70 DR


SOLARRIDE: zaslonki / ridele / colony przeciwsłoneczne SolarRide do BMW X5 E70 (2006-2013) DR2W 1lg

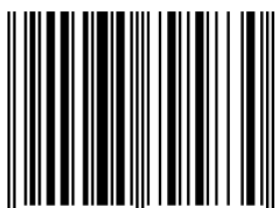

5 904035 795830 >


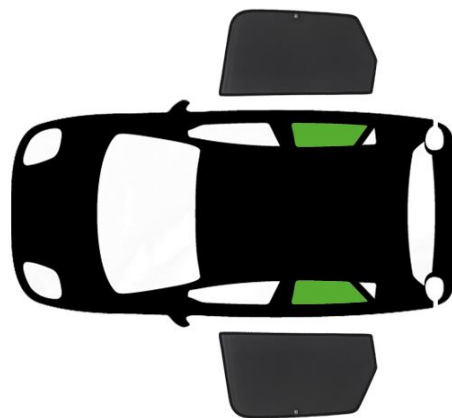


4 x

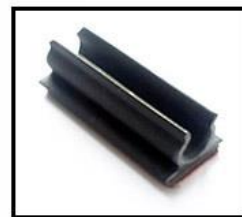

2 x



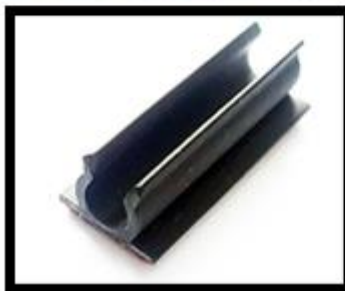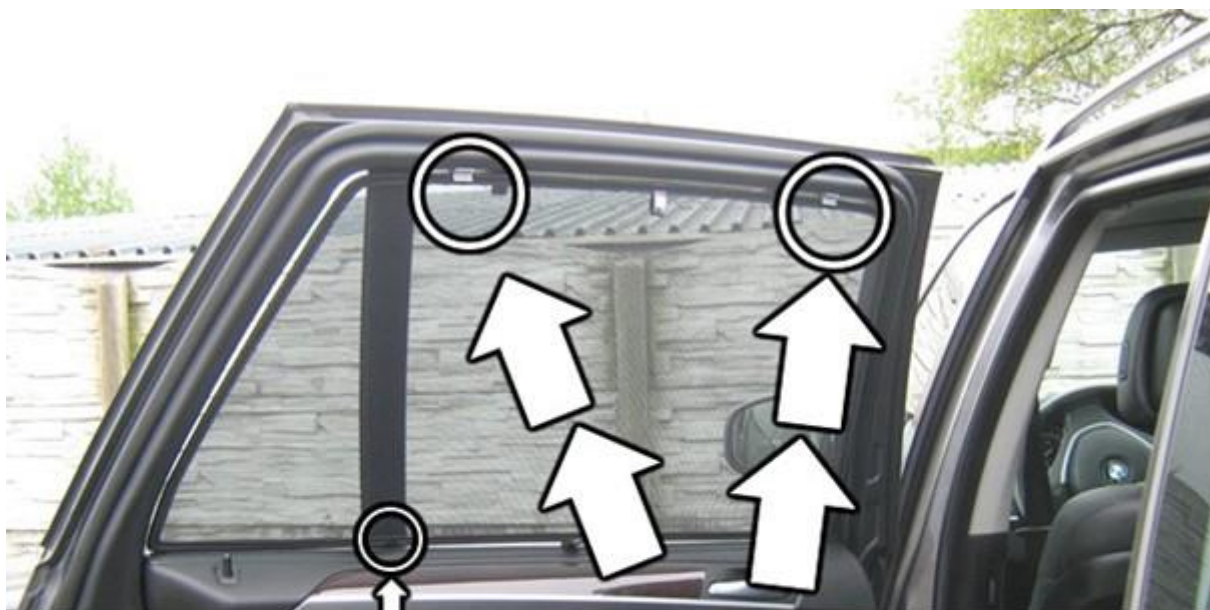

**DO NOT TOUCH 24h
NO TOCAR 24h
NIE DOTYKAĆ 24h**