




INSTRUKCJA

PRZYKLEJANIA POSZERZEŃ GUMOWYCH JEEP WRANGLER JL

Temperatura otoczenia i klejonych elementów powinna wynosić ok. 20C°.

Ilość osób potrzebnych do montażu: 2

Czas montażu: 90 minut

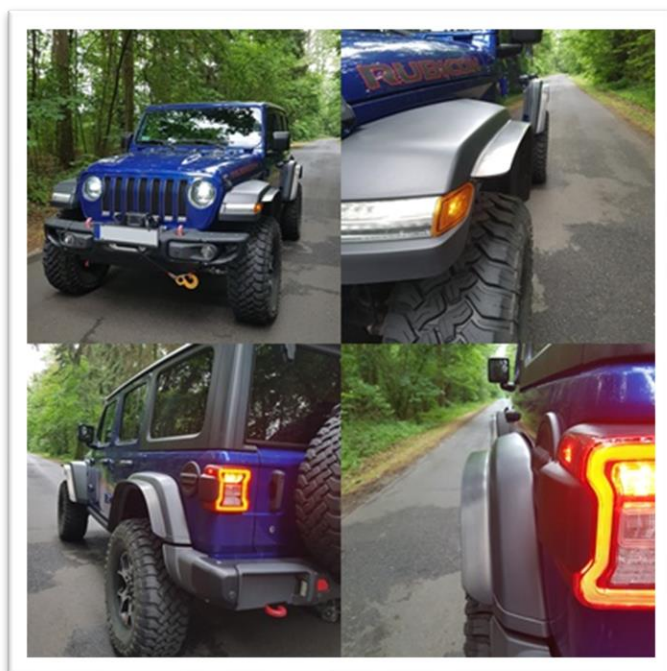

1. Umyj błotniki wodą z detergentem do czysta, i odczekaj aż wyschną.

2. Za pomocą cleanera (w zestawie) i bawełnianej szmatki, wyczyść powierzchnię błotnika, do której będzie przyklejone poszerzenie gumowe (czyść tylko klejoną powierzchnia) i odczekaj aż cleaner odparuje.

3. Za pomocą wełnianego aplikatora (w zestawie 2 szt.) nanieś cienką warstwę primera (w zestawie) na powierzchnię błotnika w miejscu przyszłego klejenia, i odczekaj do wyschnięcia.

4. Przyklej poszerzenie etapami, zaczynając od końca. Zalecamy odrywanie taśmy ochronnej co 5-10cm. Po przyłożeniu poszerzenia nie ma możliwości poprawki, nie da się oderwać bez uszkodzania.

Przyklejaj poszerzenia rozważnie i z dużą uwagą.

Po przyklejeniu dociśnij mocno klejone powierzchnie.

Przez 24h nie zalecamy polewać wodą klejonych elementów.

www.kalgum.pl




INSTRUCTIONS

FOR STICKING RUBBER EXPANSION JEEP WRANGLER JL

The temp. of the surroundings and the glued elements should be approximately 20C°.

Number of people needed for assembly: 2

Assembly time: 90 minutes

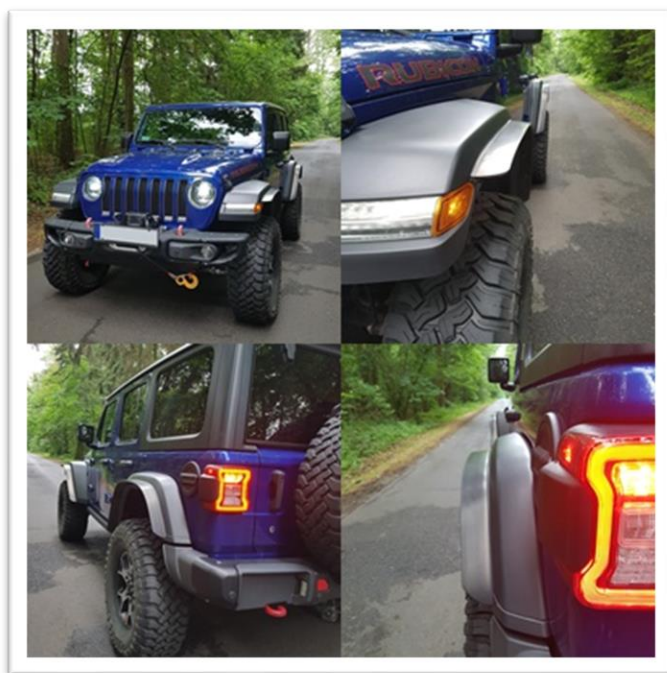

1. Clean mudguards with water and detergent to clean, wait until they dry.

2. With the help of a cleaner (included in the set) and cotton cloth, clean the surface of the mudguard, to which the rubber fenders will be glued (clean only the glued surface) and wait until the cleaner evaporates.

3. Use a woolen applicator (2 pcs in the set) apply a thin layer of primer (included) to the surface at mudguard the place of future gluing, and wait to dry.

4. Glue the widening with stages, starting from the end. We recommend tearing the protective tape every 5-10cm. After applying the rubber fender, it is not possible to correction, it is impossible to tear without damaging.

Stick the widening carefully and with great attention.

After sticking, press the glued surfaces.

We do not recommend pouring water over the glued elements for 24 hours.

www.kalgum.pl