



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Skoda Superb III Kombi (2015-2023)

SUP3K DR

SOLARRIDE Zasklonki, osłony przeciwsłoneczne Skoda Superb 3 III Kombi DRZWI 1kg



5 904035 796363 >

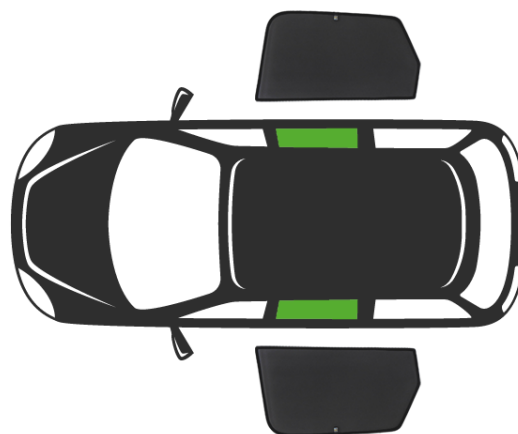

6 x



