


8

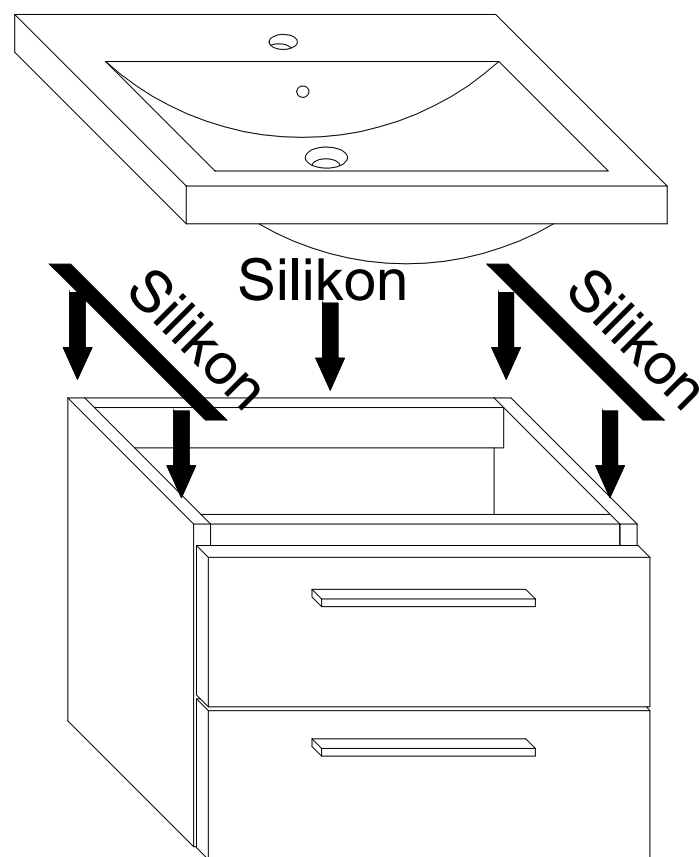


DE:Silikon auftragen, nicht im Bausatz
enthalten

EN:Apply silicone, not included in the kit







PL:Nałożyć silikon, nie jest zawarty
w zestawie



paplinskimoebel®

GIRONA80

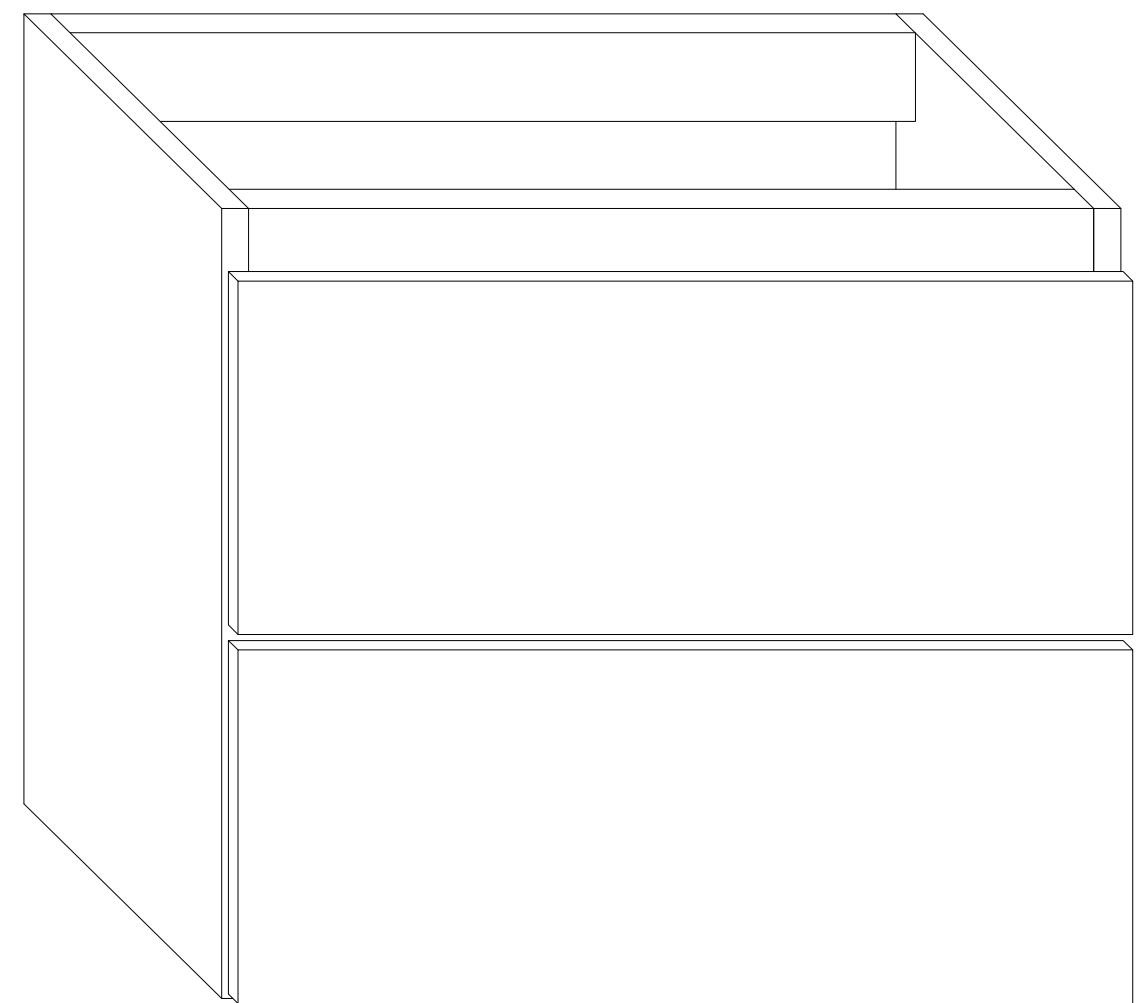

PAPLINSKIMOEBEL

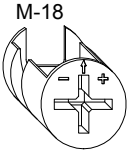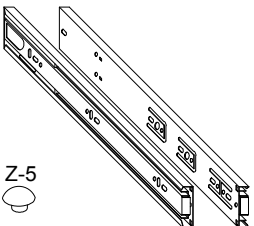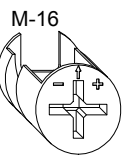										
M-18 x8	x20	x28	x4	x20	x10	x4	x4	x2	x2	M-16 x12
1 (x1) 515 x 369mm	6 (x1) 704 x 349mm	11(x1) 350 x 112mm								
2 (x1) 515 x 369mm	7 (x1) 704 x 349mm	12(x1) 704 x 112mm								
3 (x1) 762 x 369mm	8 (x1) 350 x 130mm	13(x1) 110 x 102mm								
4 (x2) 762 x 60mm	9 (x1) 350 x 130mm	14(x2) 281 x 112mm								
5 (x2) 235 x 793mm	10(x1) 350 x 112mm									

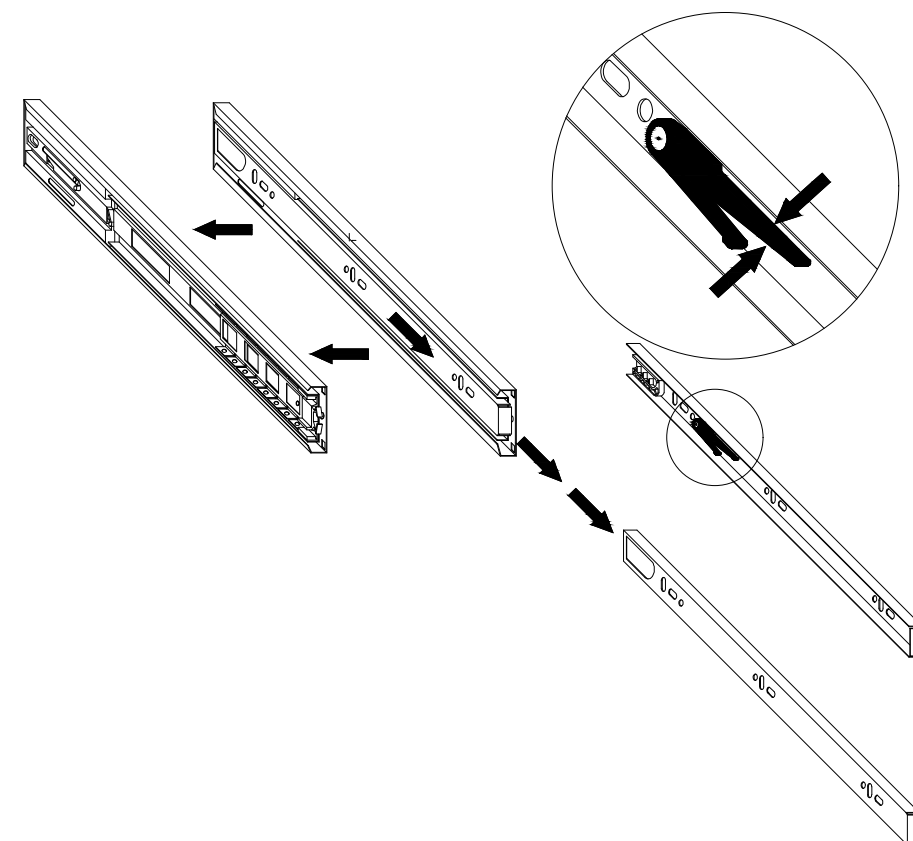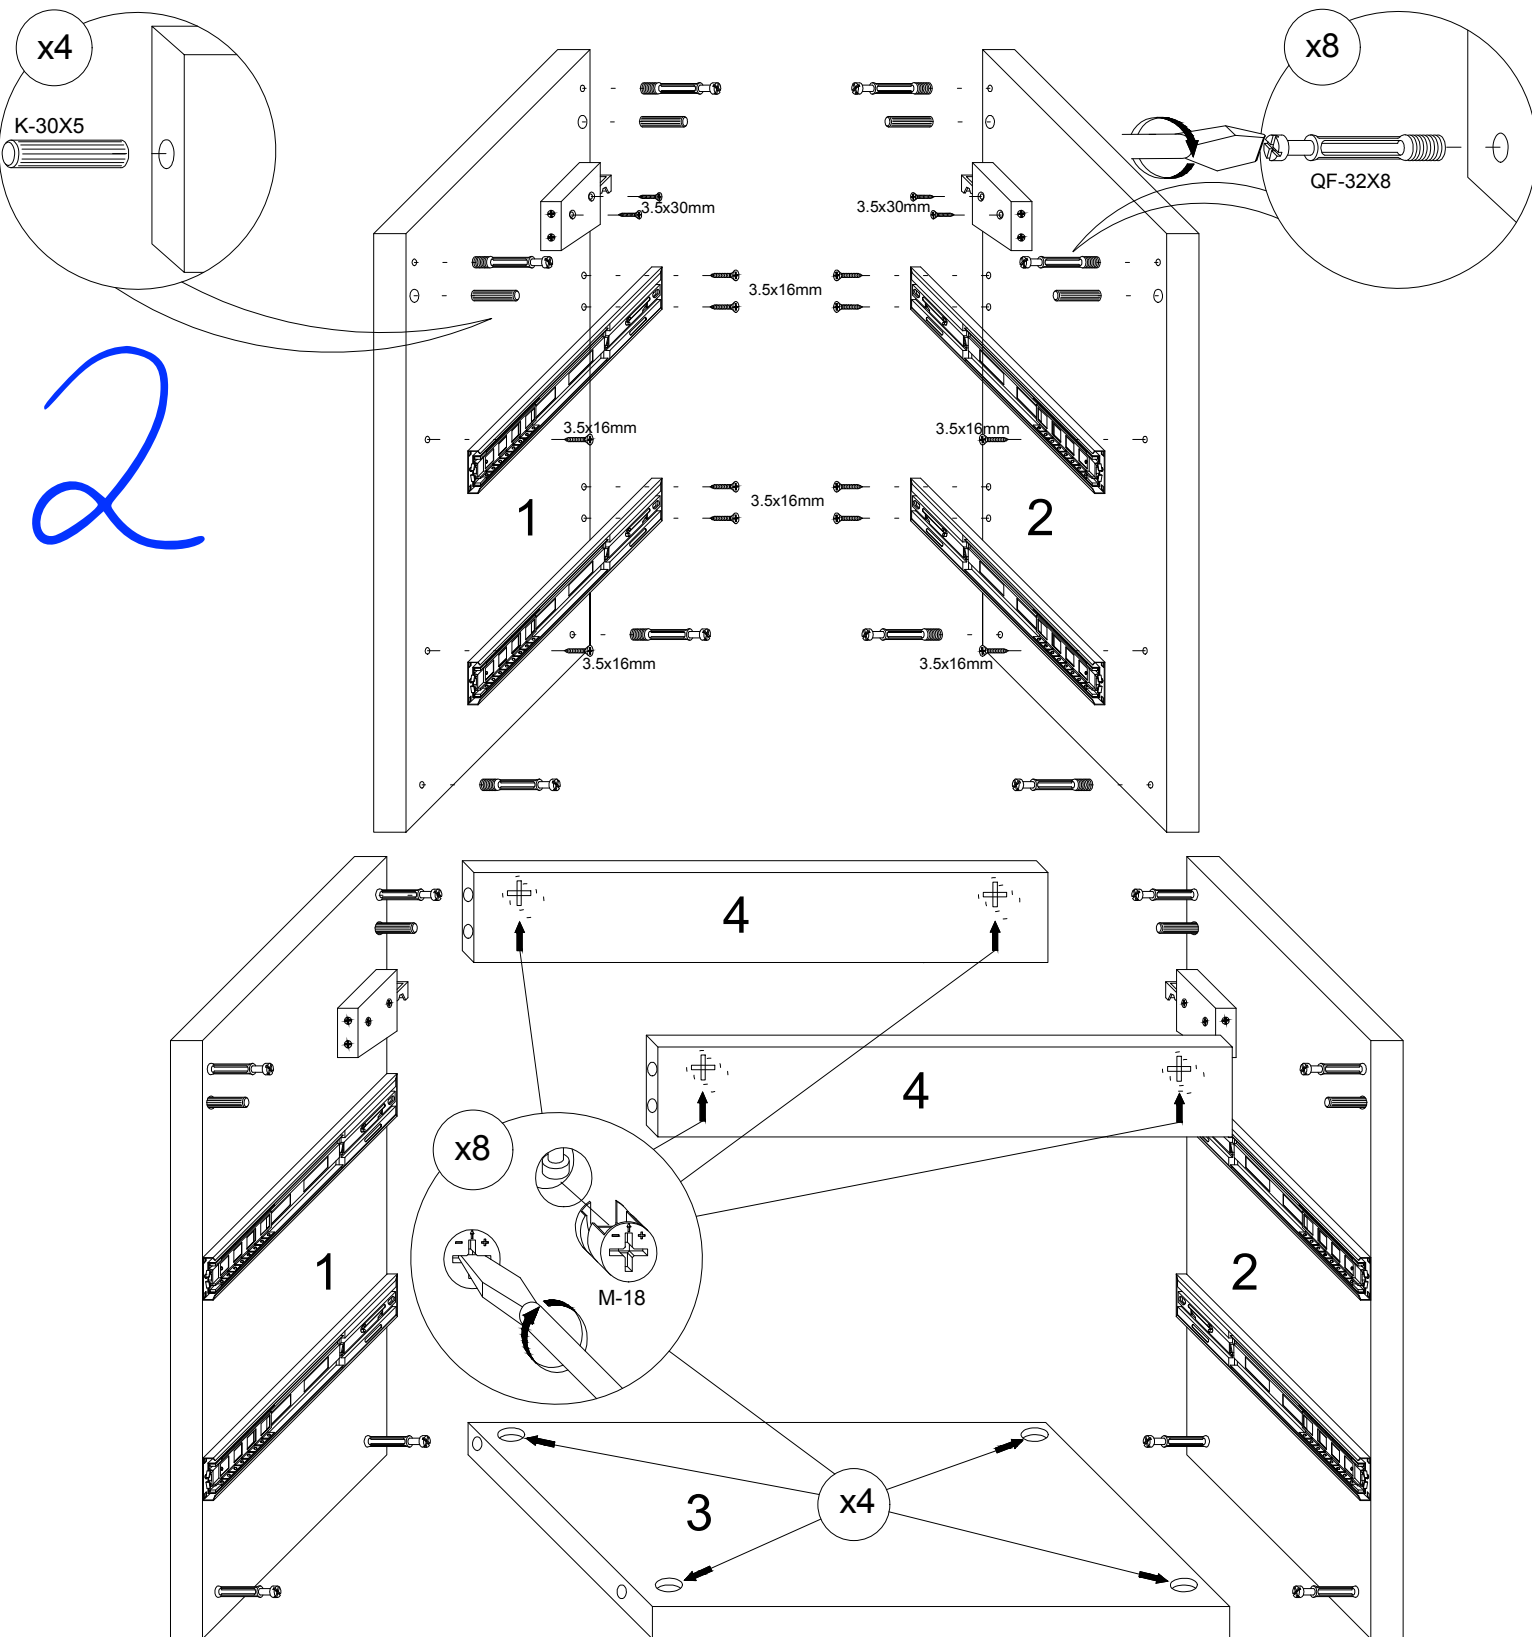

DE:Drücken Sie beim Ausfahren mit dem Finger die Verriegelungslasche des Mechanismus nach oben oder unten.


EN:When pulling out, press the locking tongue of the mechanism down or up with your finger.

PL:Przy wysuwaniu naciskać palcem w dół lub w górę języczek blokady mechanizmu




DE:Schieben Sie die Schublade in die Korpusschienen, indem Sie sie gleichmäßig von beiden Seiten einschieben und darauf achten, dass beide Schienen in ihre Nuten einrasten.

EN:Slide the drawer into the cabinet body slides, pushing them in evenly from both sides make sure that both slides engage in their grooves

PL:Wsunąć szufladę w prowadnice korpusu szafki, wsuwając je równomiernie z obu stron upewnić się, że obie prowadnice wchodzą w swoje rowki

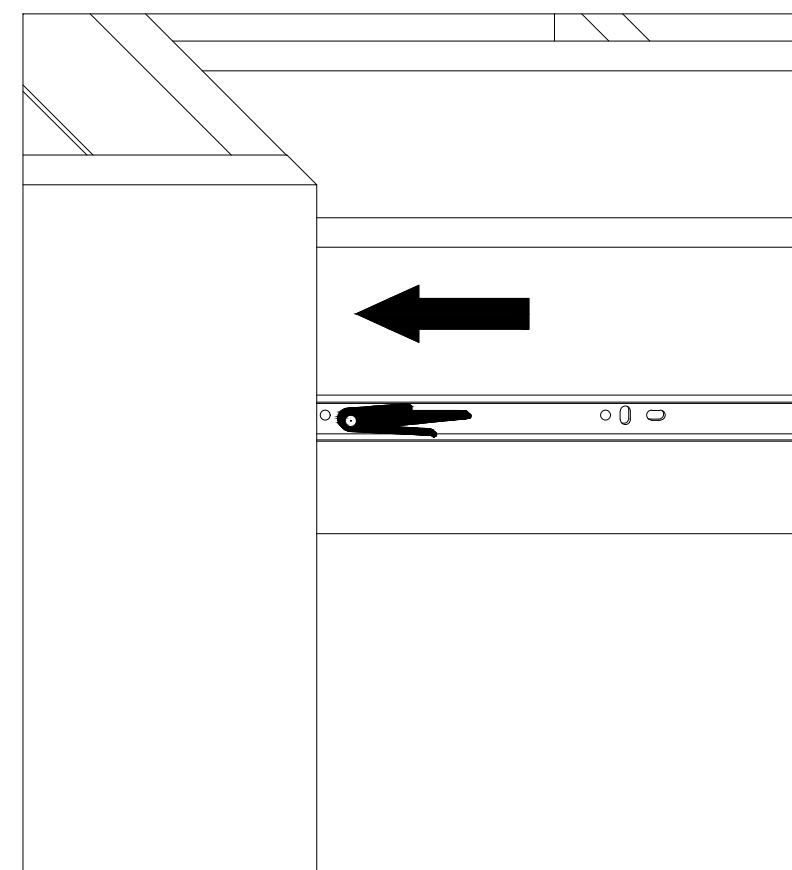

6

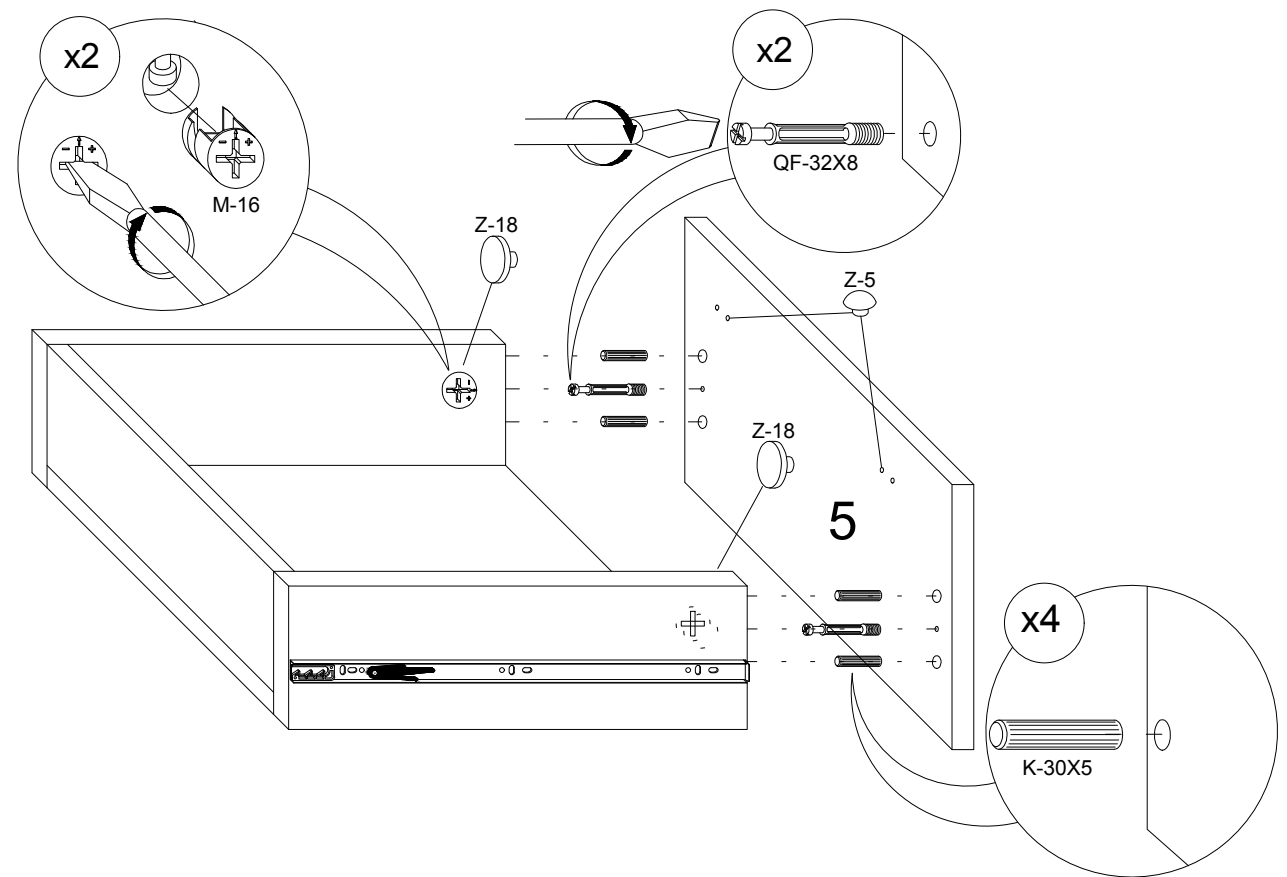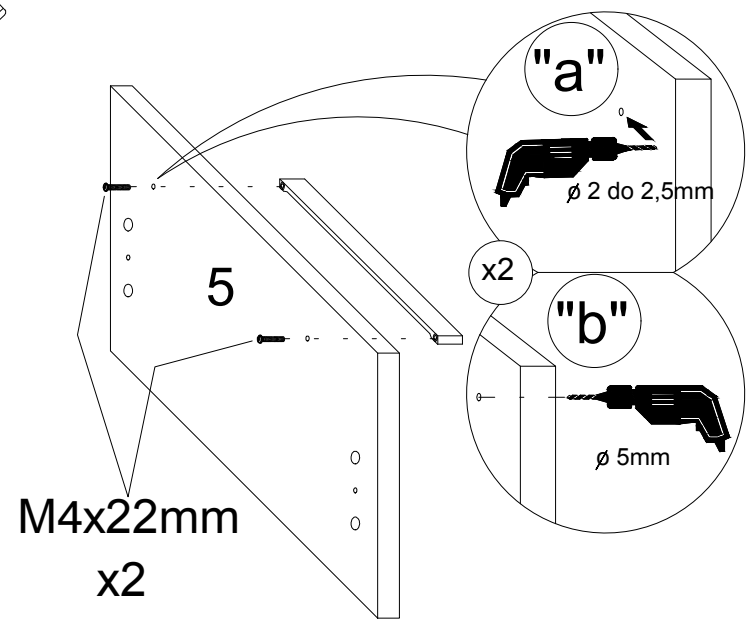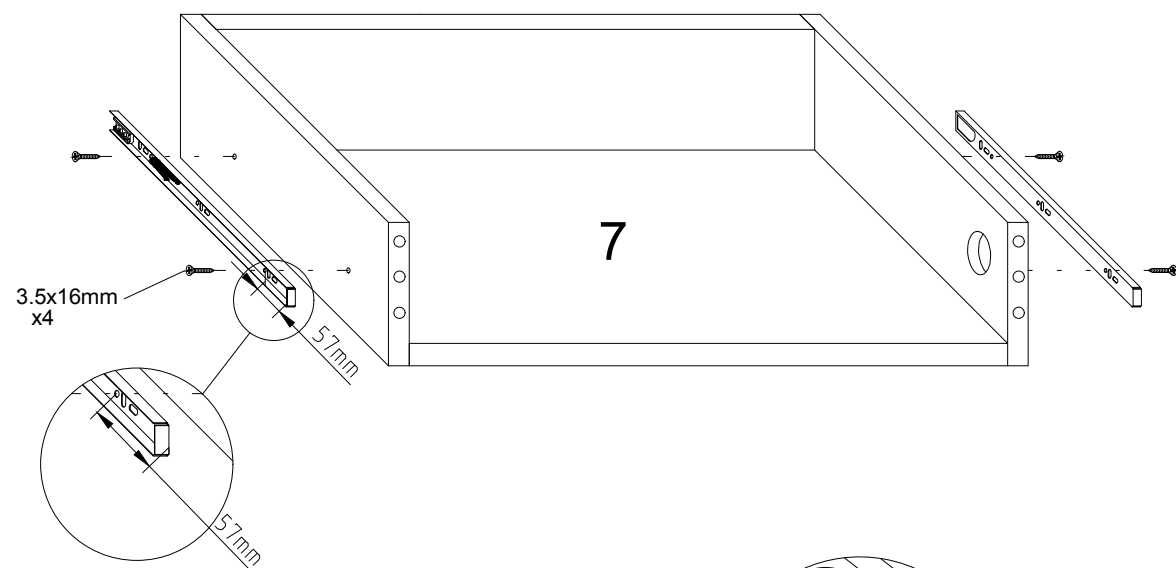

3

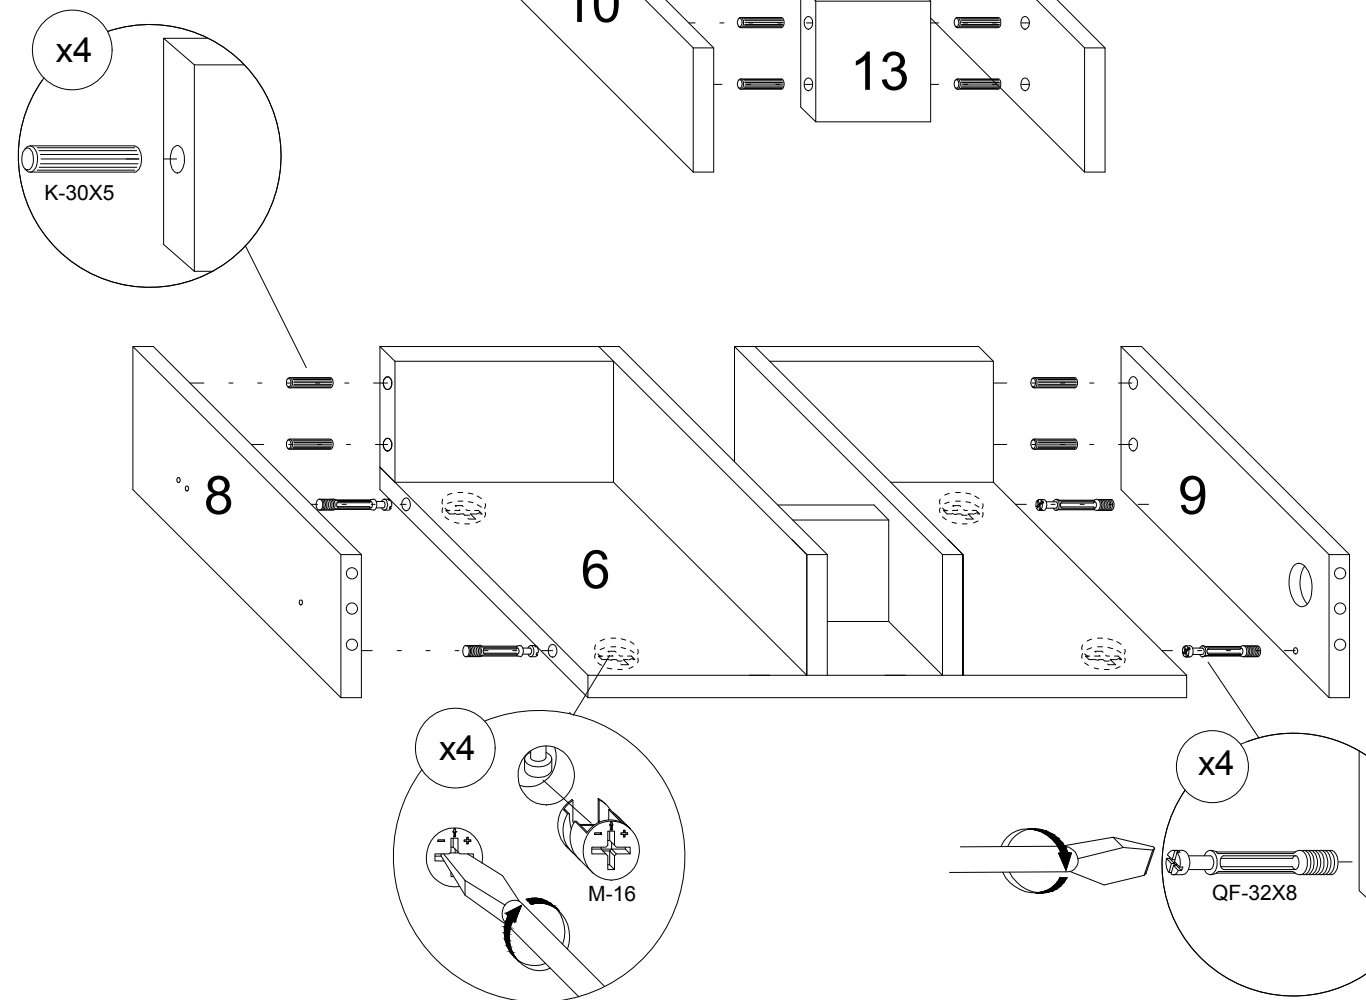
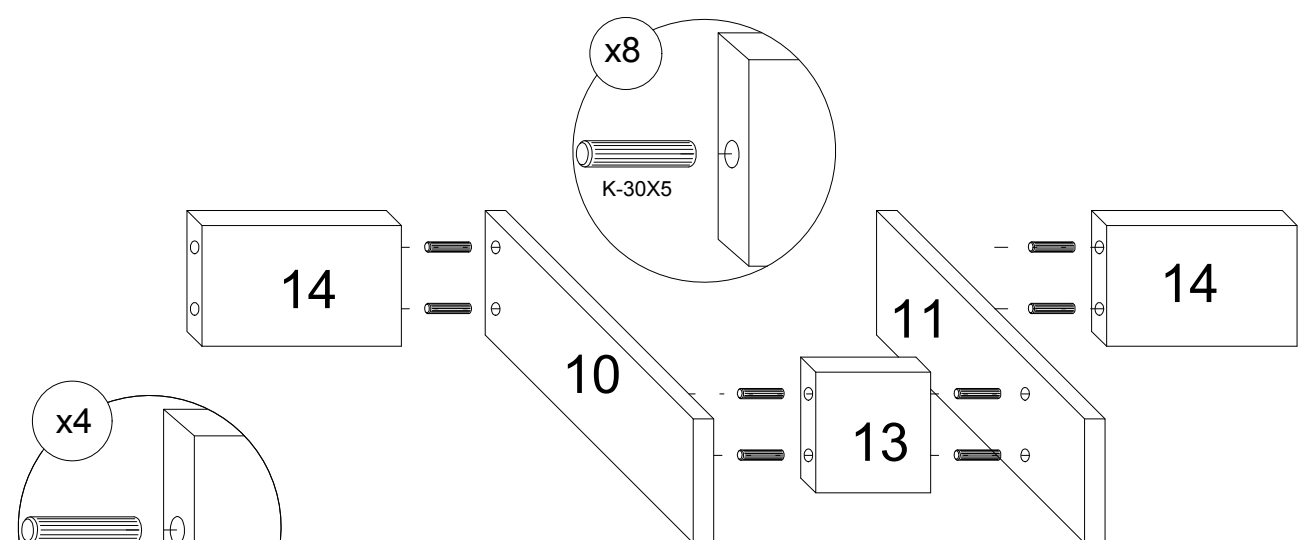
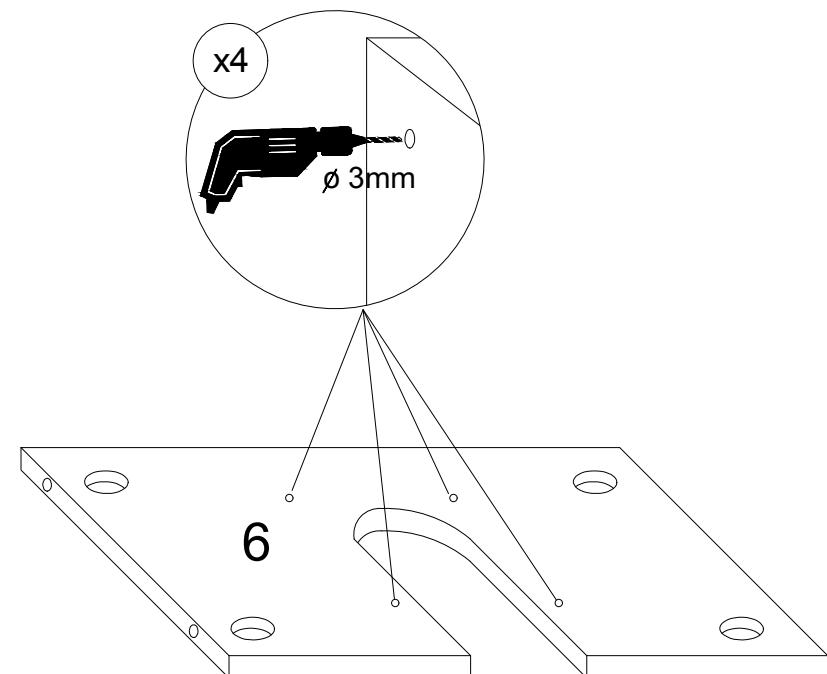


Diagram illustrating the assembly of the backrest. The main view shows the backrest being attached to the seat frame using two screws. The quantity **x2** is indicated for the screws.

Two circular callouts provide details:

- "a"**: Shows a screw being driven into the backrest using a drill. The screw size is specified as **ø 2 do 2,5mm**.
- "b"**: Shows a hole being drilled into the seat frame using a drill. The hole size is specified as **ø 5mm**.

The quantity **x2** is also indicated for the drilling step in callout "b".

5

Technical drawing illustrating the assembly process for the bottom of the cabinet:

- Part 7:** The main base plate.
- Part 8:** Left side panel.
- Part 9:** Right side panel.
- Part 12:** The bottom panel.

Assembly steps shown:

- Drilling two holes in the base plate (7) with a $\varnothing 3\text{mm}$ drill bit (x2).
- Attaching the side panels (8 and 9) to the base plate (7) using screws K-30X5 (x4).
- Attaching the side panels (8 and 9) to the base plate (7) using screws QF-32X8 (x4).
- Attaching the bottom panel (12) to the base plate (7) using screws 3.5x30mm (x2).