


PATTERNED WALL PANEL

NOTE: Images for illustration only. Patterns may vary.

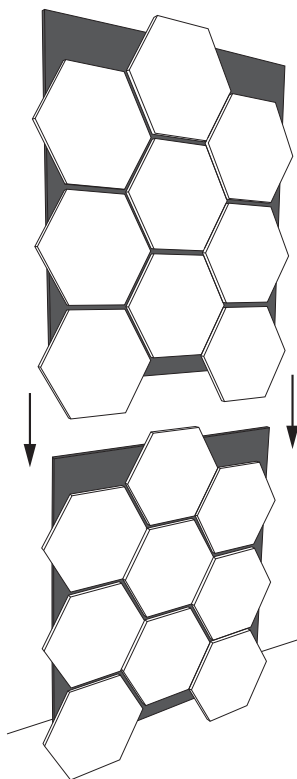

INSTALLATION METHODS

GLUING

Apply an appropriate adhesive to the back of the panel(s), to the felt, and adhere to the wall. Black screws can be used through the felt to hold the panel(s) in place whilst the adhesive sets.

SCREWING

The panel(s) can be screwed directly to the wall through the felt. Black screws can be used to hide the screws against the black felt backing. Ensure the appropriate wall fixings are used for the wall.

Note: If installing the panel(s) on a ceiling, ensure they are screwed into the ceiling joists.

BATTENS

If the panel(s) are being fitted to battens, fix the battens to the wall using the appropriate fixing method first. Then, screw the panel(s) to the battens through the felt backing. Use black screws to hide the screw against the felt backing.

ATTENTION: Fixings and Battens are not supplied.

f **fuse**
acoustic wall panels

www.firedupcorporation.com/manual