



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**Toyota Corolla 12 XII Station Wagon
(2018->>)**

COR12K DR


SOLARRIDE, znakovi i oznake proizvođača: SolarRide do Toyota Corolla 12 XII Kombi od 2018-08 kg



5 904035 794680 >

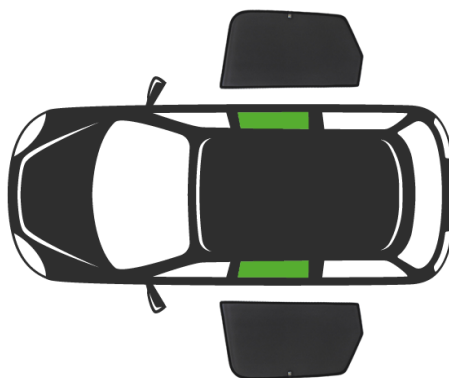

2 x

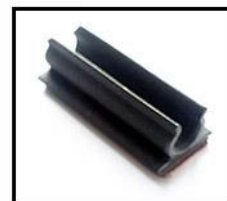

2 x



