

INSTALLATION INSTRUCTIONS

GLUED DOWN CUSHION VINYL

**BEAU
FLOR**[®]
we decorate your floor

BEFORE THE INSTALLATION

Before installation, always check if the product is the one you ordered in terms of specifications, design and colour. At the same time carefully inspect the material for any visible damages and defects.

RECOMMENDED TOOLS




A sharp knife with a straight blade for long cuts




A long metal ruler or straight edge



A tape measure

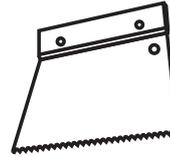

Adhesive trowel: type A2

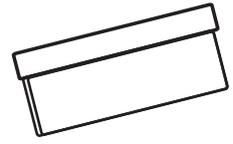

Smoothing press

INSTALLATION CONDITIONS

Planarity	< 7 mm under the 2 m rule
Storage	≤ 2 m store upright / > 2 m store horizontally
Temperature	Minimum 18°C for a period of 24h before installation
Humidity	Concrete ≤ 4% / Anhydrite ≤ 0.5%

CONDITIONS FOR THE SUBFLOOR

Subfloors must be absolutely level, clean and free from grit, dust, grease, oil, polish & old adhesive. It is also essential that the subfloor is dry because dampness can cause discolouration to the floor.


Subfloor	Preliminary work
Screeds	Permitted after sanding and application of primer
Parquet / Carpets	Must be removed
Ceramic	Permitted after levelling compound
Asbestos tiles	Glued installation not allowed




Pay attention that the underfloor heating and cooling is switched off 48 hours before and 48 hours after the installation.

INSTALLATION

LAYING DIRECTION

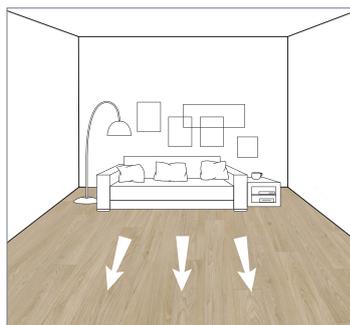

For plank and tiles designs, sheets should be installed in the same direction.

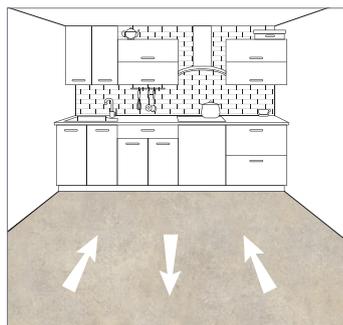

For most all-over designs, alternate sheets should be installed in opposite directions. Check design specifications before you start.

- Take care to always have the same batch in the same room.
- Cut and flatten the rolls 24 hours before installation.
- When you do a multiple piece installation, make sure the seams between rolls are positioned away from areas of heavy traffic and lots of light.
- If you want to glue the vinyl floor to the subfloor, please use acrylic glue. For textile backing you can also use double sided tape.
- Cold welding; after the installation overlap the strips to make a double cut.

ADHERING VINYL TO SUBFLOOR



1. Turn back the first piece of flooring to expose about half of the subfloor.



2. Apply the adhesive to the subfloor in accordance with the adhesive manufacturer's instructions.




3. Allow the recommended drying time and then reposition the flooring material over the prepared subfloor.



4. Roll out with smoothing press.



5. Do the same with the other pieces of flooring, take care to not overlap the glue.

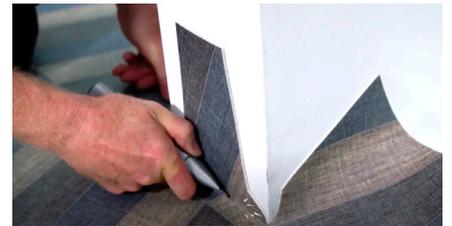


6. With the material now lying flat around the fittings and corners, the final cutting along the wall lengths can be carried out.

CORNER CUTTING INSTALLATION



1. Fold your product twice on itself, looking for the inside corner.

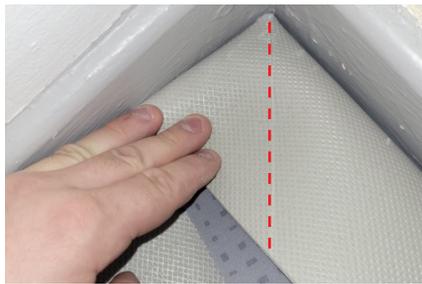

2. Place your blade point in the corner and cut until outside.



3. Pull out this part



4. Cut section as shown, once completed open up to see perfect corner shape cut - trim edges.

AFTER INSTALLATION



First 48h:
Keep traffic to a minimum.



First 72h:
Do not move heavy objects back into place.

VIEW OUR FULL
RESIDENTIAL
INSTALLATION
GUIDE



SCAN ME