



# Heating mat installation

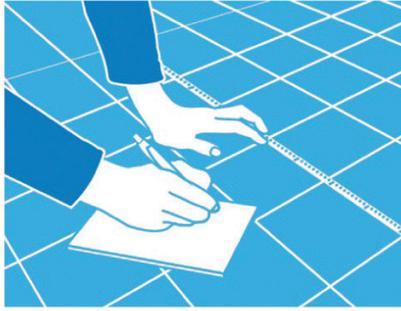

Estimate the area available for floor heating. The area covered by furniture or bath, lavatory, etc. has to be taken off the total area of the room. The heating mat should be a little bit smaller than the area calculated for the floor heating (m<sup>2</sup>).

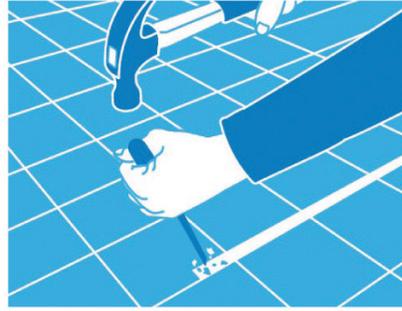


Make a groove where a plastic pipe for thermostat sensor will be placed. The pipe has to be sealed at the end, the concrete should not enter it.




The floor heating mat should be installed onto clean surface.



The heating mat installation starts from the wall and is directed towards the opposite wall. The mat can be turned around by cutting the net of the heating mat (please, do not cut the cable). The instalment of the heating mat has to be continued till it covers the entire area.

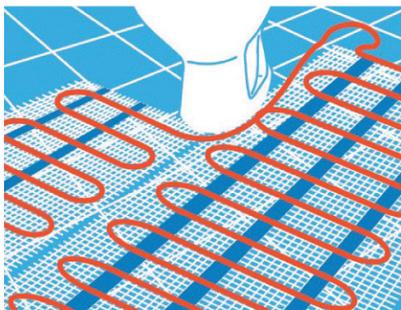

If you want to turn the mat, you can cut the net of the mat. Please, be careful; do not to cut the cable.

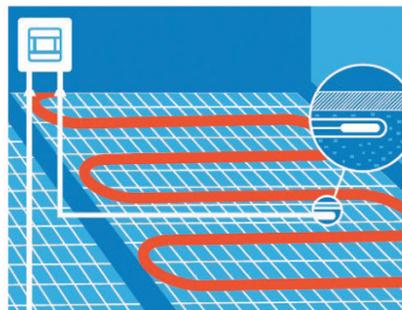

Once applied, it is then covered by the layer of tile glue or concrete.