

Dacia Dokker (dostawczy, VAN)

Rok prod: od 08.2012

Instrukcja montażu:

1. Wymontować z samochodu błotniki, osłonę termiczną i zderzak.
2. Odkręcić od zderzaka jego wzmocnienia.
3. Usunąć z podłużnic zaślepki otworów montażowych i w razie potrzeby powiększyć je tak aby weszły tulejki dystansowe.
4. Wsunąć od zewnętrznej strony podłużnic tulejki dystansowe, pierścienie dystansowe, podkładki powiększone, śruby M10x110 a od wewnętrznej strony przyłożyć ramiona A, B i przykręcić stosując podkładki powiększone, sprężyste, nakrętki.
5. Przykręcić belkę główną C do ramion A, B stosując śruby M12x35 (podkładki, podkładki sprężyste, nakrętki.)
6. Przykręcić wszystkie śruby momentami wg tabeli.
7. Założyć zderzak, osłonę termiczną, błotniki. Zderzak przykręcić do belki haka śrubami M6x25 (podkładki powiększone, sprężyste, nakrętki).
8. Przykręcić kulę i blachę gniazdka elektrycznego śrubami M12x70 (podkładki, podkładki spręż., nakrętki). Momenty przykręcenia wg tabeli.
9. Podłączyć przewody elektryczne wg instrukcji.

Uwaga: Przy podłączonej przyczepie występuje możliwość kolizji drzwi tylnych samochodu z elementami dyszla przyczepki.

Fitting instructions:

1. Disassemble the fenders, thermal shield and bumper from the car.
2. Unscrew the bumper reinforcement from the bumper.
3. Remove the hole plugs from the mounting holes in the stringers and, if necessary, enlarge them to get distance sleeves.
4. Insert distance sleeves from the outside of the stringers, enlarged washers, bolts M10x110 and in the inside of the stringers place the arms A, B and screw the use of enlarged washers, spring washers, nuts.
5. Screw the main bar C to the arms A, B with the bolts M12x35 (washers, spring washers, nuts).
6. Tighten all the bolts according to the torque settings - see the table.
7. Place the bumper, thermal shield and fenders in the car.
8. Fix the ball and electric plate with the bolts M12x70 (washers, spring washers nuts). Torque settings according to the table.
9. Connect the electric wires according to the instructions.

Attention: With the attached trailer there is the possibility of collision of the rear door of the car with drawbar elements.

ZESTAW ŚRUBOWY:

ŚRUBY:

M12x70- 8.8 - 2 szt.

M12x35-8.8 - 4 szt.

M10x110-8.8 - 4 szt.

PODKŁADKI:

Ø13 - 6 szt.

Ø10,5xØ30 - 8 szt.

Ø6,4x Ø18 - 4 szt.

PODKŁ. SPRĘŻYSTE:

Ø12,2 - 6 szt.

Ø10,2 - 4 szt.

Ø6,1 - 2 szt.


NAKRĘTKI:

M12-8 - 6 szt.

M10-8 - 4 szt.

M6-8 - 2 szt.

Tulejka dyst. Ø22 x~Ø14 x 83 - 4 szt.

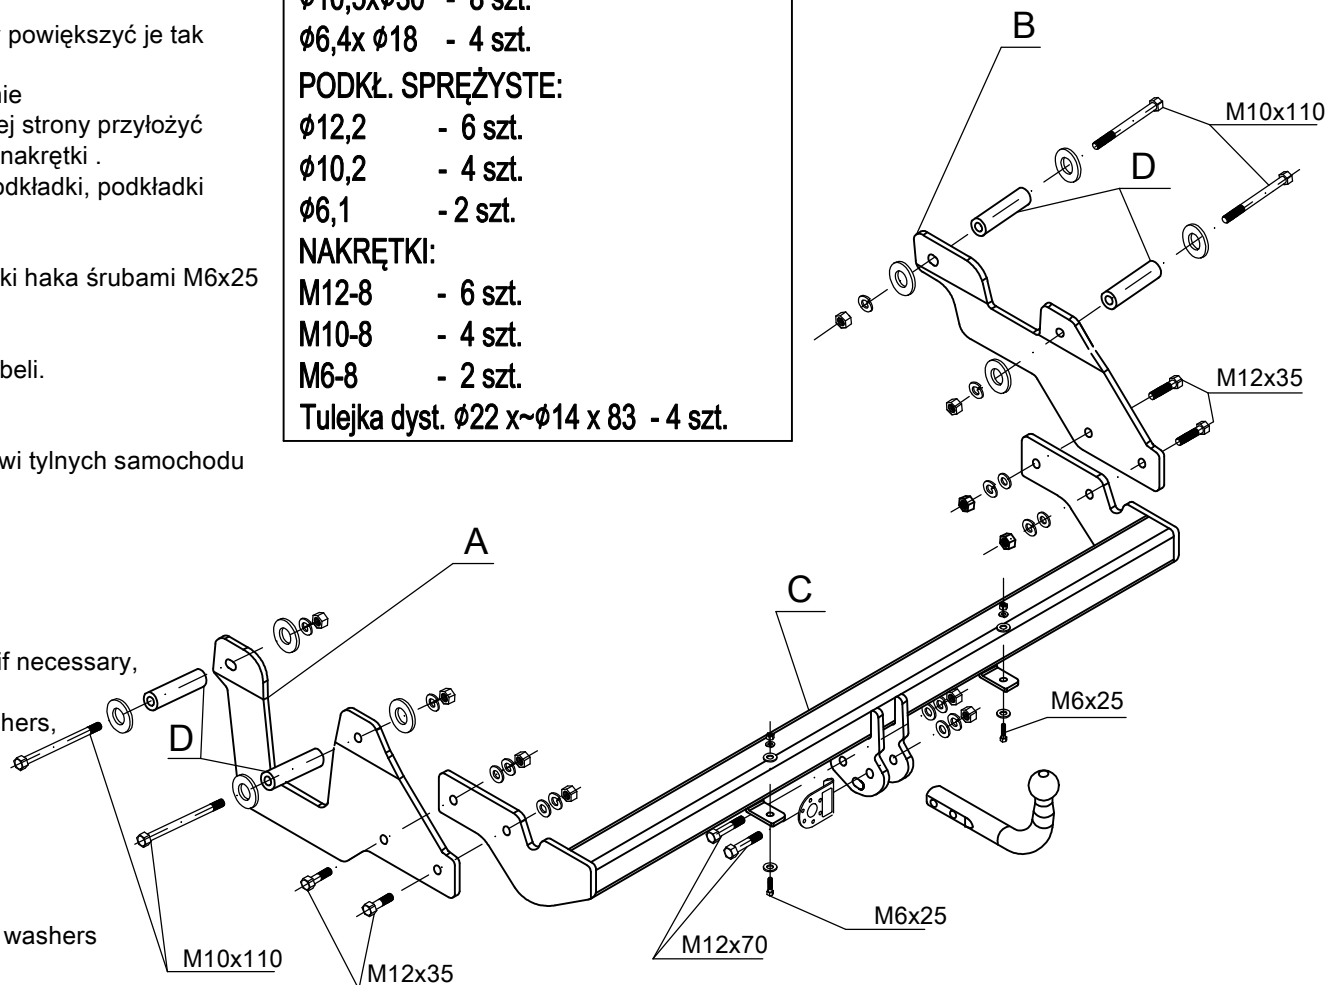

Moment skręcający dla śrub i nakrętek (8.8):

Torque settings for nuts and bolts (8.8)

M6 - 11Nm; M8-25Nm; M10-55Nm; M12-85Nm; M14-135Nm; M16-195Nm.