



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**Mercedes-Benz C-Class W204 Sedan
(2007-2014)**

W204S DR


SOLARRIDE Zasklonki, osłony przeciwsłoneczne do Mercedes-Benz W204 Sedan C-Klasa (2007-2014) DR 1lig



5 904035 791696 >

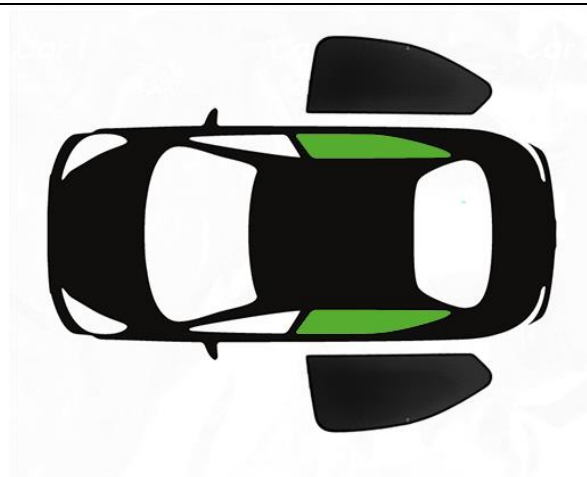


4 x

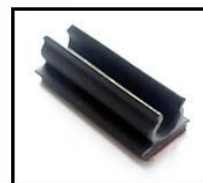

2 x



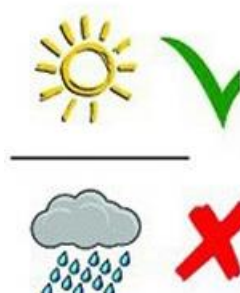

DO NOT TOUCH 24h
NO TOCAR 24h
NIE DOTYKAĆ 24h