


Ford Focus MkIII kombi 2011→

PU Side Mouldings F-14

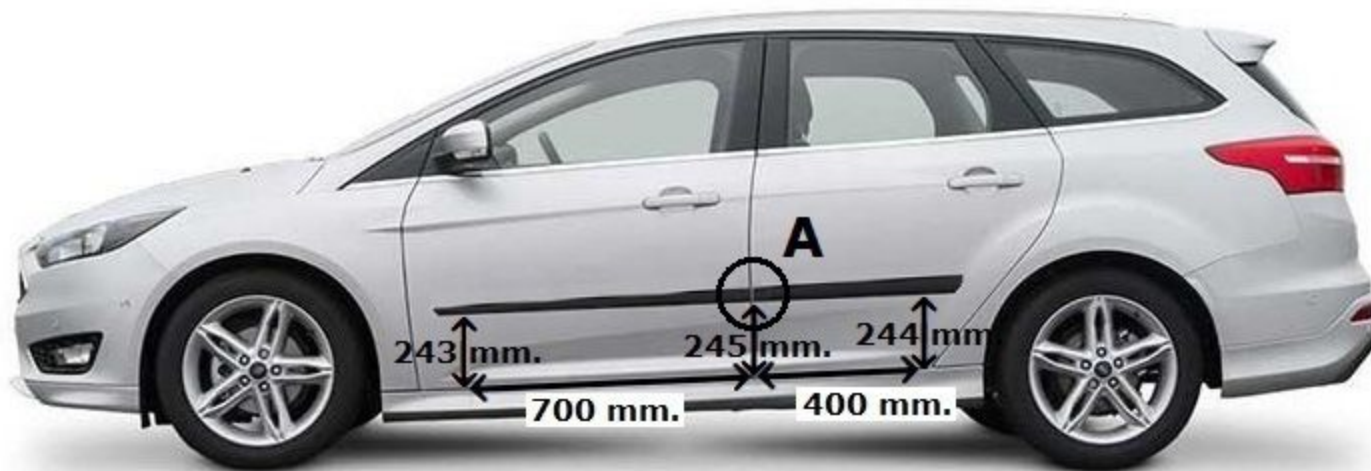

RH FRONT RH REAR



← FRONT



LH FRONT LH REAR

Degrease/entlatten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

1



20-40 °C

2



48h



5



4



Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

2 mm.

A

5 mm.

