



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




BMW X1 F48 (2015-2022)

X1 F48 DR

SOLARRIDE Zastlonki dedykowane do BMW X1 F48 (2015-2022) DR 2lg

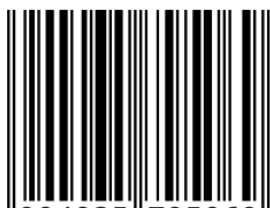

5 904035 795069 >

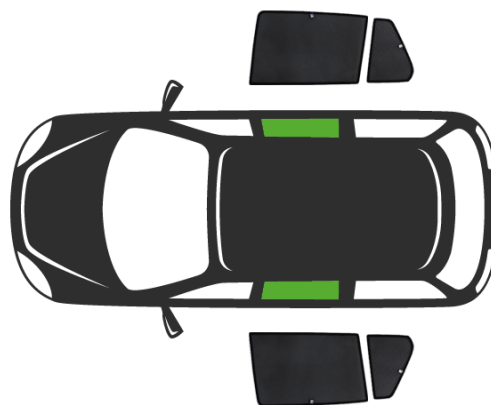

1. INSTALACJA NIE WYMAGA KLIPSÓW MONTAŻOWYCH.
2. INSTALLATION DOES NOT REQUIRE MOUNTING CLIPS.
3. INSTALACE NEVYŽADUJE MONTÁŽNÍ SVORKY.
4. DIE INSTALLATION ERFORDERT KEINE BEFESTIGUNGSKLAMMERN.
5. L'INSTALLATION NE NÉCESSITE PAS DE CLIPS DE MONTAGE.
6. A INSTALAÇÃO NÃO NECESSITA DE CLIPES DE MONTAGEM.
7. LA INSTALACIÓN NO REQUIERE CLIPS DE MONTAJE.
8. L'INSTALLAZIONE NON RICHIEDE CLIP DI MONTAGGIO.
9. ZA UGRADNJU NISU POTREBNE MONTAŽNE KOPICE.
10. INSTALAREA NU NECESITĂ CLEME DE MONTARE.
11. INŠTALÁCIA NEVYŽADUJE MONTÁŽNE SVORKY.



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž





Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž





Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

