



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž



**Seat Altea (2004-2009)**

**ALTEA DR**

SOLARRIDE (zadní), oslony przeciwsłoneczne do Seat Altea (2004-2009) KPI 3kg



5 904035 792211 >




**Seat Altea XL (2006-2015)**

**ALTEA XL DR**

SOLARRIDE (zadní), oslony przeciwsłoneczne do Seat Altea XL (2006-2015) DR 2kg



5 904035 797117 >

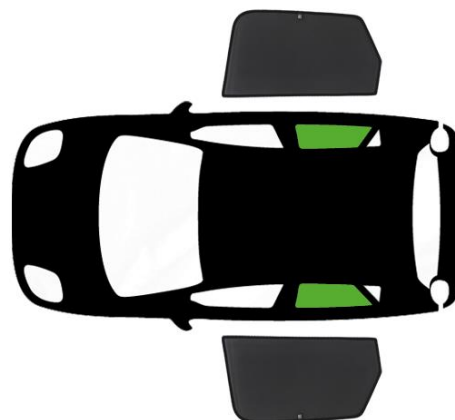

**4 x**





Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž



Seat Toledo (2004-2009)

**TOL 3**

SOLARRIDE zadniki, oslony przeciwsłoneczne do Seat Toledo 3 (2004-2009) BEZ KL 2kg

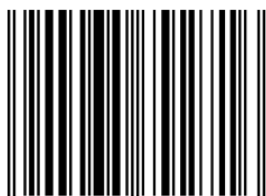

5 904035 792716 >

