



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




VW TOURAN (2010-2015)

TOUR 2 DR

SOLARRIDE Zastlonki do VW/Volkswagen Touran (2010-2015) DRZMI 1kg

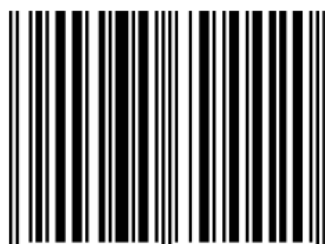

5 904035 794420 >

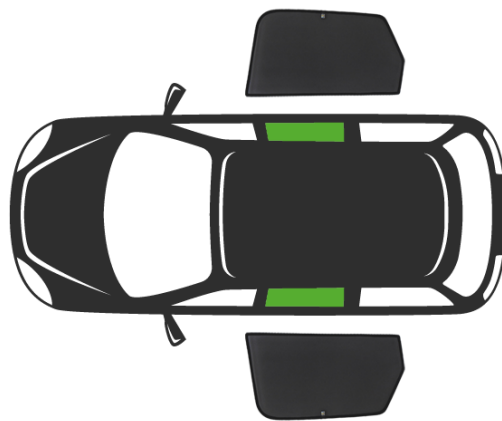

6 x



