



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



Opel Meriva A (2003-2010)

MERIVA A KPL

SOLARRIDE Żalanki / roletki / osłony przeciwsłoneczne dedykowane do Opel Meriva A (2003-2010) KPL 3lg.

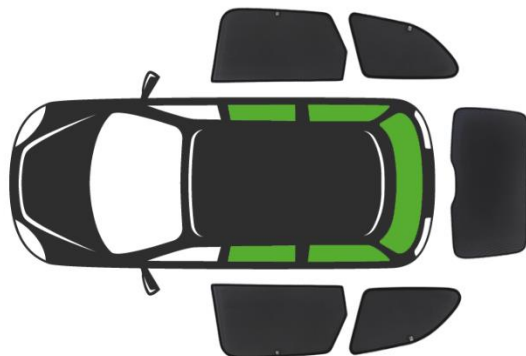


4 x



6 x





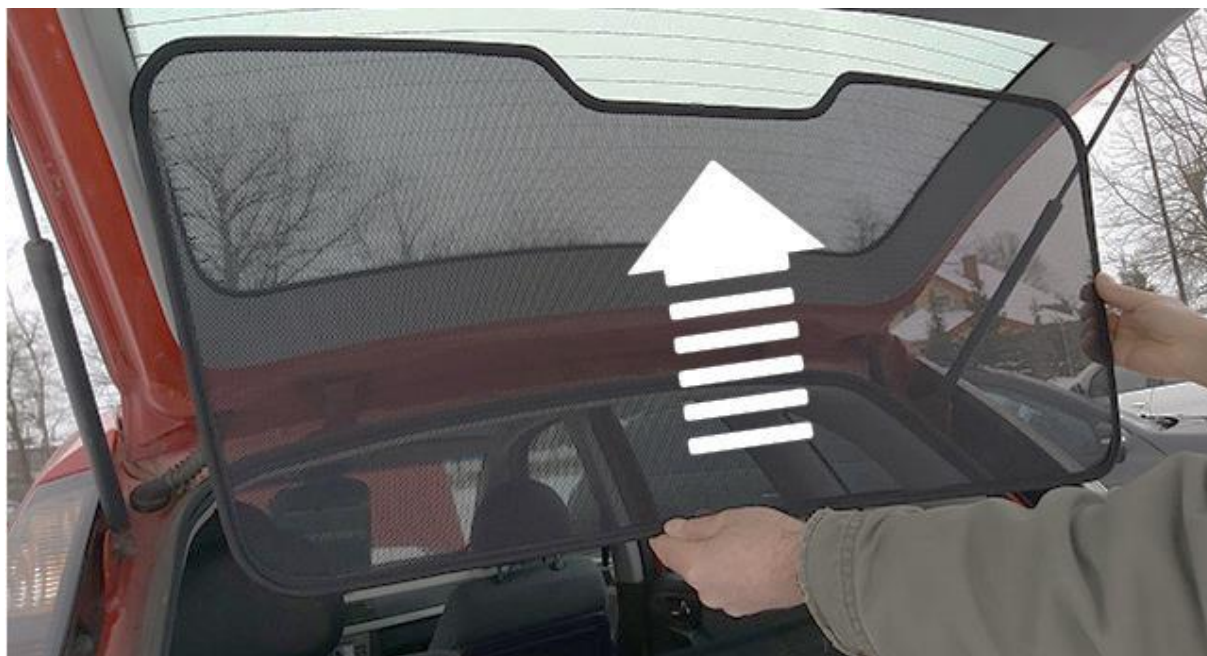



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

