



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




VW Volkswagen Golf Sportsvan
(2014-2020)

**SPORTSVAN
KPL**

SOLARRIDE Zakonni colony prasciekonecne VW Volkswagen Golf Sportsvan (2014-2020) KOMPLET 3kg

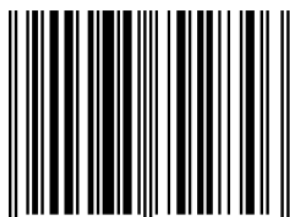

5 904035 792846 >

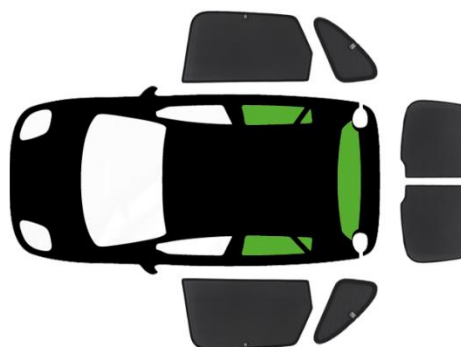

4 x



6 x



