



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



Fiat Tipo Station Wagon (2015->>)

TIPOK KPL

SOLARRIDE Żelazniki, osłony przeciwsłoneczne SolarRide do Fiat Tipo Kombi (2015-) KPL 3lg

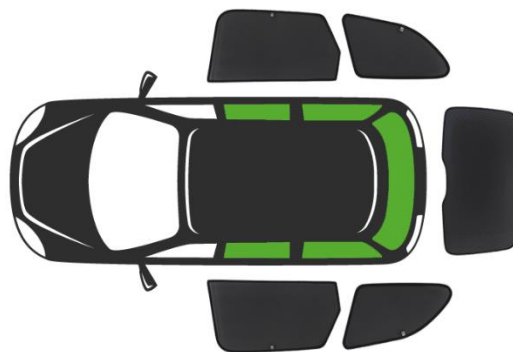

4 x



4 x







Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



