



MIMI B

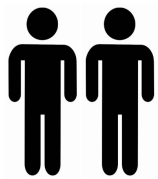

Recommended
assembly by 2 person

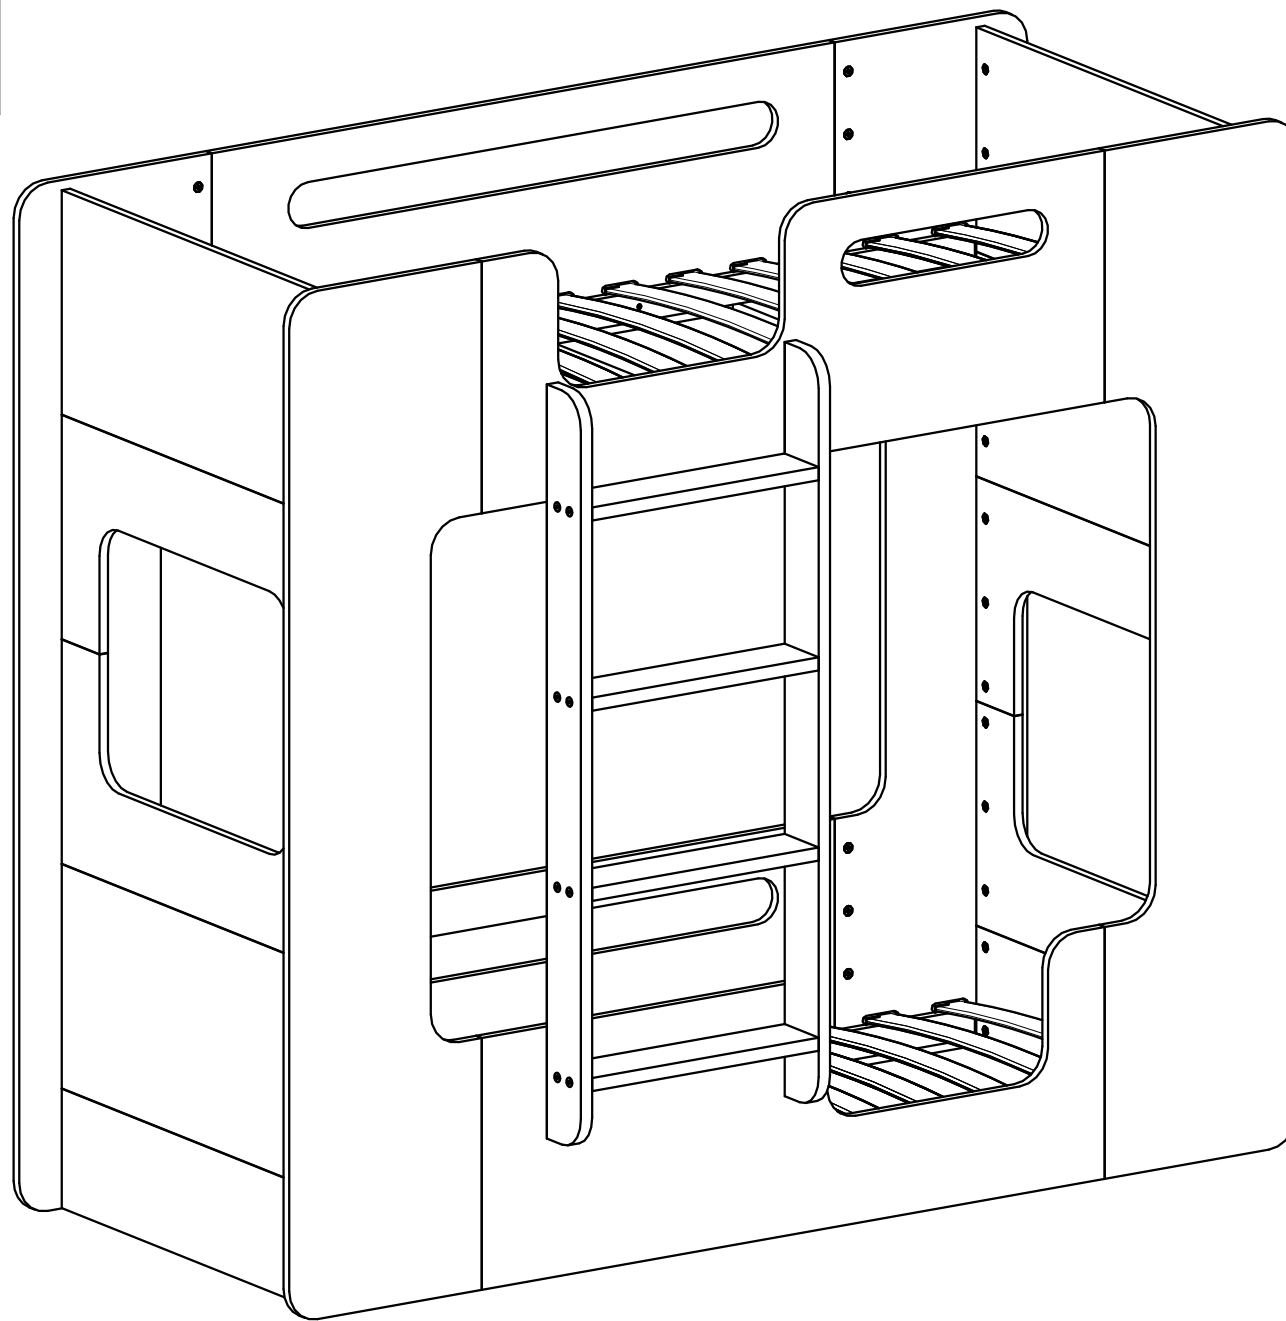

IMPORTANT



Beds are for sleeping,
not for jumping


Prohibit more than
one person on bed



UPPER BED




LOWER BED

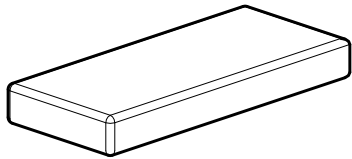

Use only mattresses
with thickness of 8–12 cm

Bed parts have 2 years
warranty in normal use

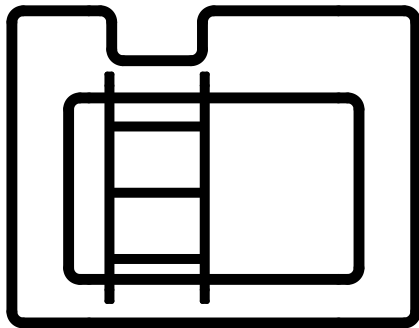

Use the ladder to get in and out of the upper bed

Do not hang on structural elements

Design and execution in accordance with the standard

PN-EN 747-1+A1:2015-08


Wooden parts should be cleaned with a dry cloth and ordinary
mild detergents for the care and cleaning of wooden parts

PLEASE READ BEFORE ASSEMBLY:

- 1) Make sure there is **free space** for installation.
- 2) Before fully unpacking, please **measure the elements** whether they match the order.
- 3) After unpacking the elements from the cartons please **check the completeness** of the whole set with the assembly instruction. - If you check and find that something is missing
- let us know, we will check the packaging and when it is necessary we will send the missing parts.
- 4) Think about whether you will need help with the assembly, if you find it necessary, find a assistant. (We **recommend two people to assemble** the bunk beds).
- 5) We recommend installing wooden pins on a **hard flat surface**
(you can use the cardboard from the packaging).
- 6) When using a hammer to hammer in the woodpins, remember not to use too much force, and the element should be **placed on a flat hard surface**.


REMEMBER!

NEVER HAMMER THE WOODPINS TO THE PARTS IN THE AIR

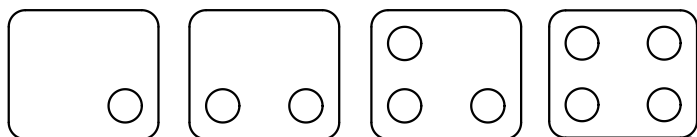


CHECK - COMPLETE SET

N2

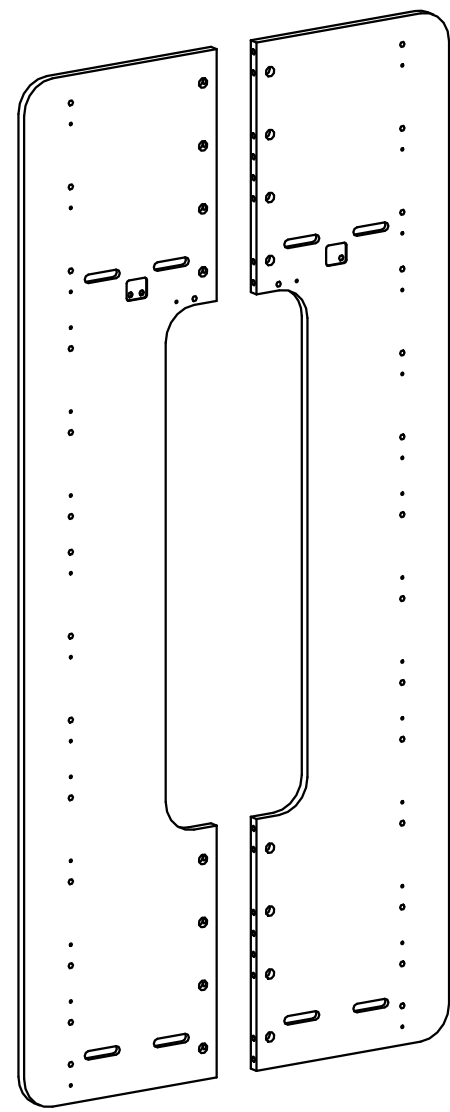


N1

N3

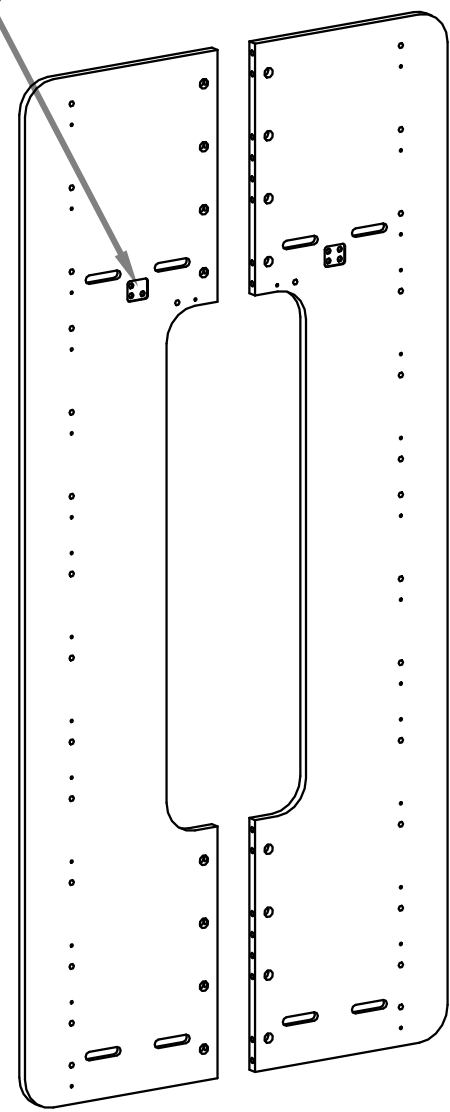

N4


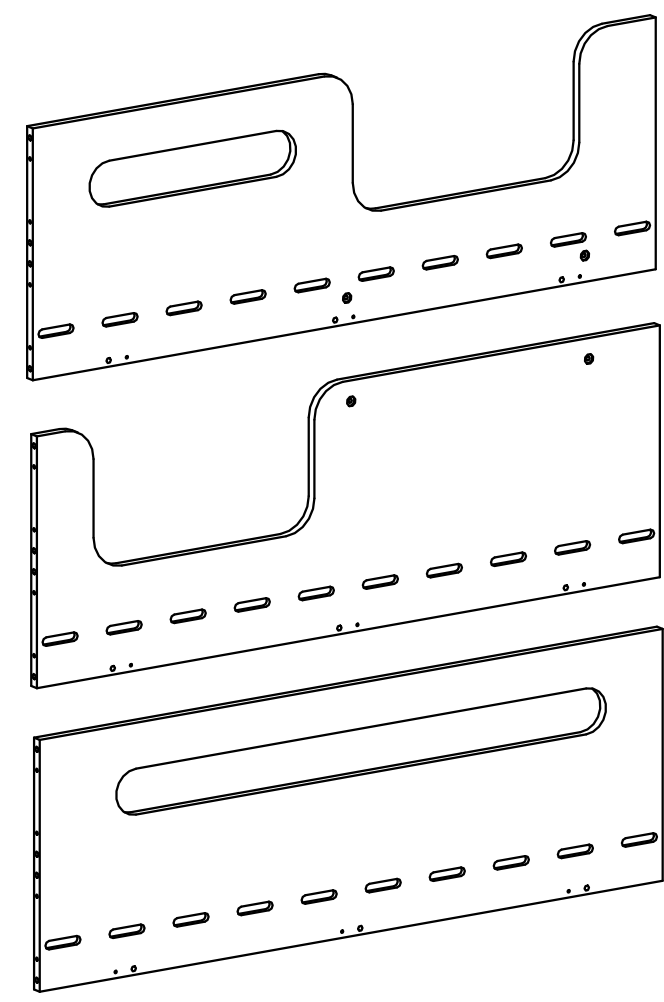


BGP

BDP

BT








MIMI B			
N1	x1	BGP	x1
N2	x1	BDP	x1
N3	x1	BT	x2
N4	x1		

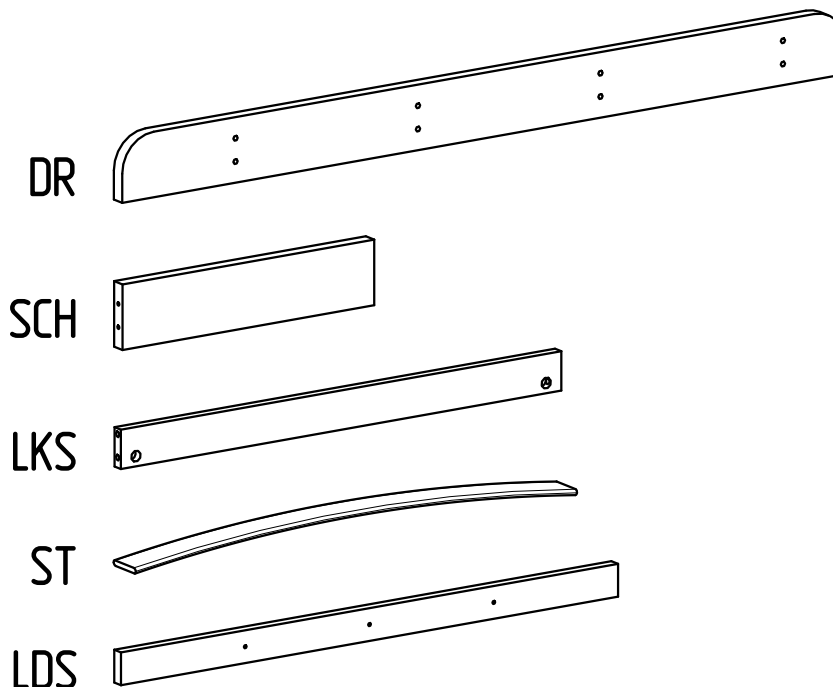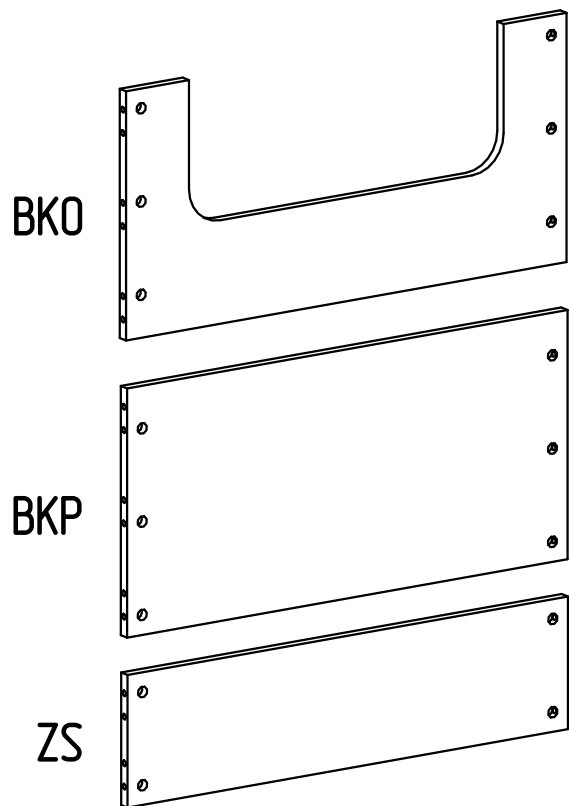

MIMI B

BKO	x4
BKP	x4
ZS	x2
DR	x2
SCH	x4
LKS*	x6/x8
ST	x28-32
LDS	x8

*8x LKS – only for size 100

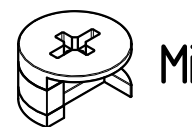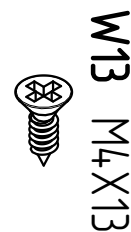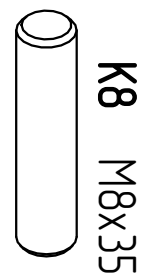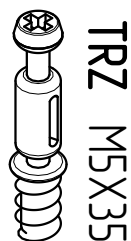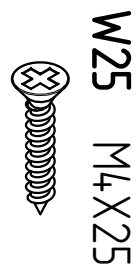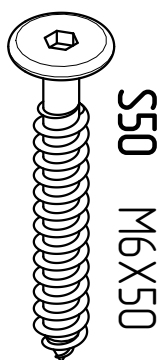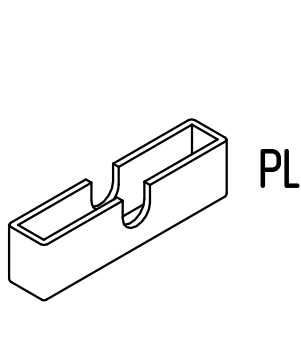

SCREWS

PL	x56-64
S50	x20
W25	x24
TRZ	x104
K8	x104
Mi	x104





The same situation for element

BGP


BDP

x2


BT

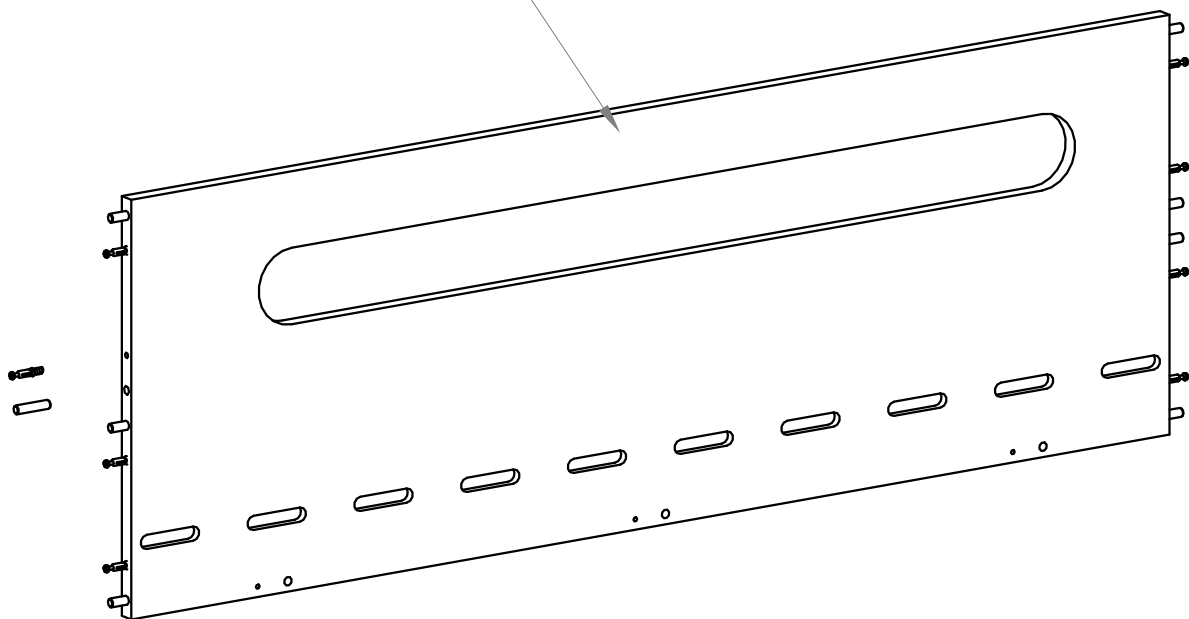


TRZ M5x35





K8 M8x35

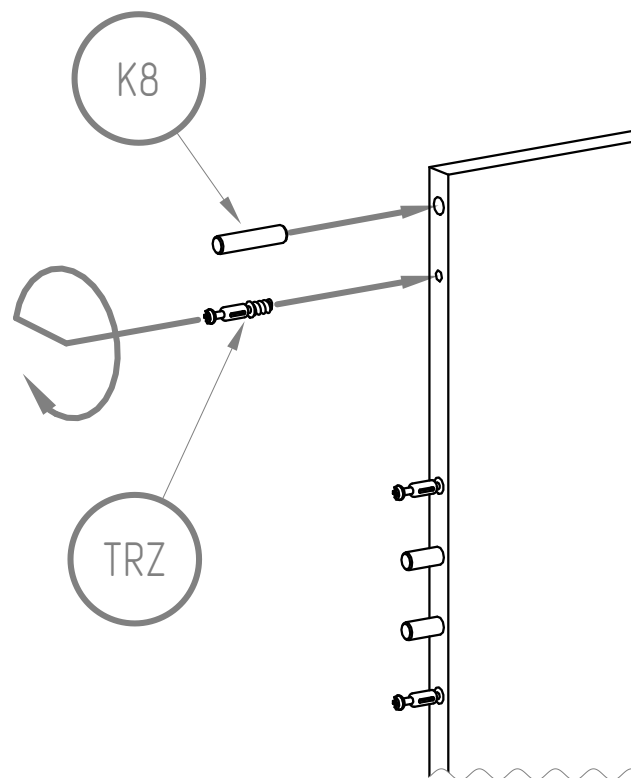

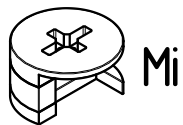

Recommendation

Assembly on the floor

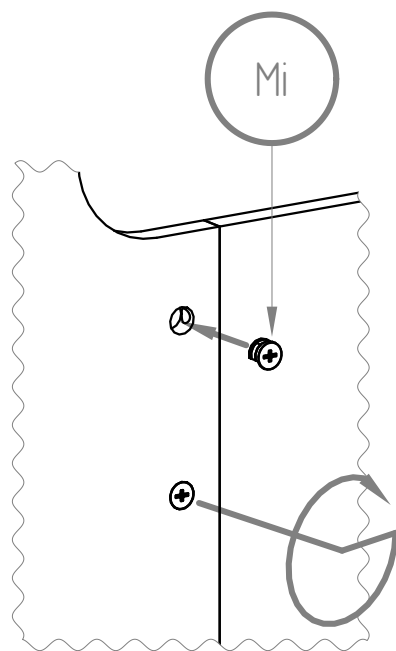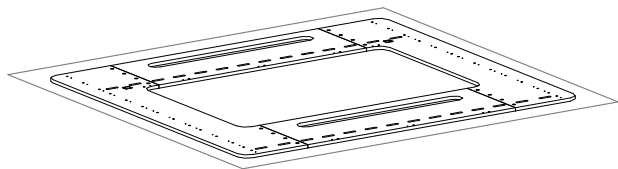


The same situation for element


BGP

BDP

N1

N2


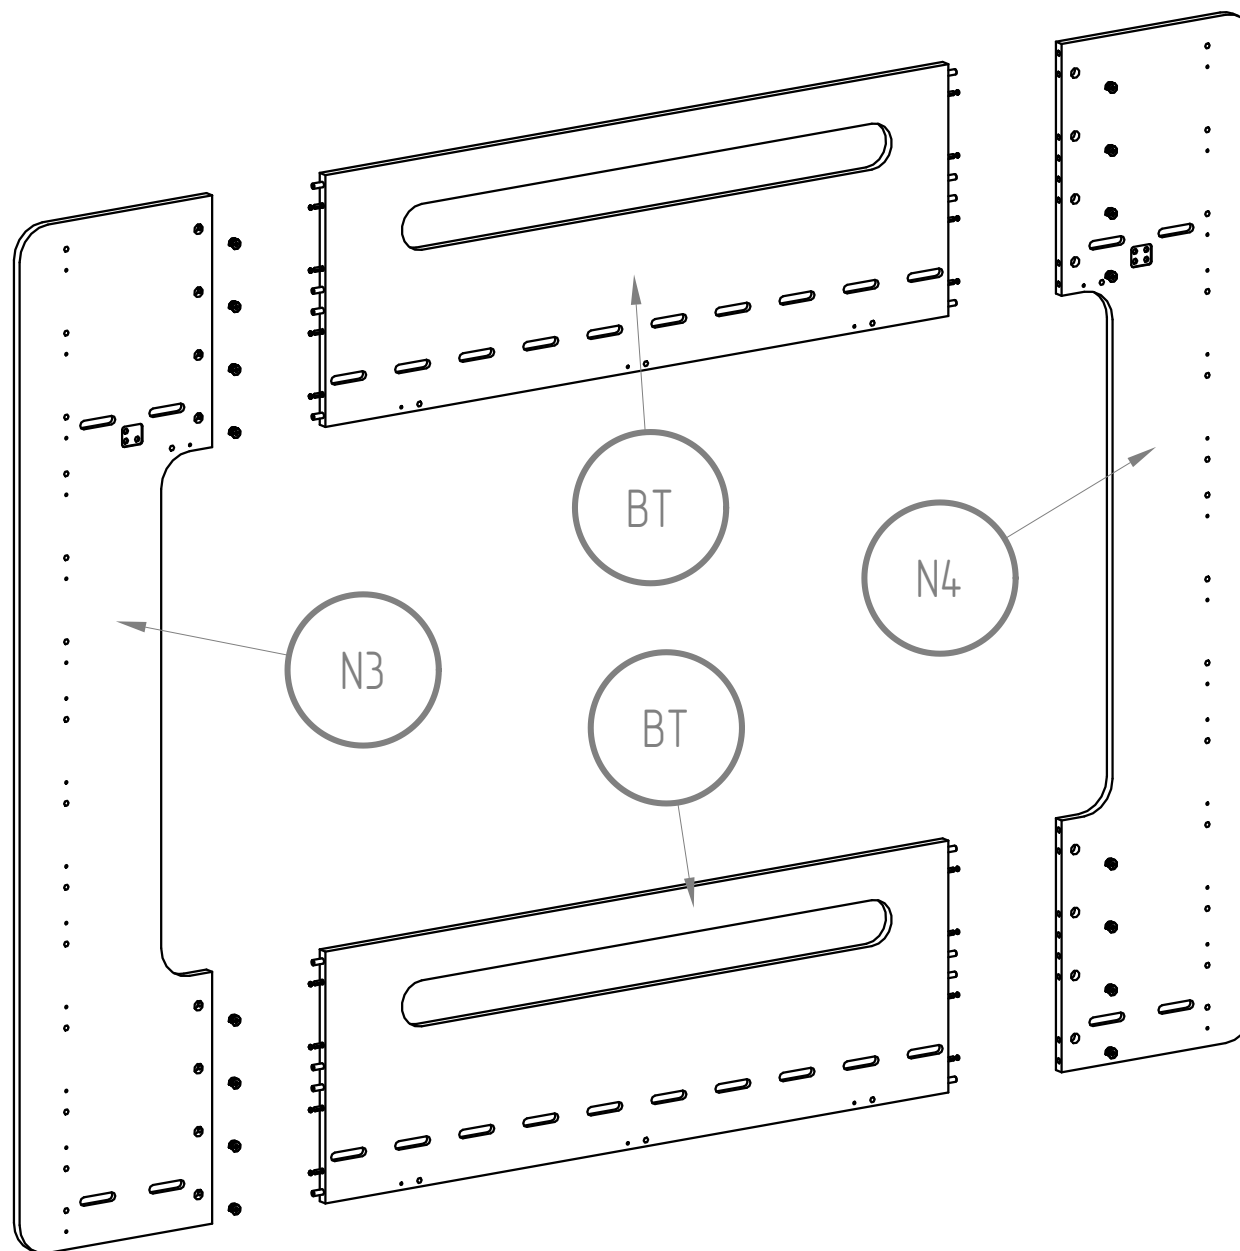



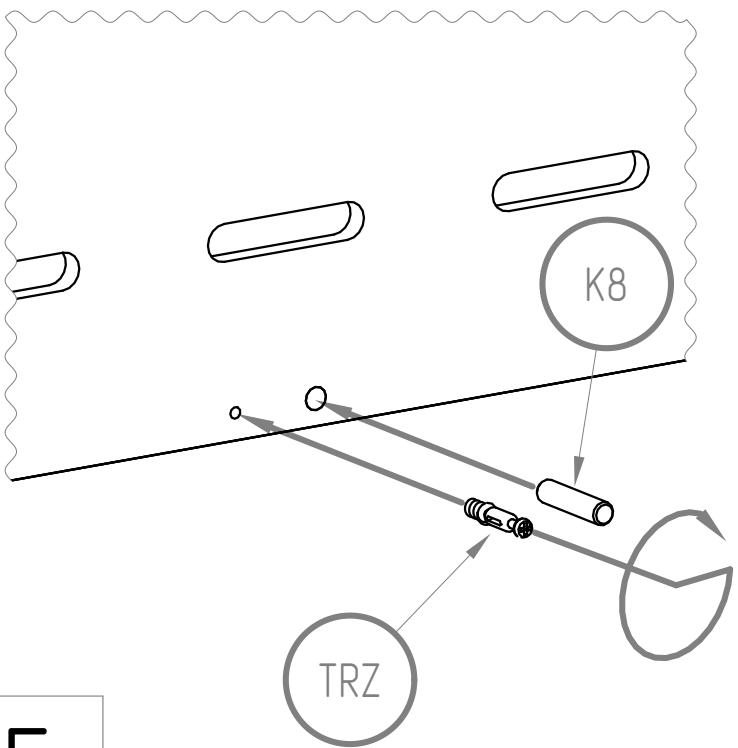


K8 M8x35





TRZ M5x35


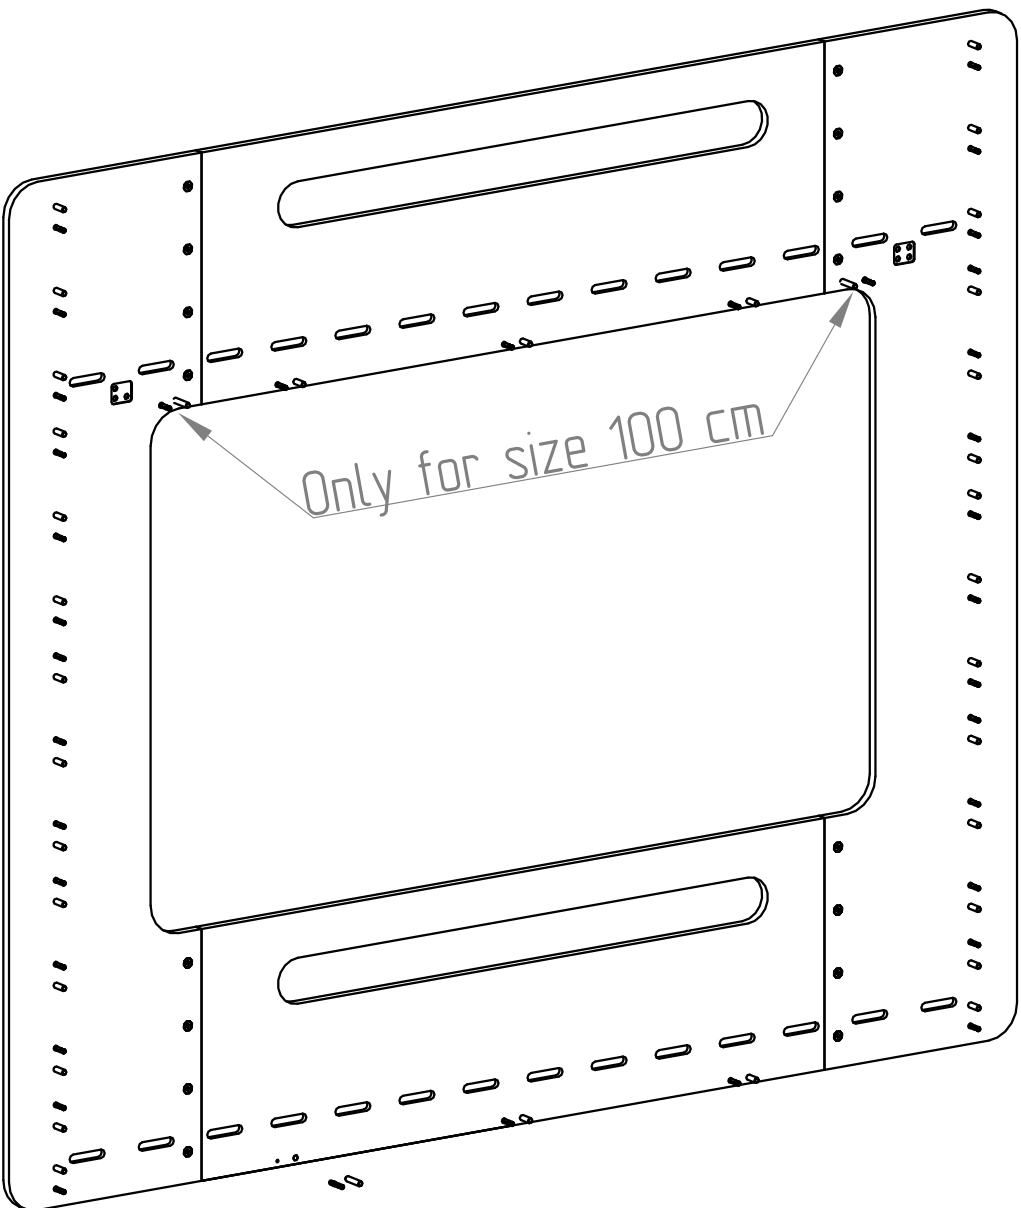



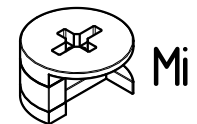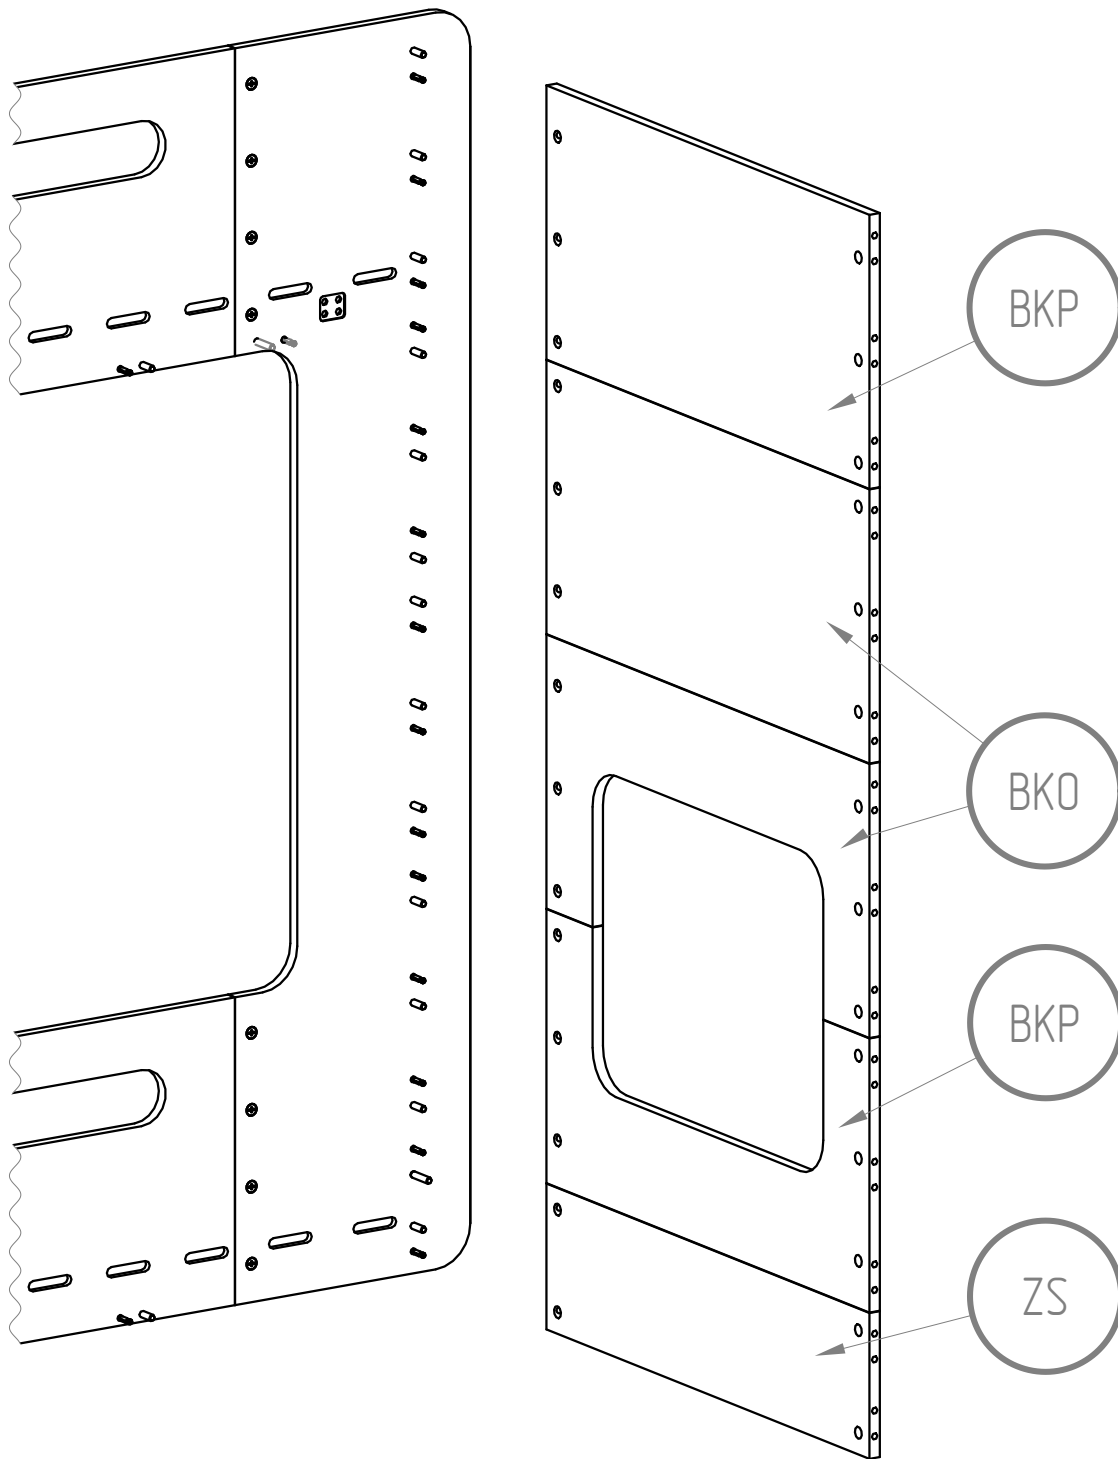

The same situation on the
other side

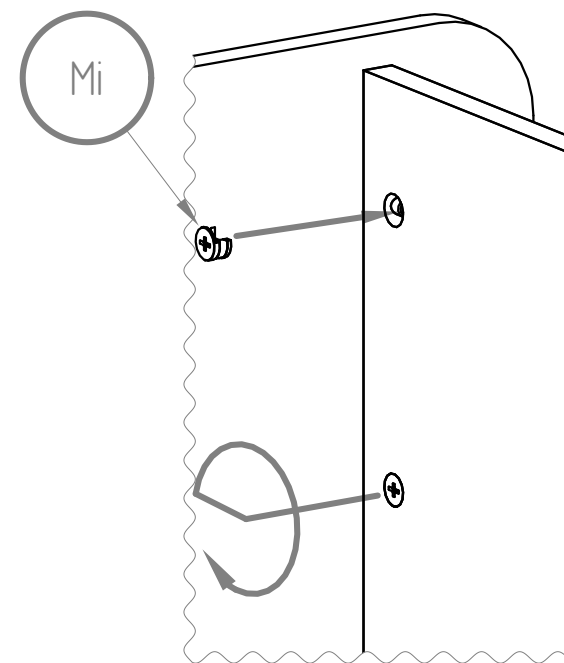
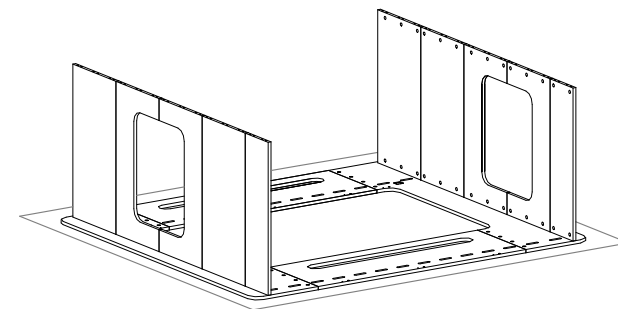







7

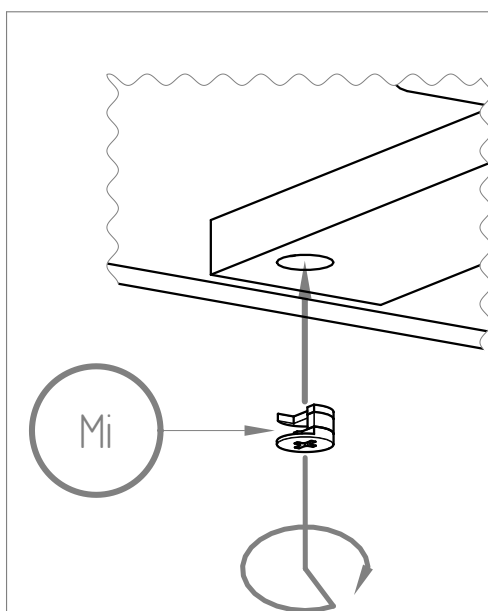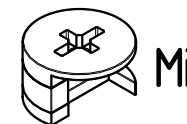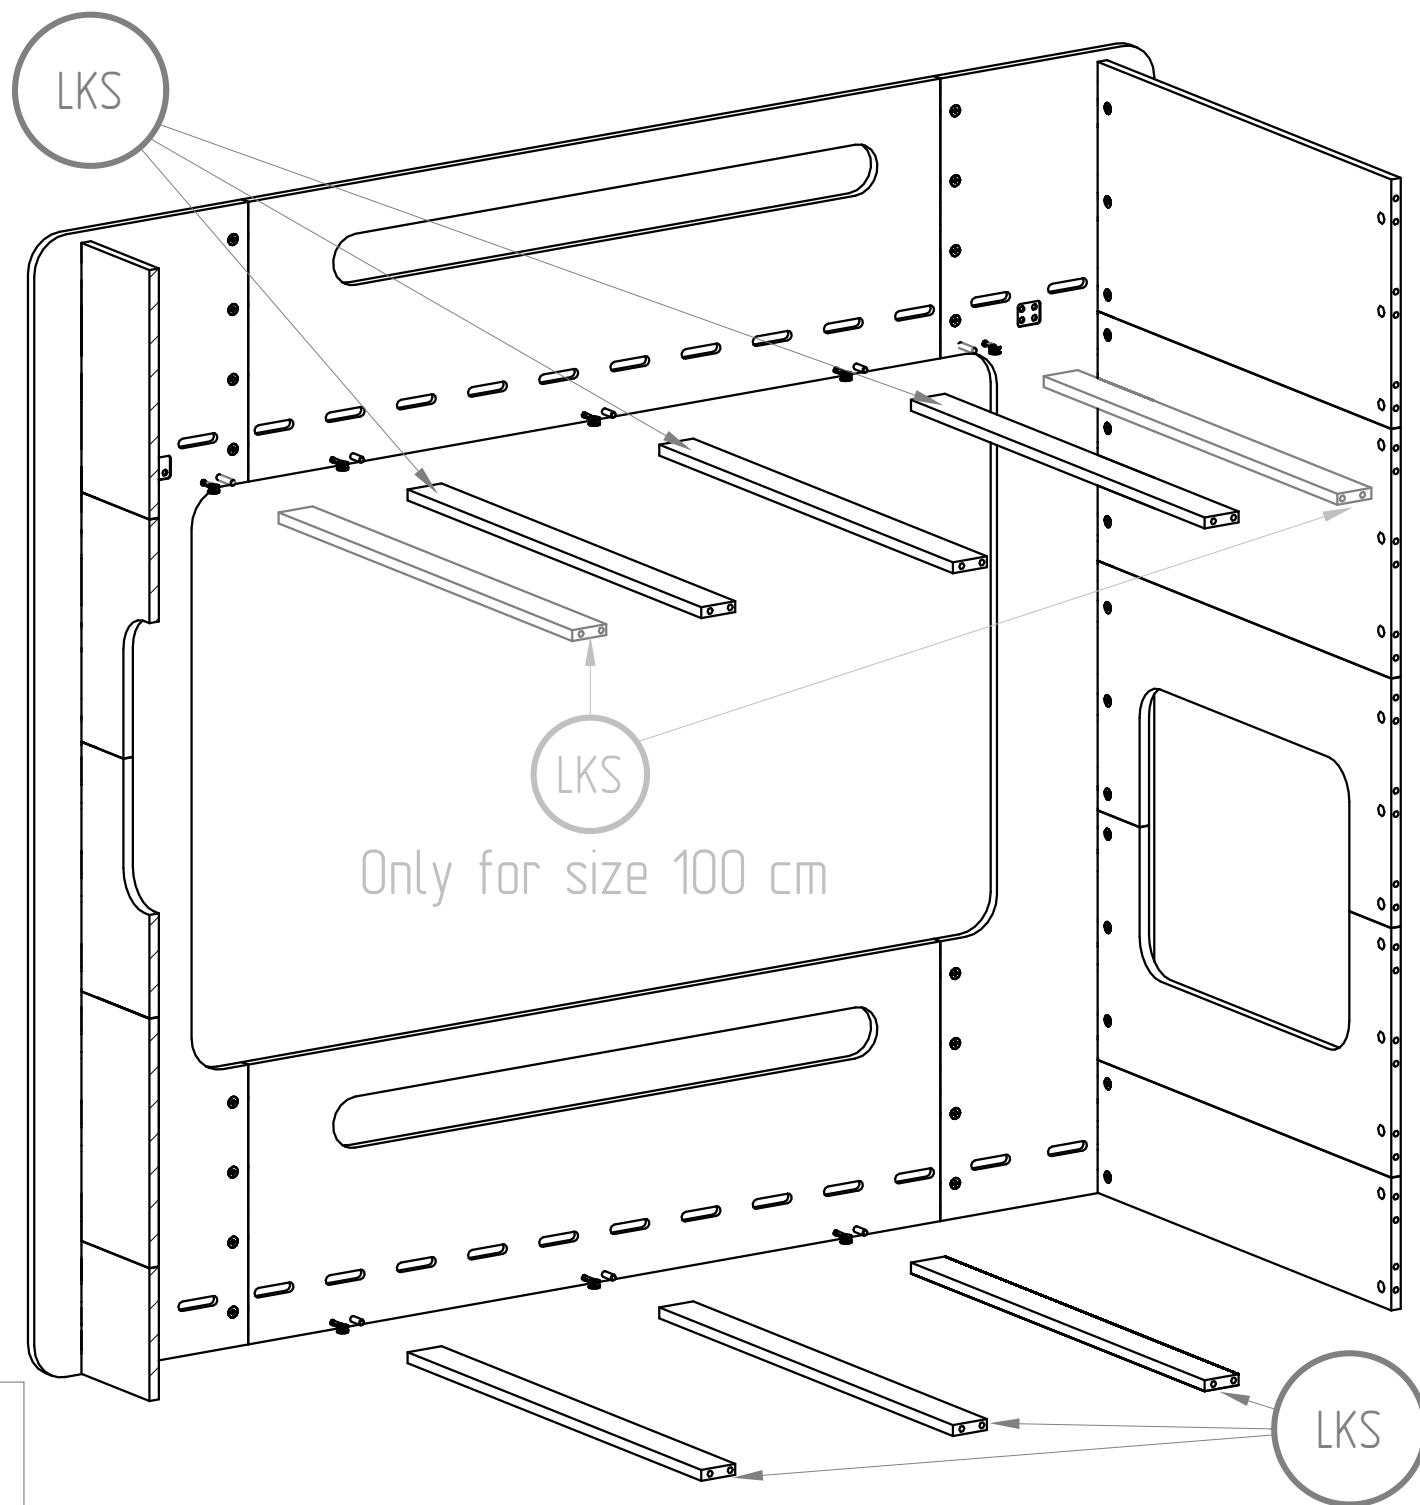





Before assembly, see pages 3, 4, 5

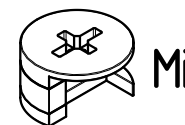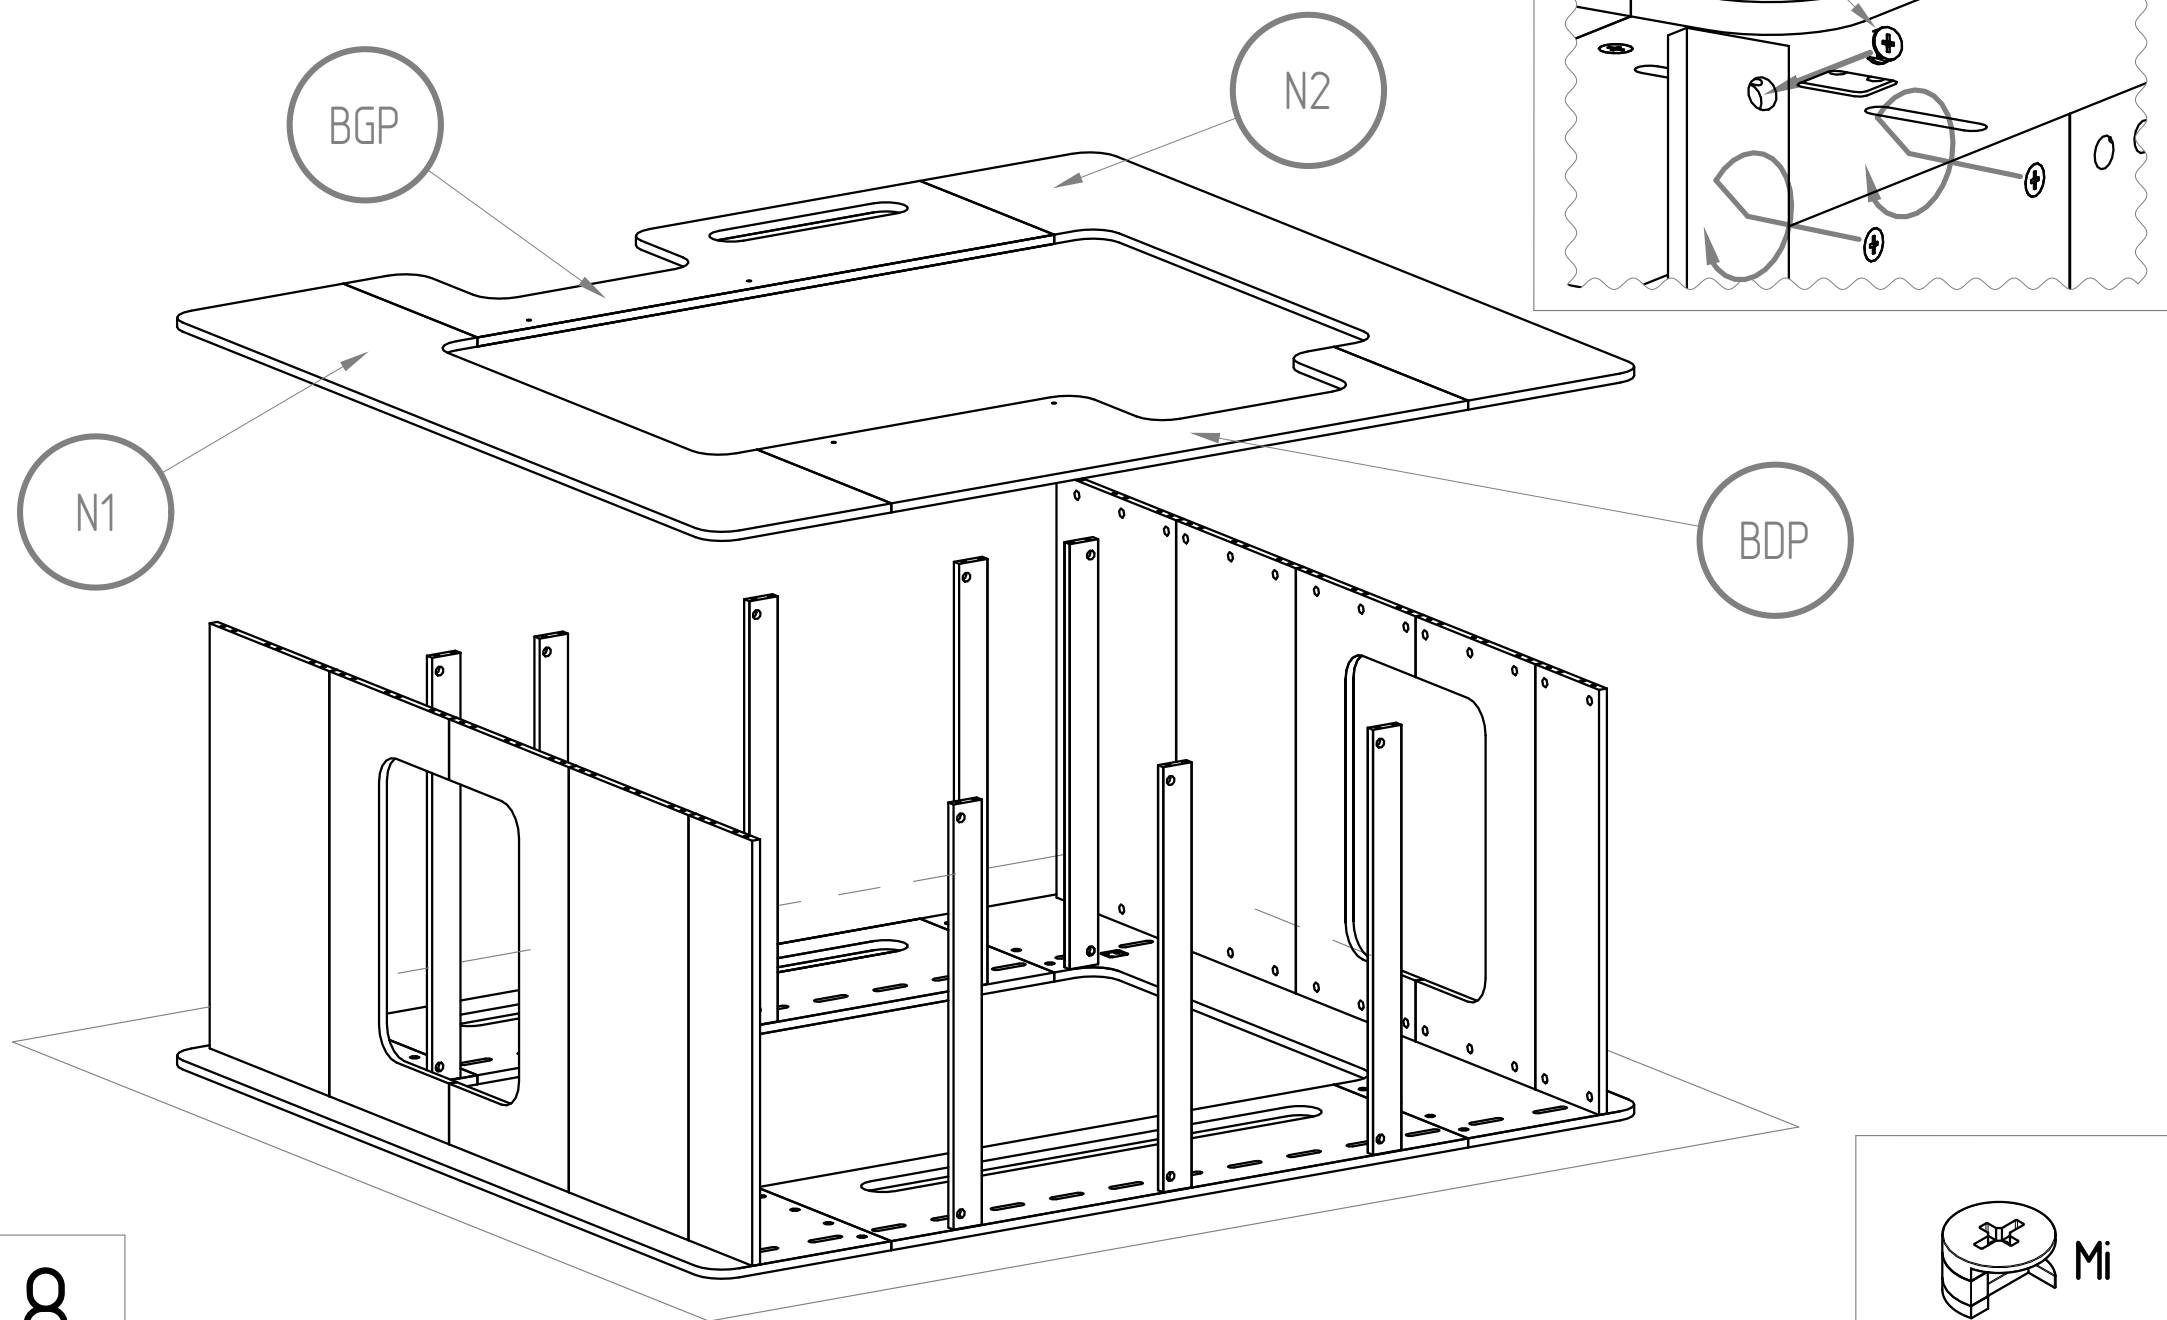

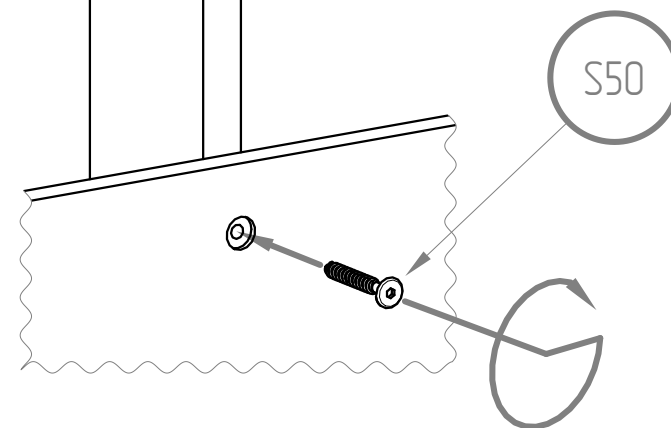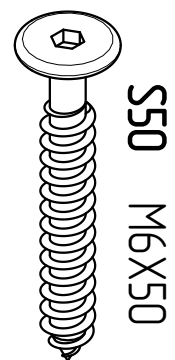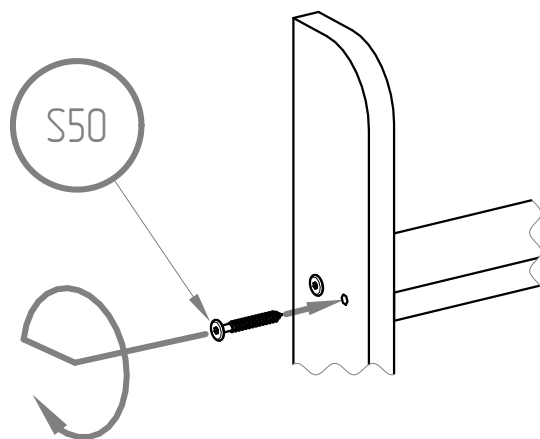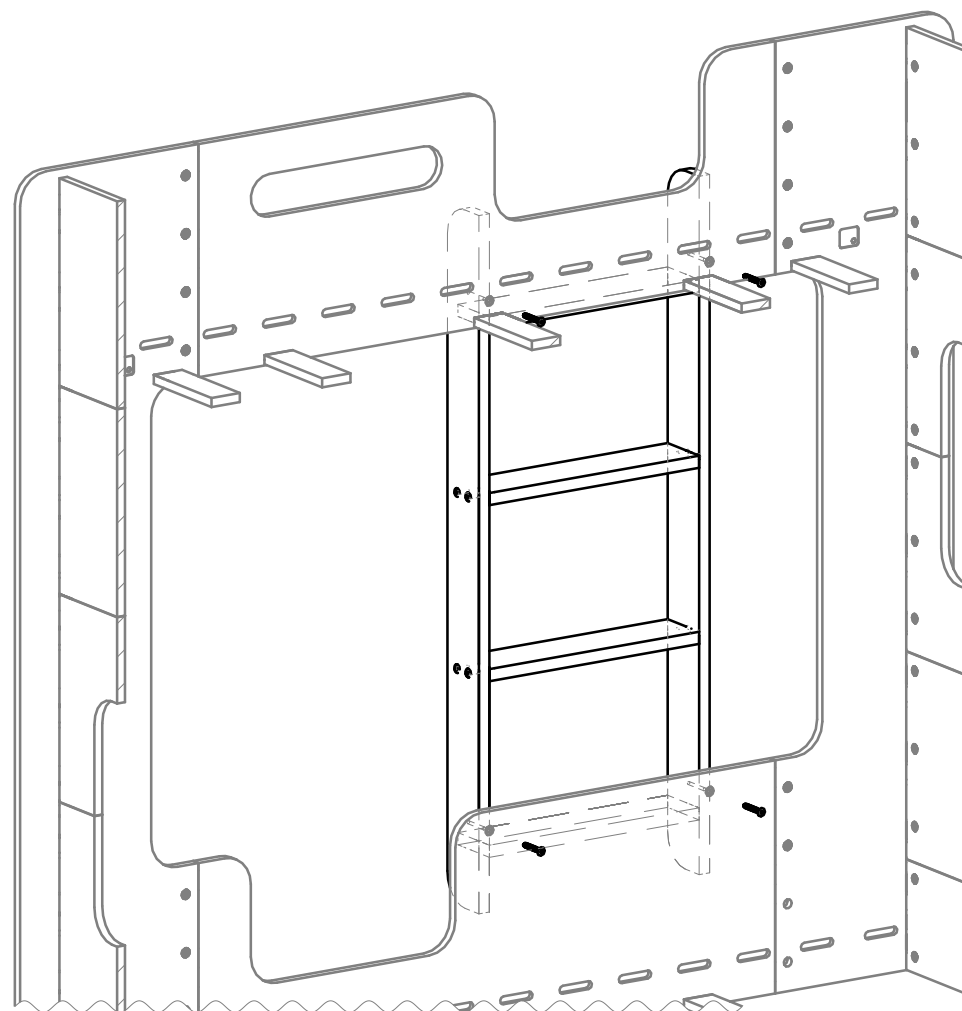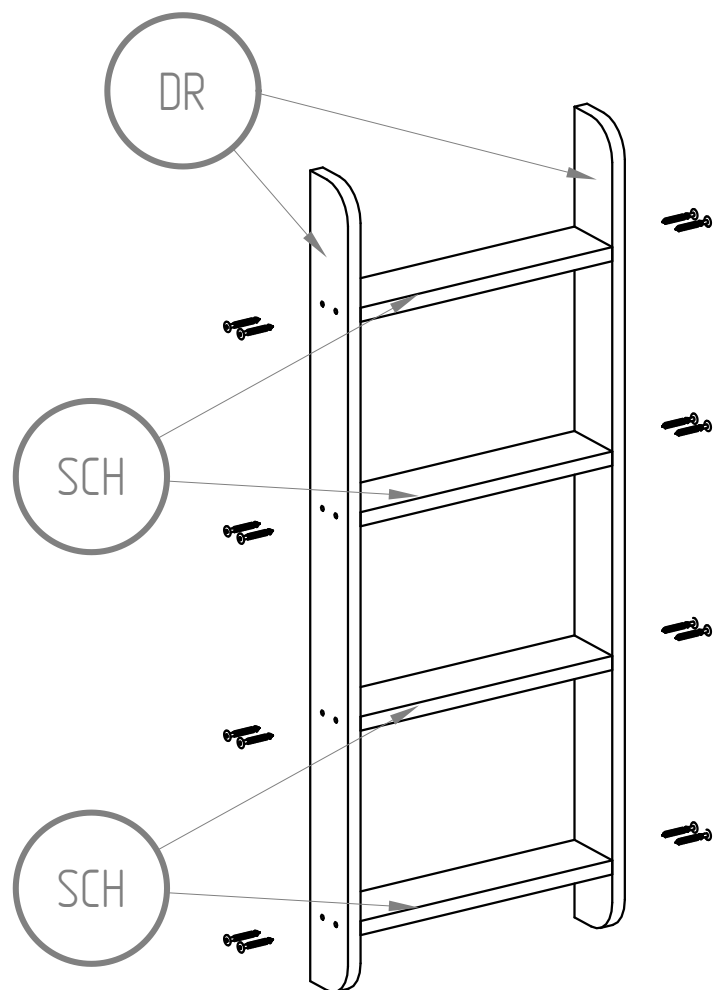

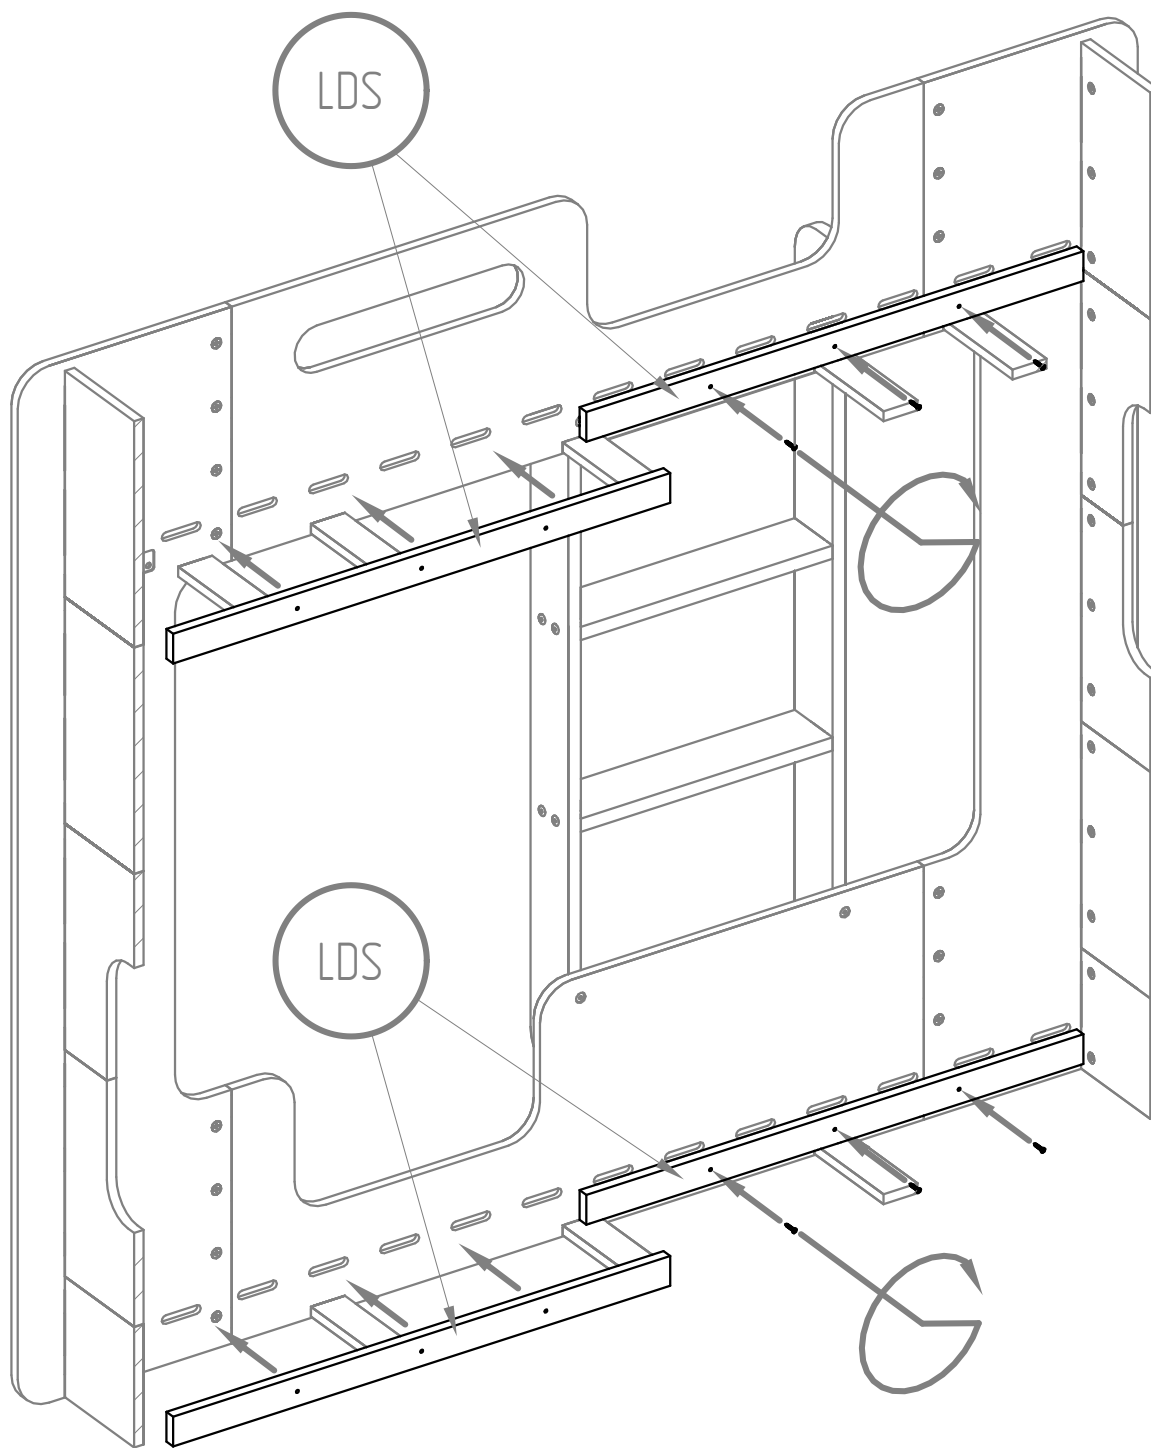

The same situation
on the other side

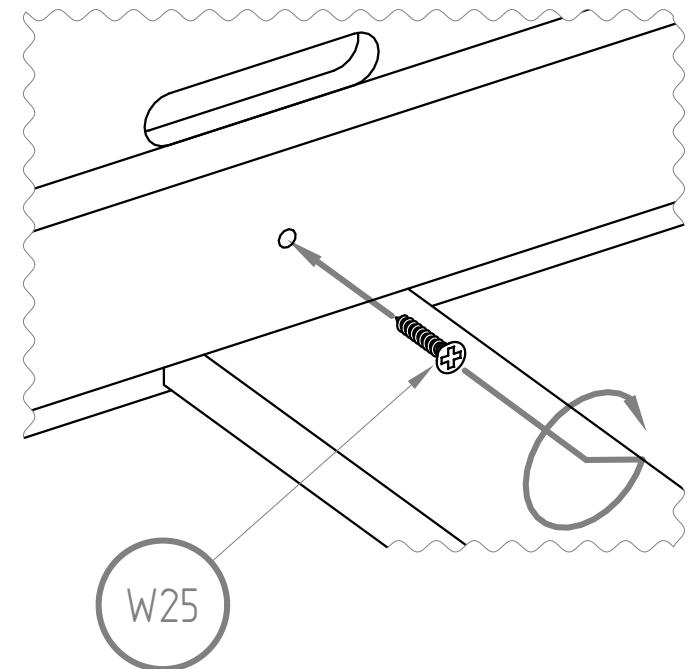

Important!

Install the plastic caps before assembling the ST spring slats to the bed frame.

