



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




**Skoda Fabia III Estate Kombi  
(2014-2022)**

**FAB3K KPL**

SOLARRIDE Zaslونki do Skoda Fabia 3 III Kombi (2014-2022) KPL 3kg



5 904035 791993 >

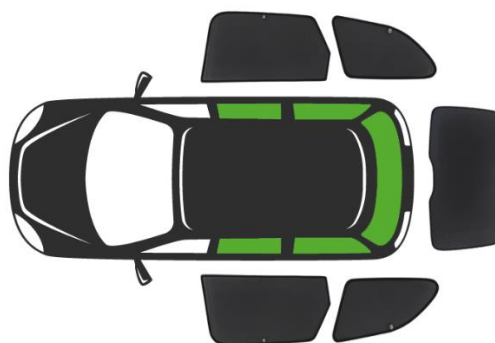


**4 x**



**4 x**



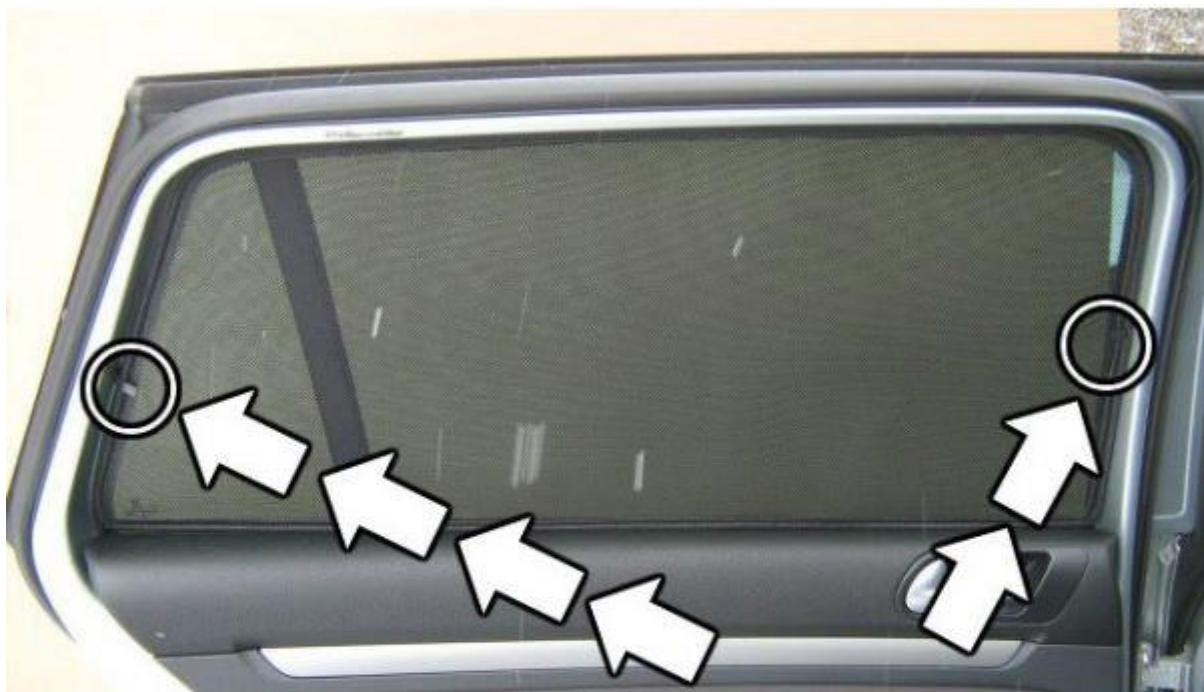



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž





