



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



**Mercedes-Benz E-CLASS S210 Estate
(1996-2003)**


W210K BEZ KL

SOLARRIDE / SolarRide / solar shades Mercedes-Benz W210 E-Class Estate (1996-1999) E210L.jpg

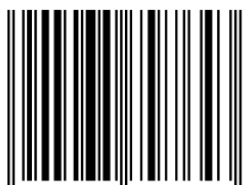


5 904035 797643 >


SOLARRIDE / SolarRide / solar shades Mercedes-Benz W210 E-Class Estate (1996-2003) E210L.jpg

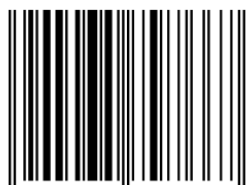


5 904035 797667 >

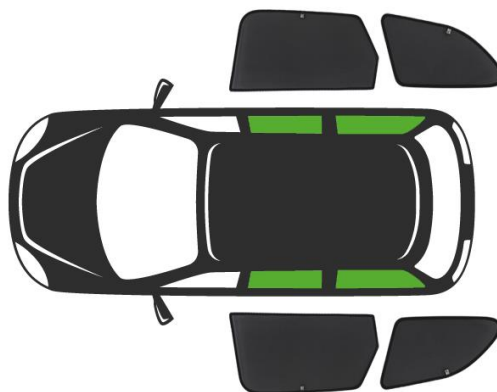

4 x

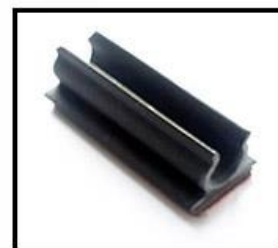

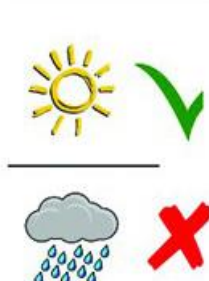

DO NOT TOUCH 24h
NO TOCAR 24h
NIE DOTYKAĆ 24h

