



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Opel Astra H Estate (2004-2014)

ASTRA HK DR

SOLARRIDE Zasklení, odložený precizně na Opel Astra H Kombi (2004-2014) DR2W 1kg

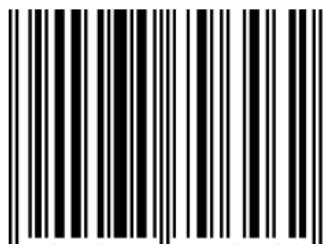

5 904035 796462 >

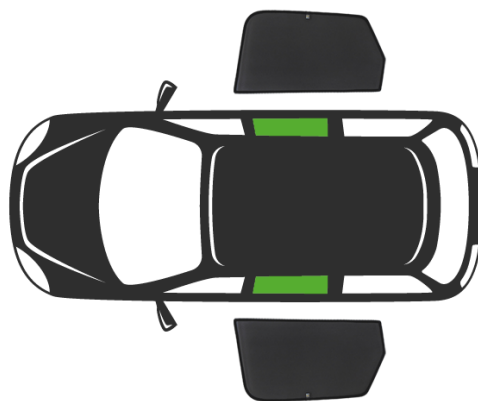

4 x



