



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



VW Volkswagen Golf V 5 3dr (2003-2009)

G5HB 3DR KPL



VW Volkswagen Golf 6 VI 3dr (2008-2012)

G6HB 3DR KPL

SOLARRIDE Zariadenie odskenujte pomocou kódu QR




5 904035 794949 >

SOLARRIDE Zariadenie odskenujte pomocou kódu QR



5 904035 794956 >

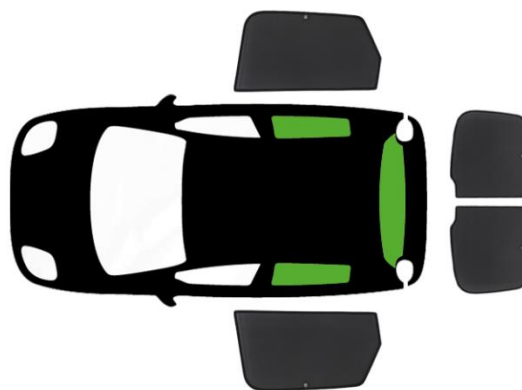

2 x







Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

