

PL - INSTRUKCJA MONTAŻU: *SZAFKA CLASSIC*
ENG - ASSEMBLY INSTRUCTIONS: *WARDROBE CLASSIC*
DE - MONTAGEANLEITUNG: *KLEIDERSCHRANK CLASSIC*






ZESTAWIENIE OKUĆ:
LIST OF FITTINGS:
AUSSTATTUNGSLISTE:

10 x
Nockenschloss
Cam lock
Mimośród


4 x
Knopf + Schraube
Knob + Screw
Gałka + wkręt

44 x
Schrauben 3,5x16
Screw 3,5x16
Wkręt 3,5x16

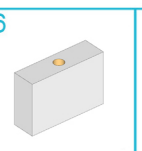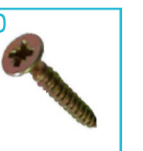
									
Klucz „4” Wrench „4” Schlüssel „4” 1 x	Komfirmat Comfirmat screw Bestätigung 18 x	Trzpień Cam lock bolt Nockenverriegelungs bolzen 10 x		Kołek 8x35 Dowel 8x35 Holzdübel 8x35 24 x	Noga Leg Bein 4 x	Gwóźdź Nails Nagel 60 x		Prowadnice Guides Schubladenführungen 1 x	

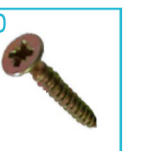		
Bolec Prong Zinke 8 x	Zawias Hinge Scharnier 6 x	Uchwyt drążka Hanger holder Kleiderbügelhalter 4 x

ZESTAWIENIE ELEMENTÓW:
LIST OF ELEMENTS:
LISTE DER ELEMENTE:

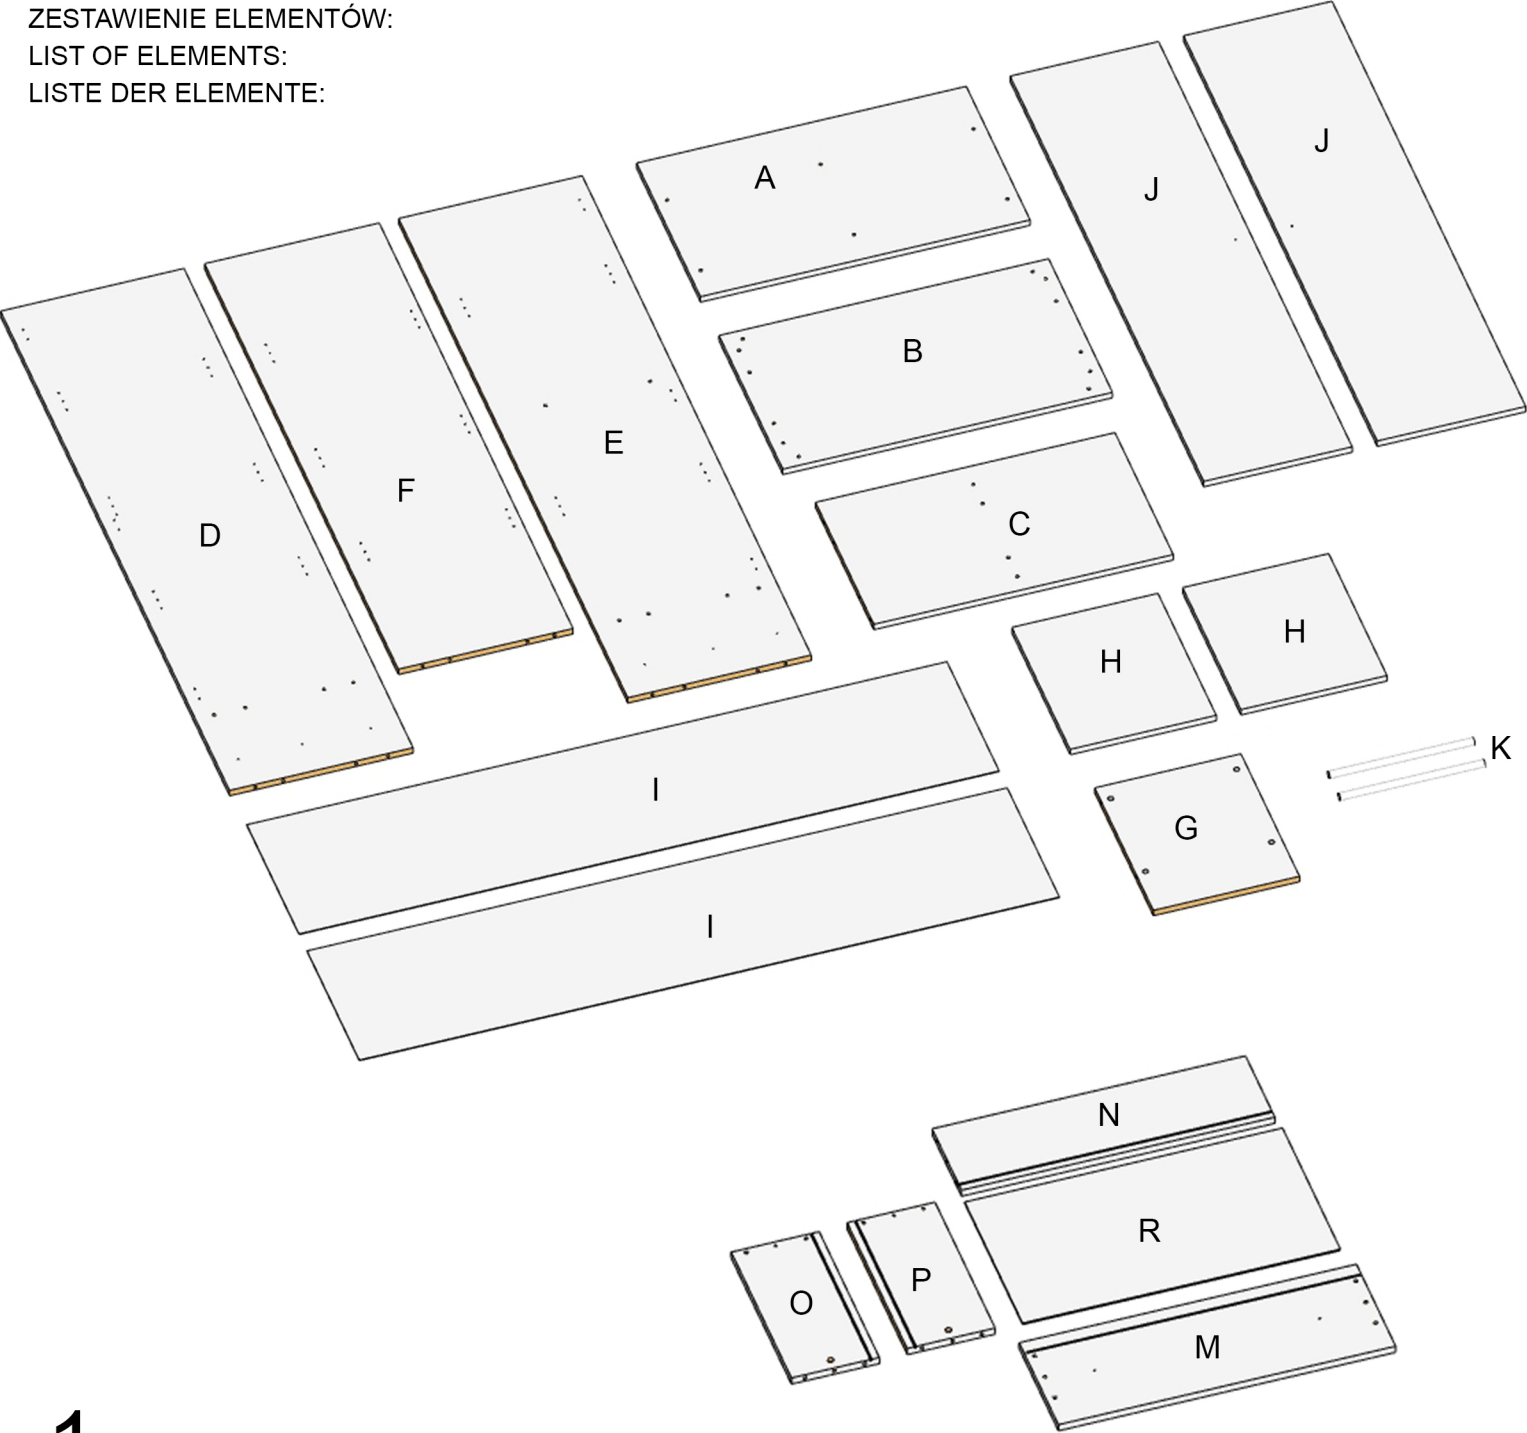

1 ROZDZIELENIE PROWADNICY
GUIDE SEPARATION
FÜHRUNGSABTEILUNG

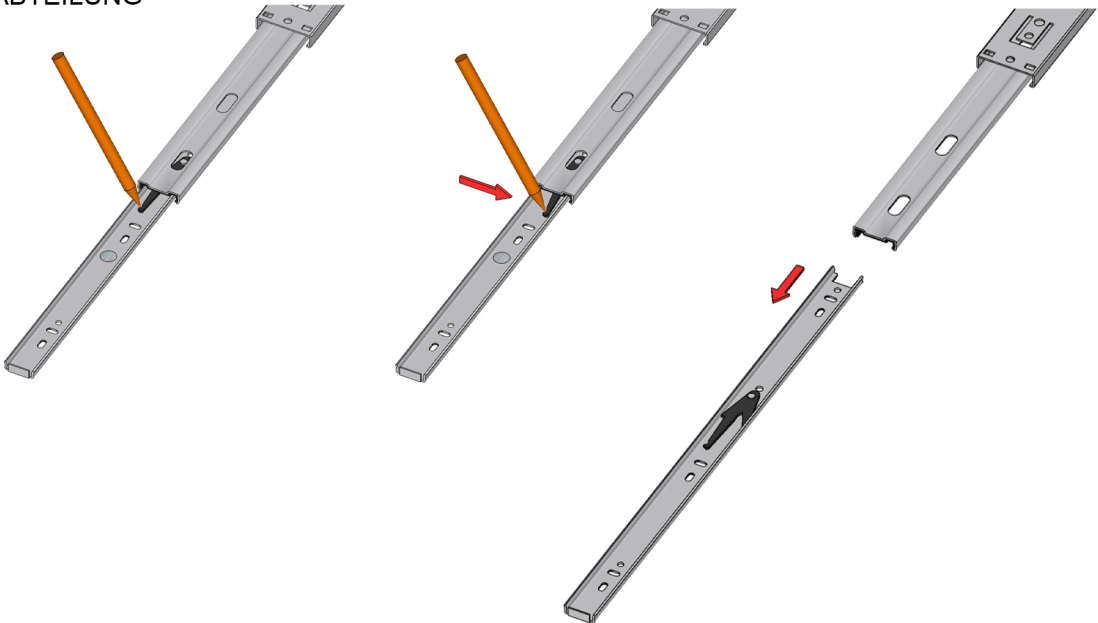


A 3D exploded view of a mechanical assembly. The main component is a large, light gray rectangular plate labeled "D/E". It has two small yellow circular features at the top corners, each labeled "5". At the bottom right, there are two small clusters of three colored dots (red, yellow, and blue) each labeled "3". Below the main plate, there are two smaller components. The one on the left is a light gray plate labeled "O/P" with a black track and a small black component. It has dimensions "10", "10", and "9" labeled. The one on the right is a black track with a small black component, labeled "10", "9", and "5".


Figure 1 shows three rectangular plates, labeled C, F, and G, in a 3D perspective view. Plate C is a rectangular plate with dimensions 5 (width) by 4 (height). Plate F is a rectangular plate with dimensions 5 (width) by 3 (height). Plate G is a rectangular plate with dimensions 4 (width) by 4 (height). The plates are shown with their respective dimensions and fastener locations indicated by small circles and numbers.

4


WIDOK SZAFY OD TYŁU
 BACK VIEW OF THE WARDROBE
 RÜCKANSICHT DES KLEIDERSCHRANK

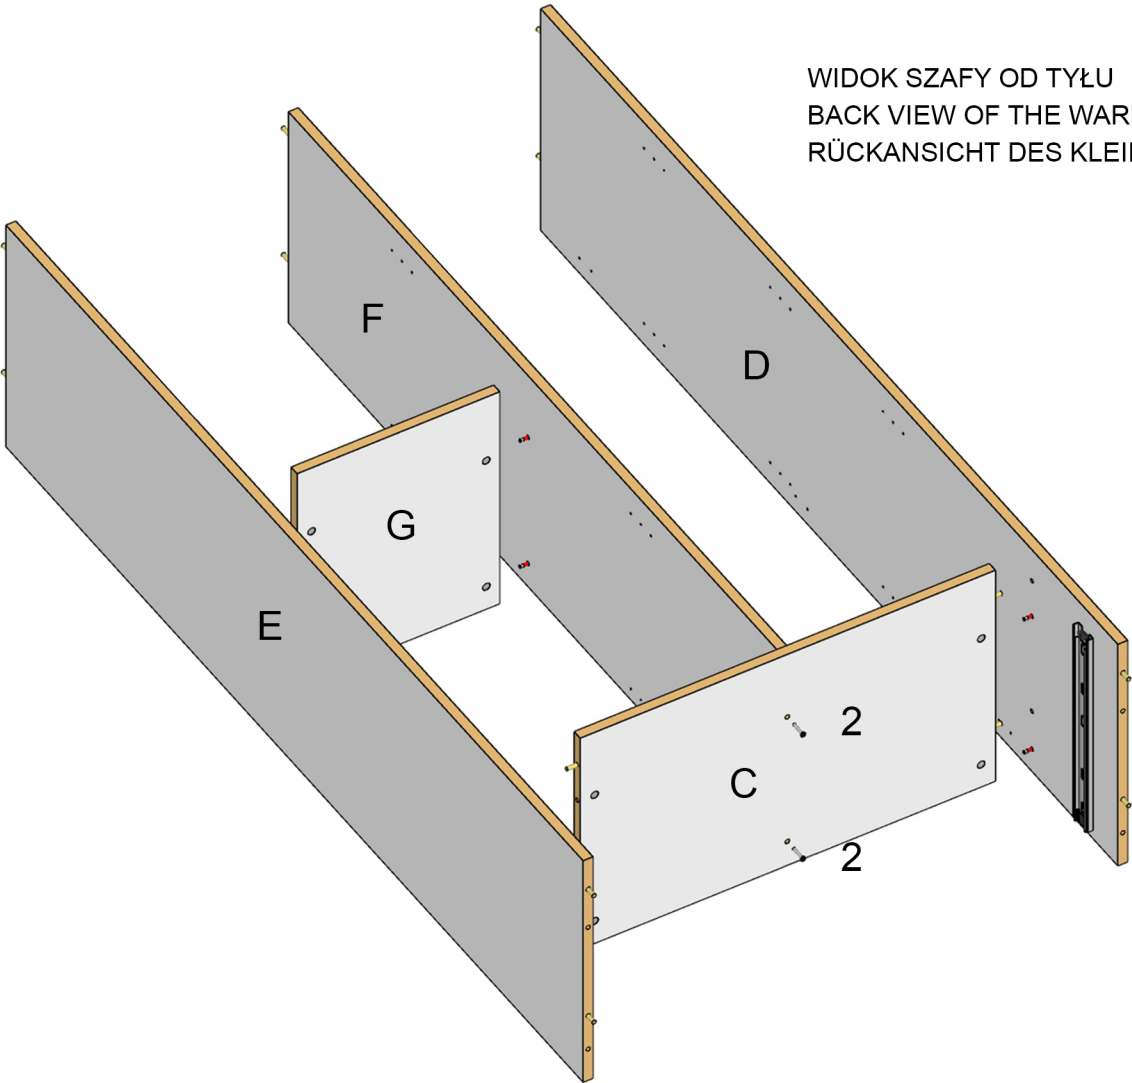


5

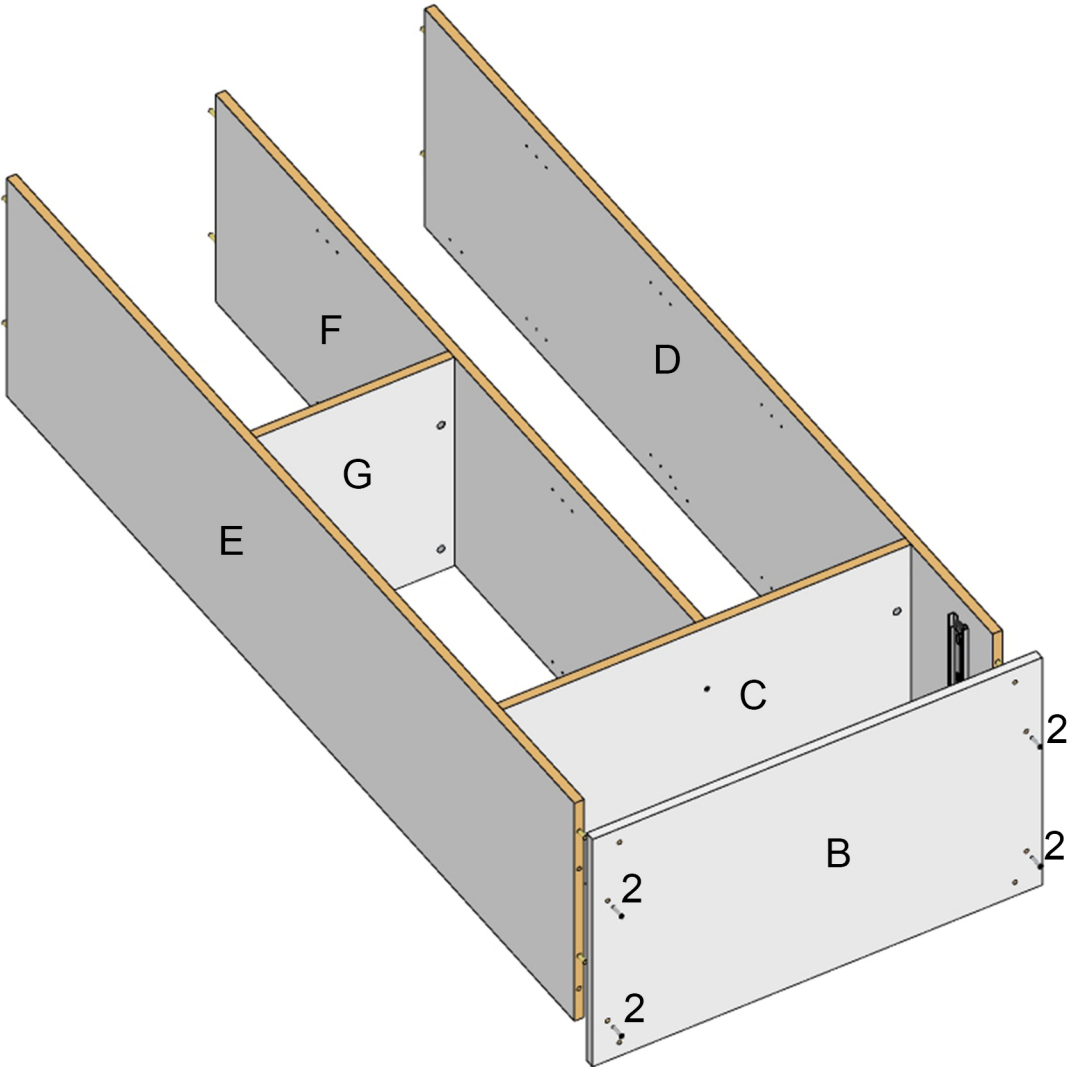

6

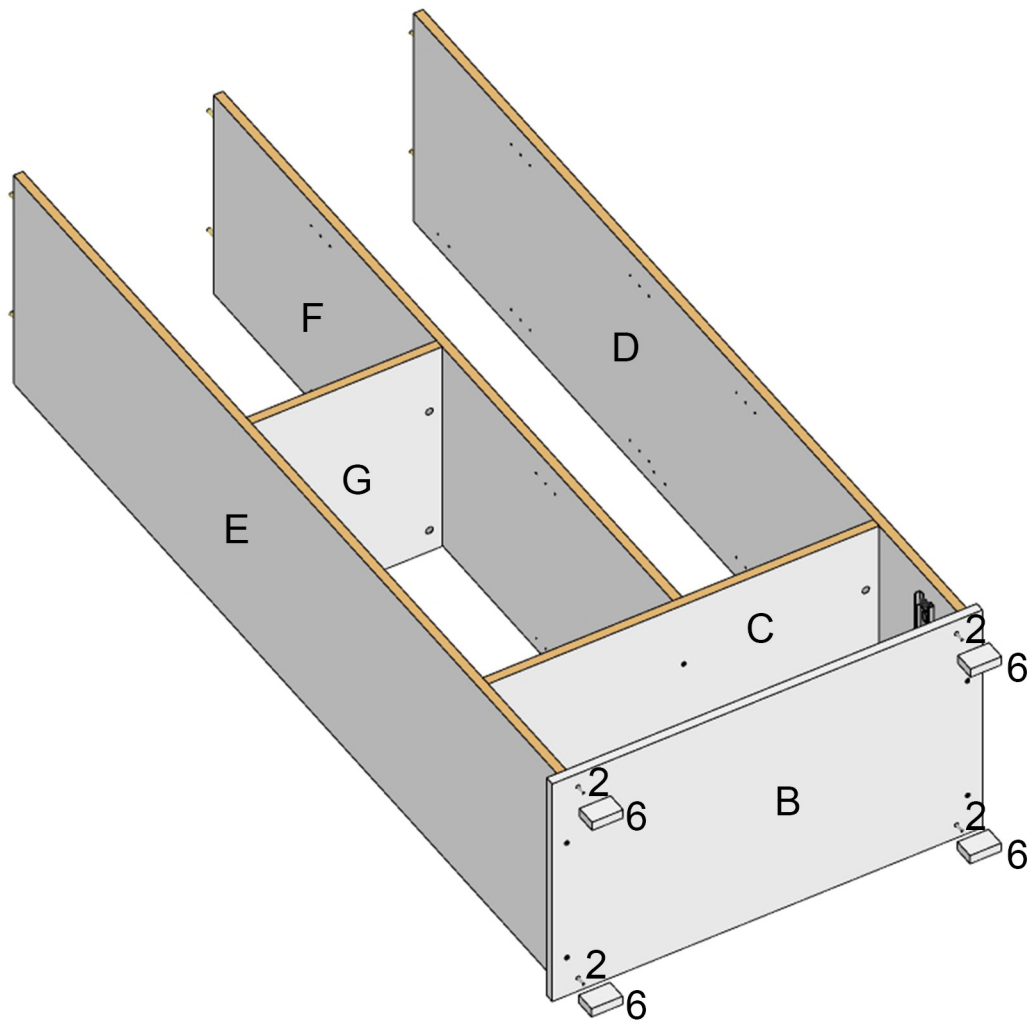

7

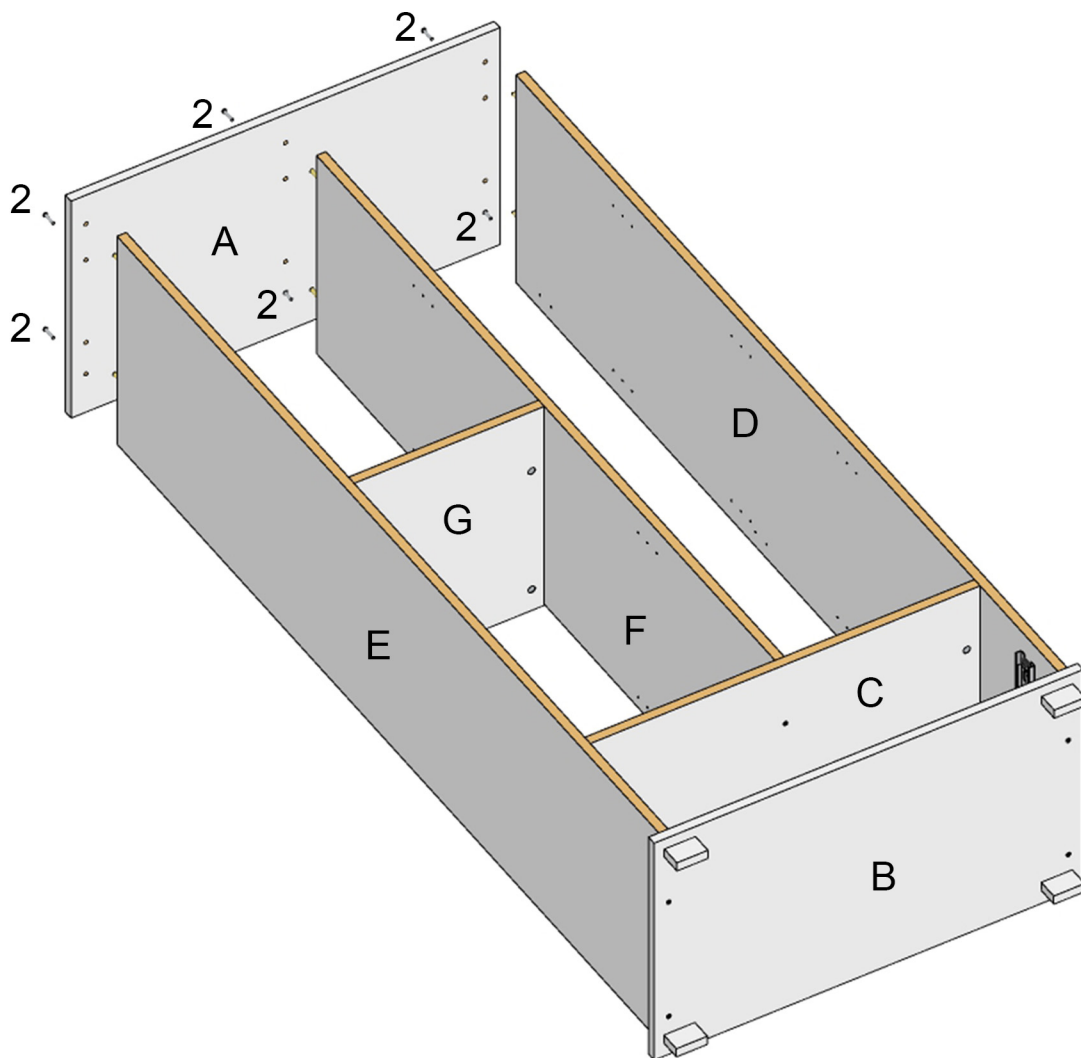


8

UWAGA! PRZED MONTAŻEM CZĘŚCI „I” SPRAWDŹ PRZEKĄTNĄ!!!

NOTE! BEFORE INSTALLING PART "I", CHECK THE DIAGONAL!!!

AUFMERKSAMKEIT! VOR DER MONTAGE VON TEIL „I“ DIE DIAGONALE PRÜFEN!!!

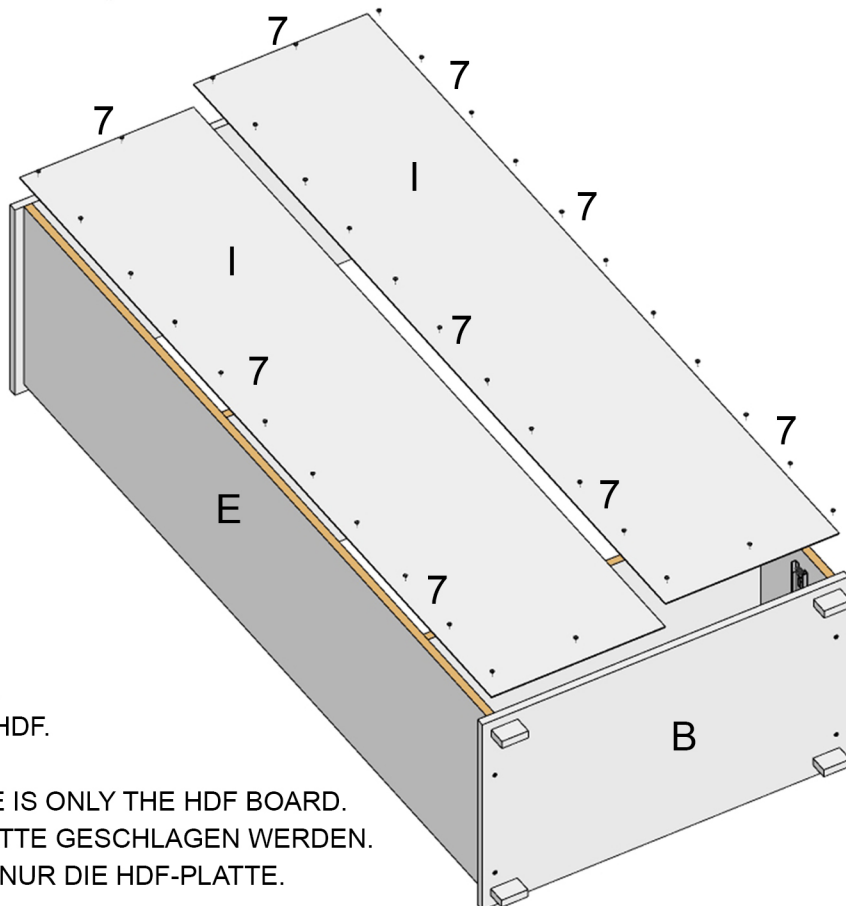

UWAGA! GWOŹDZIE NALEŻY WBIJAĆ DO PŁYTY.

PRZEZ ŚRODEK SZUFLADY JEST TYLKO PŁYTA HDF.


NOTE! NAILS SHOULD BE HIT INTO THE BOARD.

THROUGH THE MIDDLE OF THE DRAWER THERE IS ONLY THE HDF BOARD.


AUFMERKSAMKEIT! NÄGEL MÜSSEN IN DIE PLATTE GESCHLAGEN WERDEN.

DURCH DIE MITTE DER SCHUBLADE VERLÄUFT NUR DIE HDF-PLATTE.


9

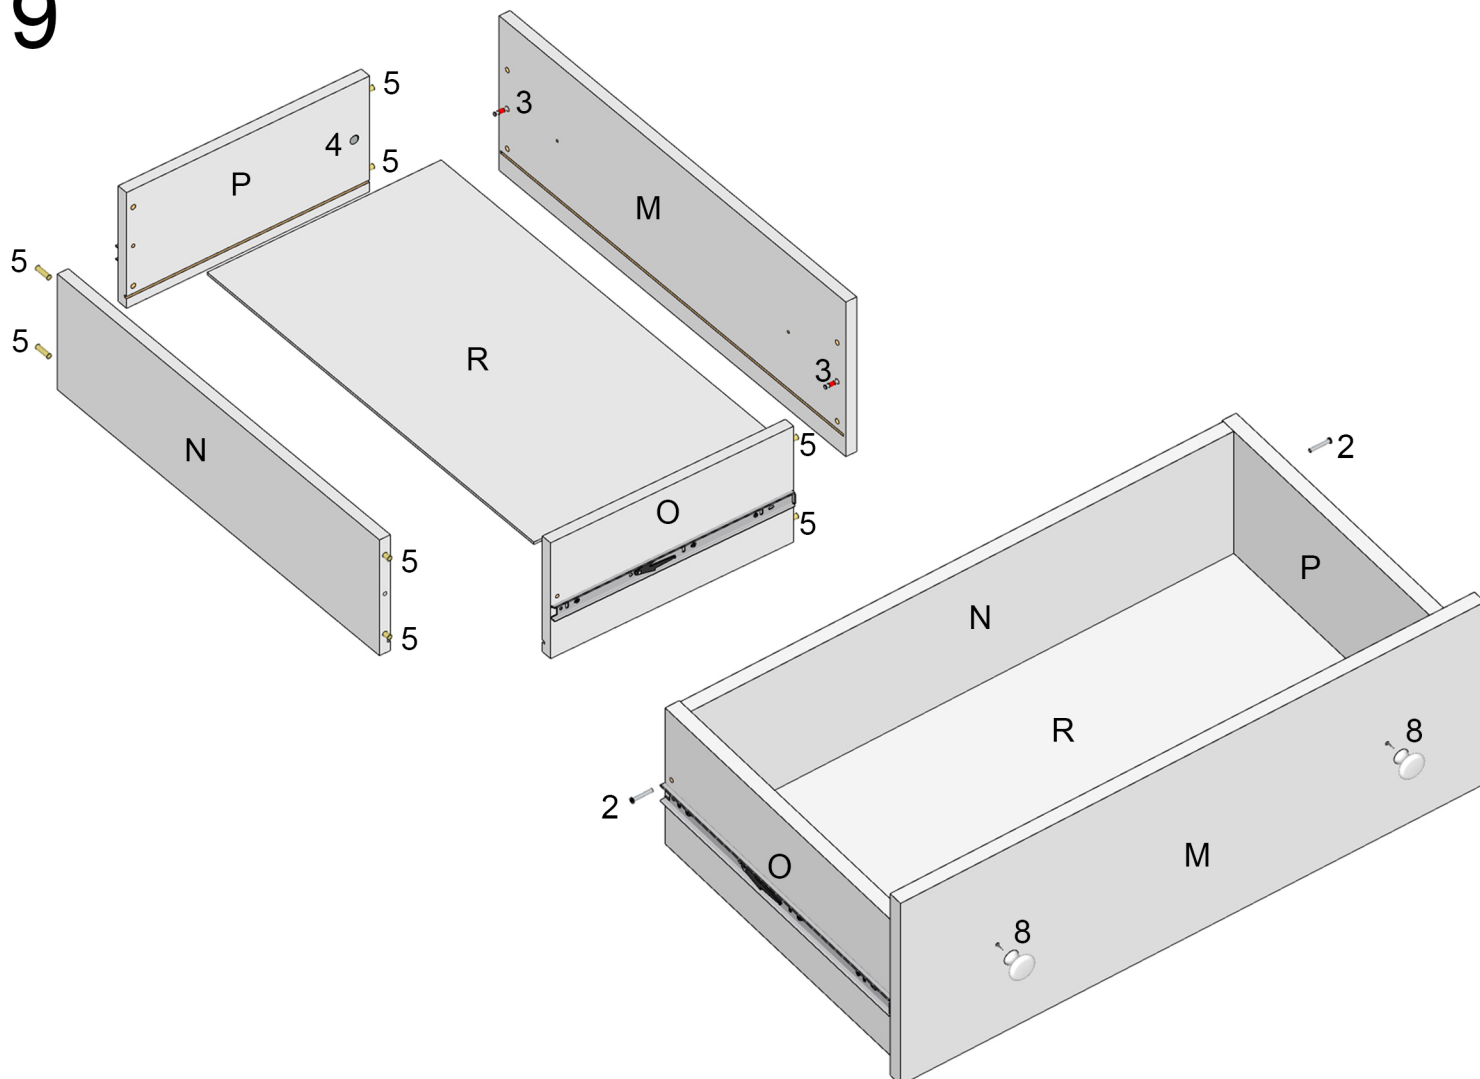


10

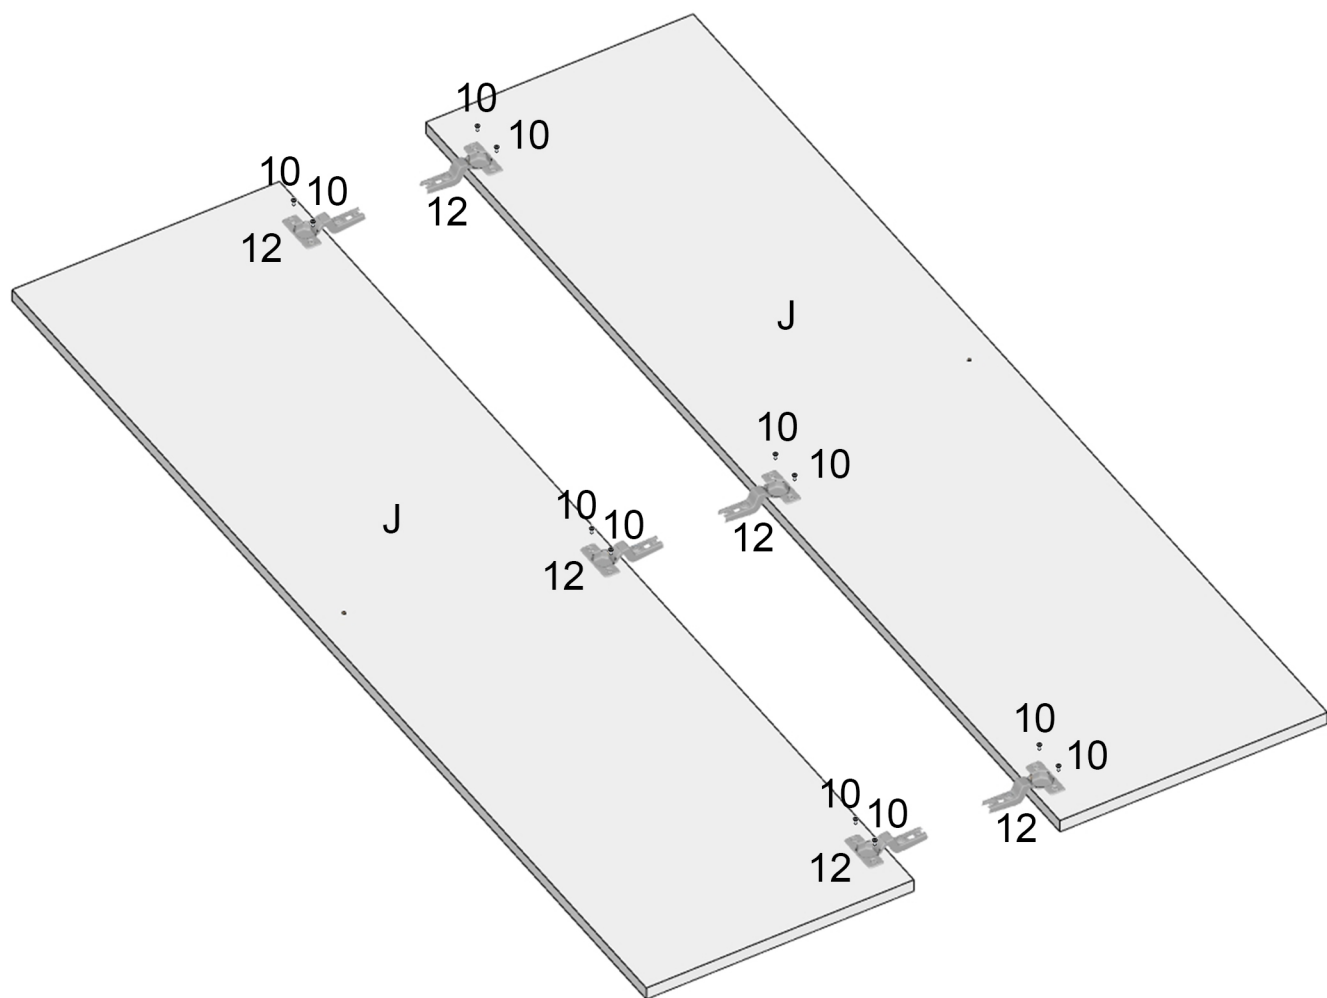

11

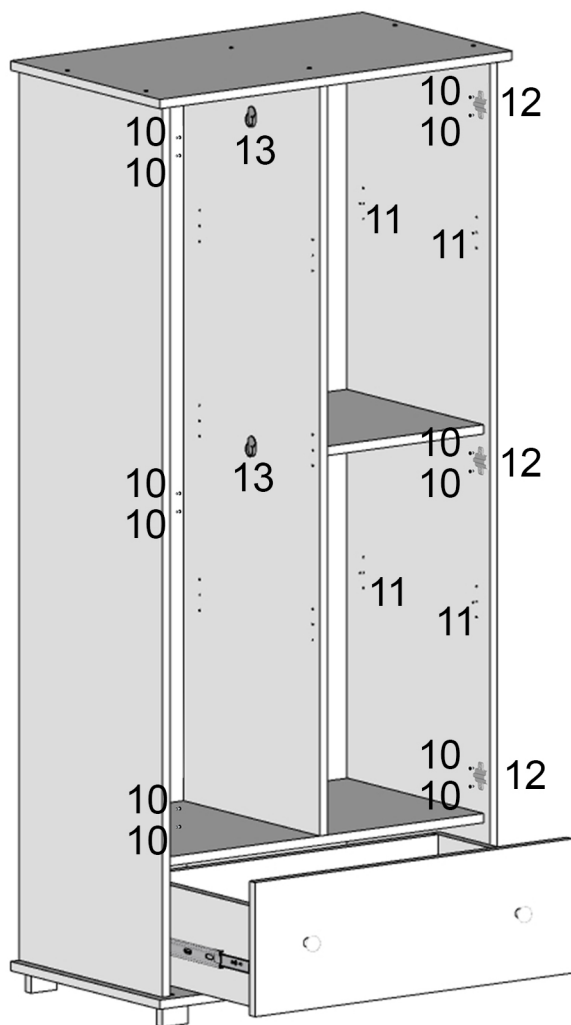

14

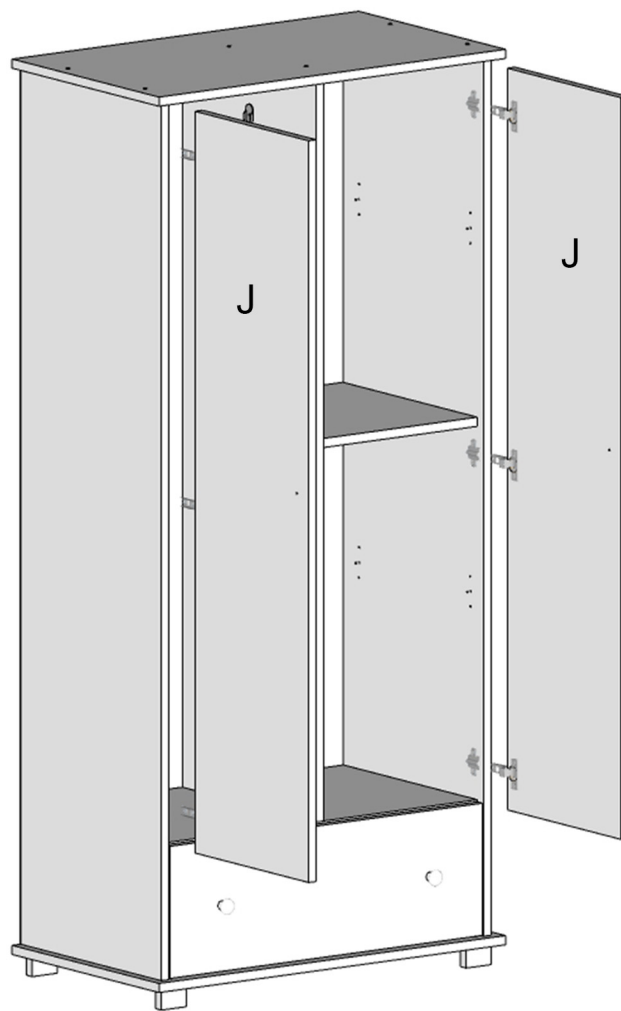

15

