


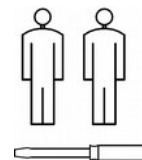










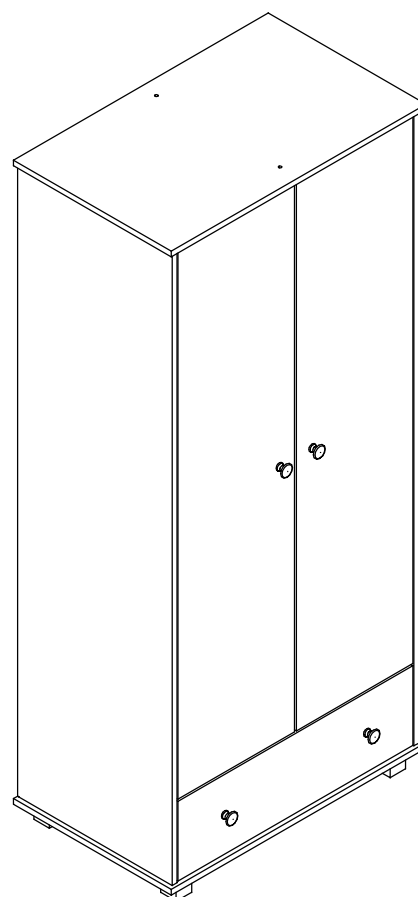
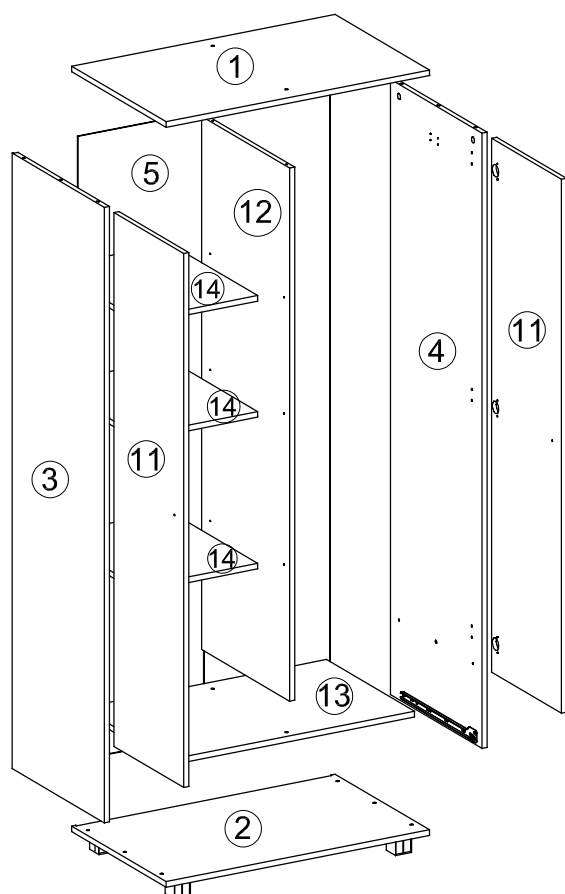


SAFARI

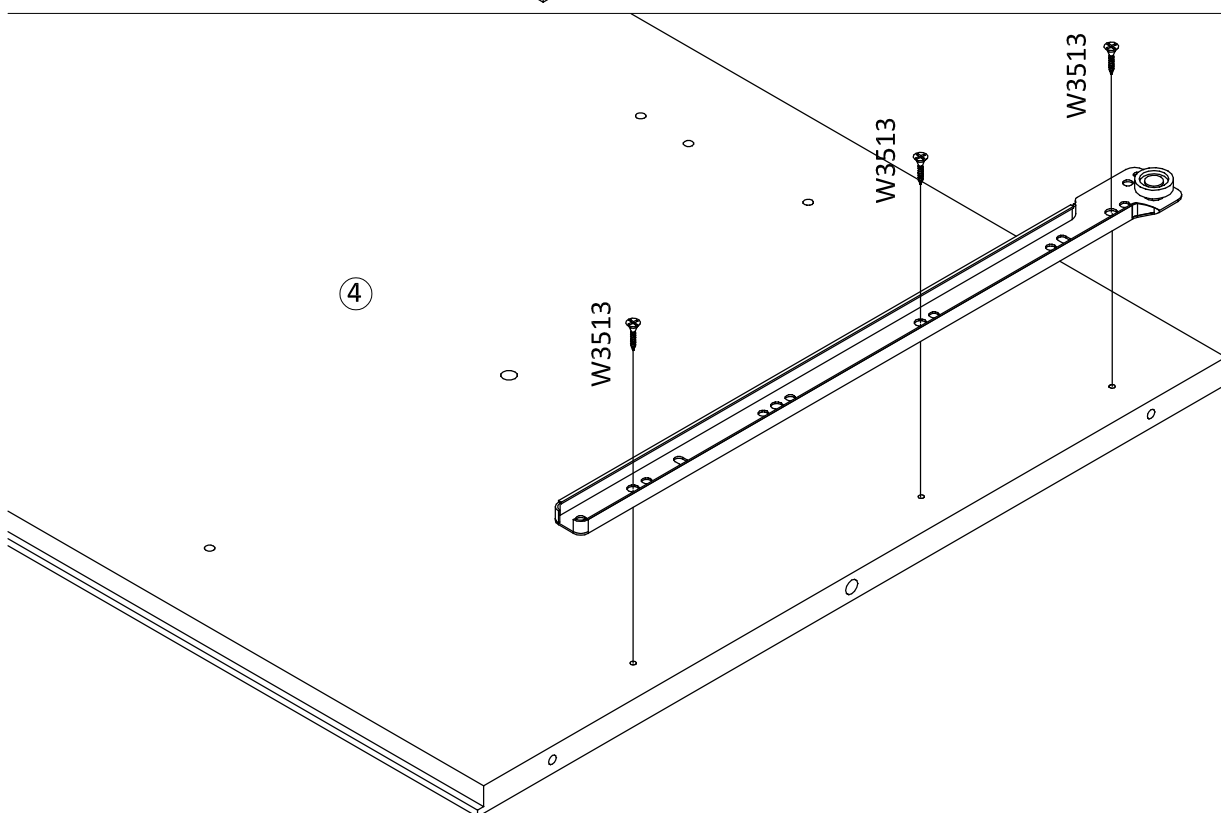


	MT	x12		M	x12		WK5	x12		D8	x6		W3516	x19		W3513	x14		S1	x4
	W3525	x8		U1	x4		W4128	x4		ZL	x6		D0	x2		D1	x1		A04	x12
	A02	x50		A09	x3			PR	x1		A06	x1		A05	x1		A01	x1		

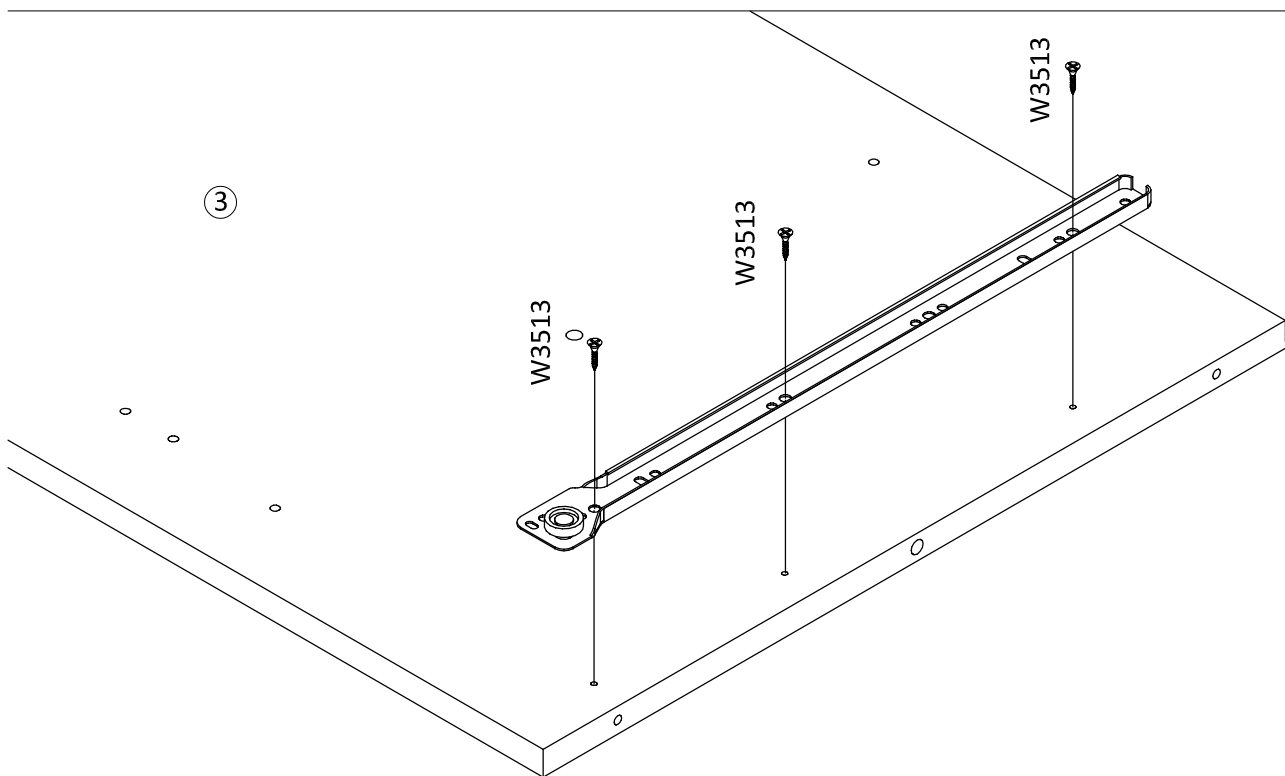


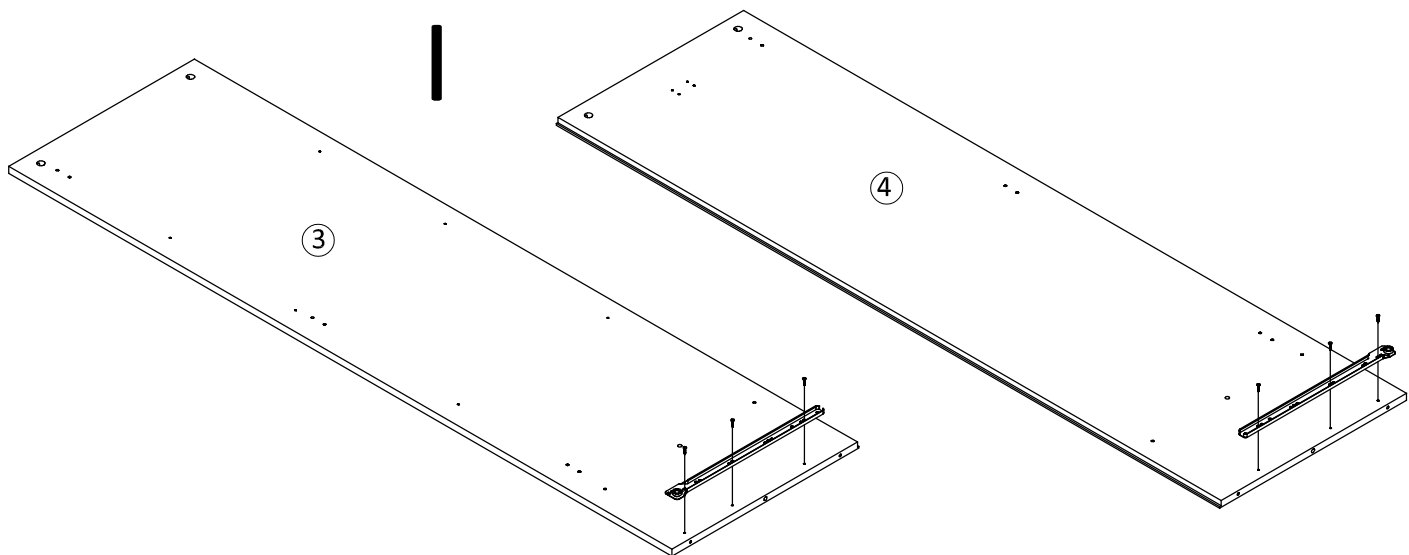






II

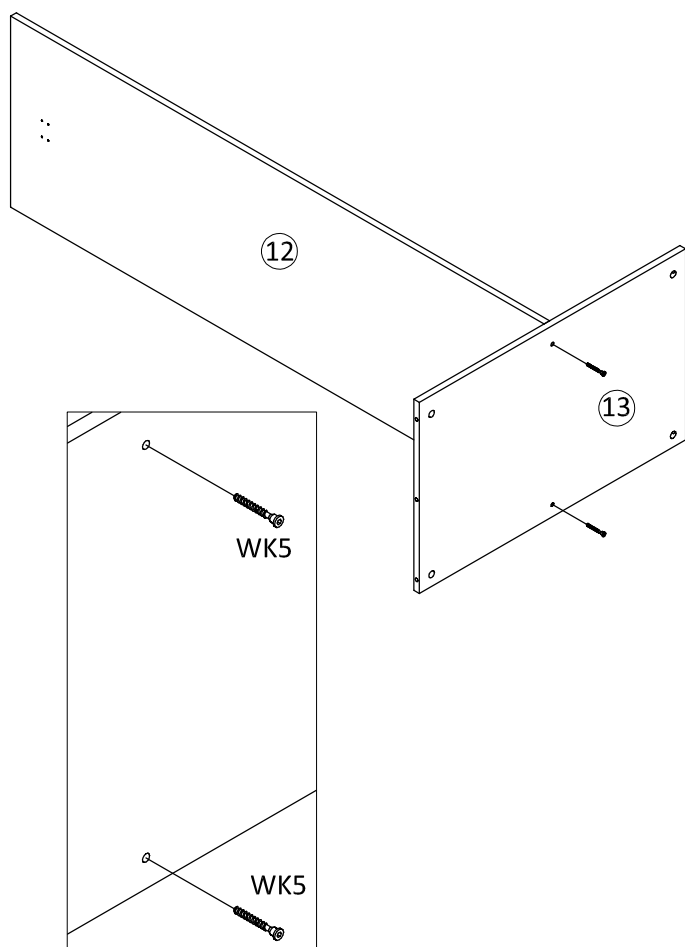

III


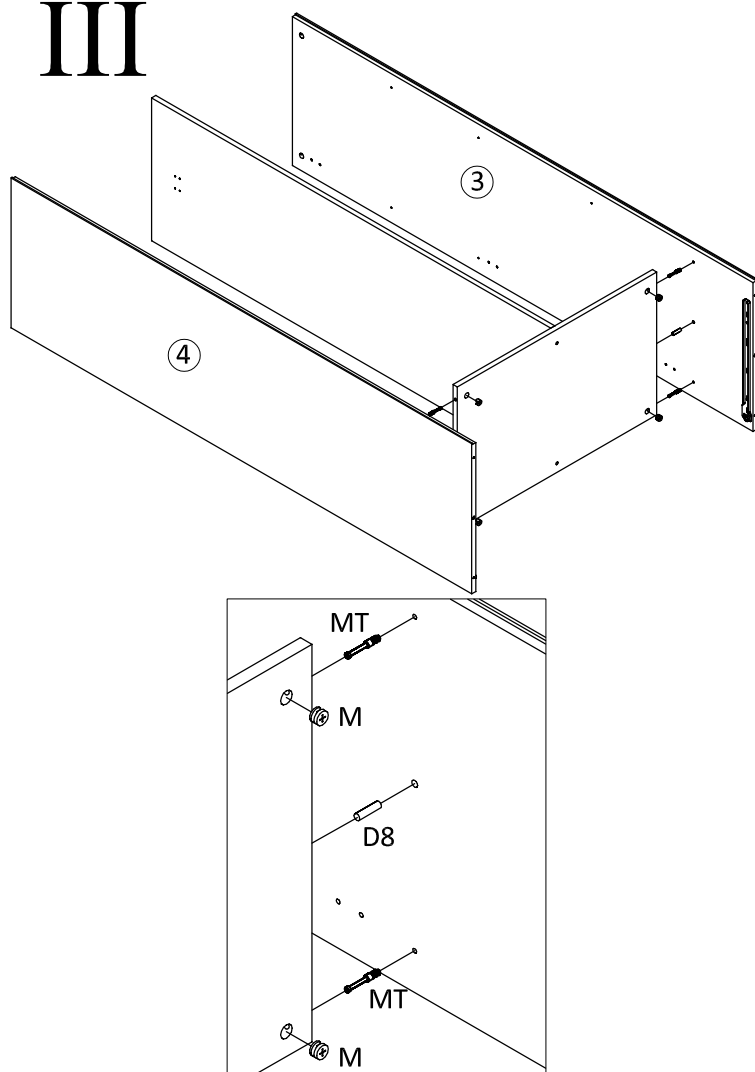


V

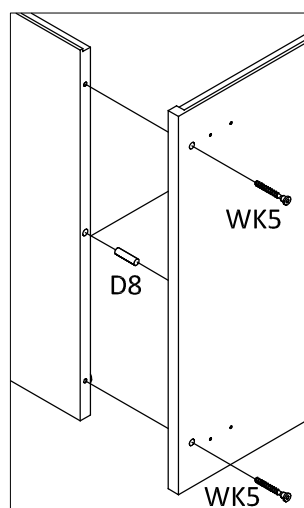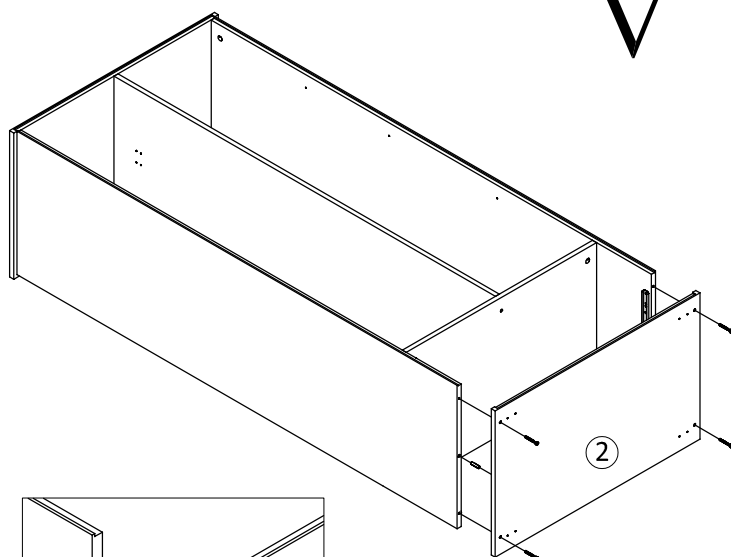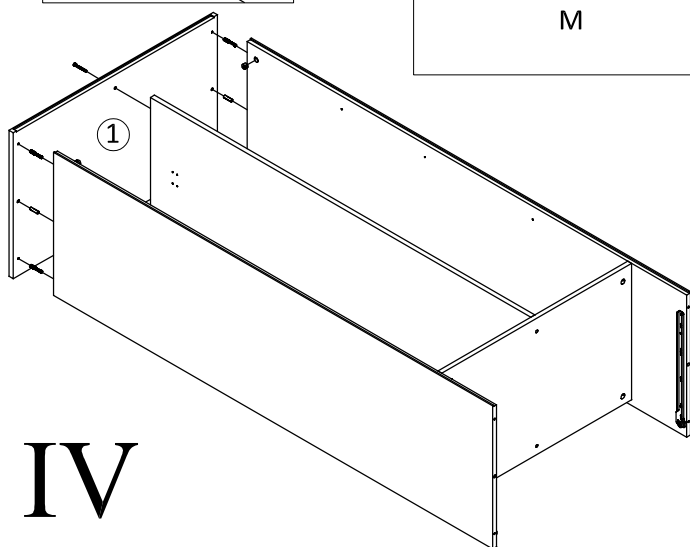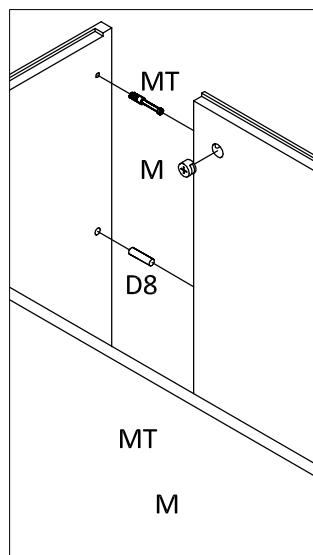
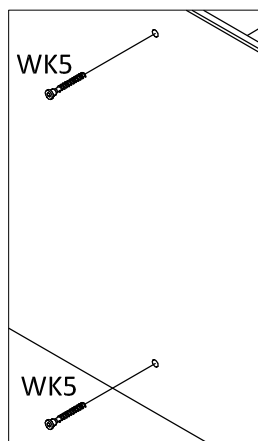


IV


VI

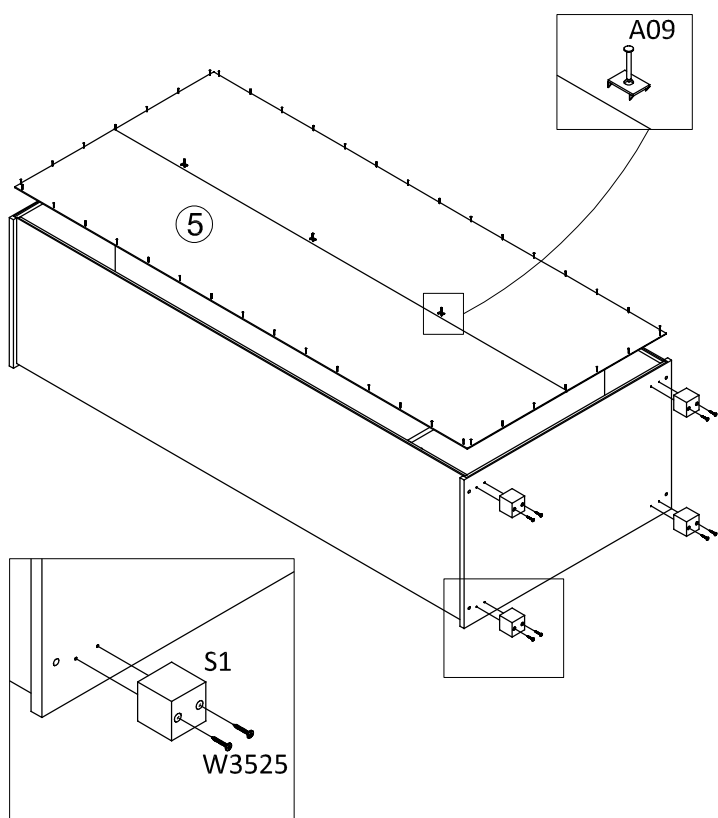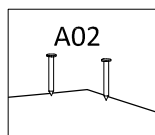




VII

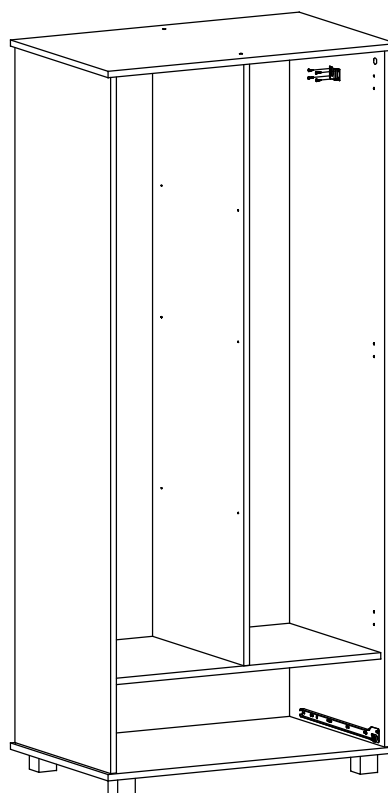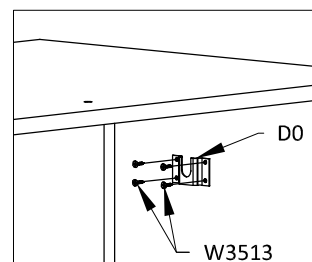


VIII

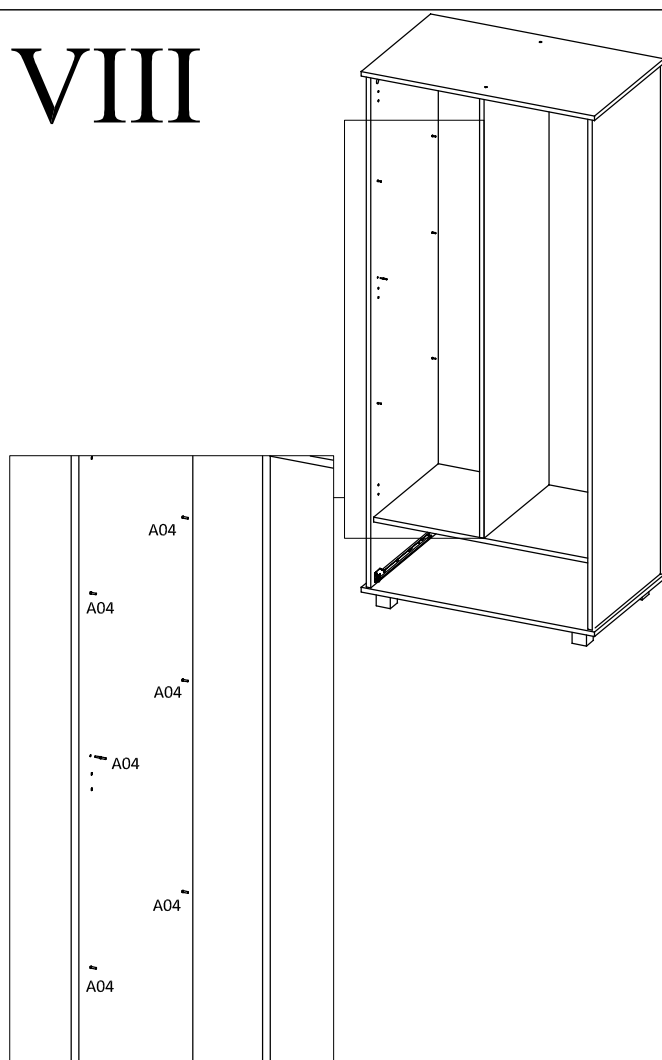


IX

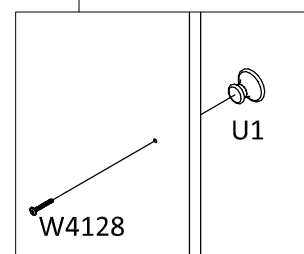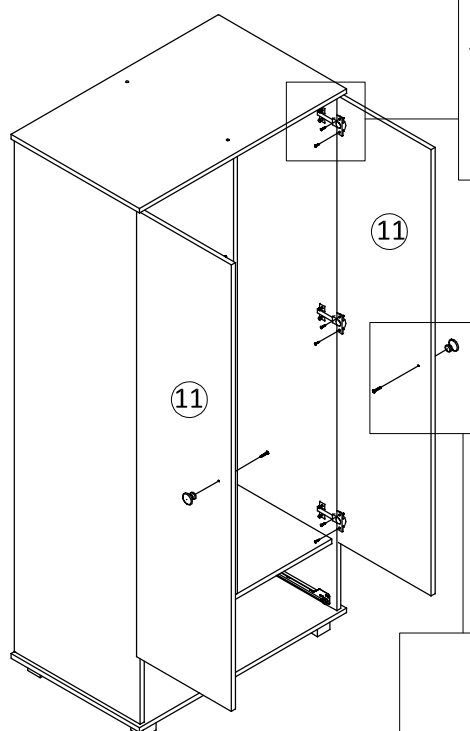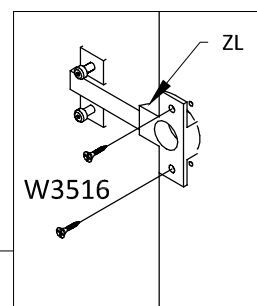


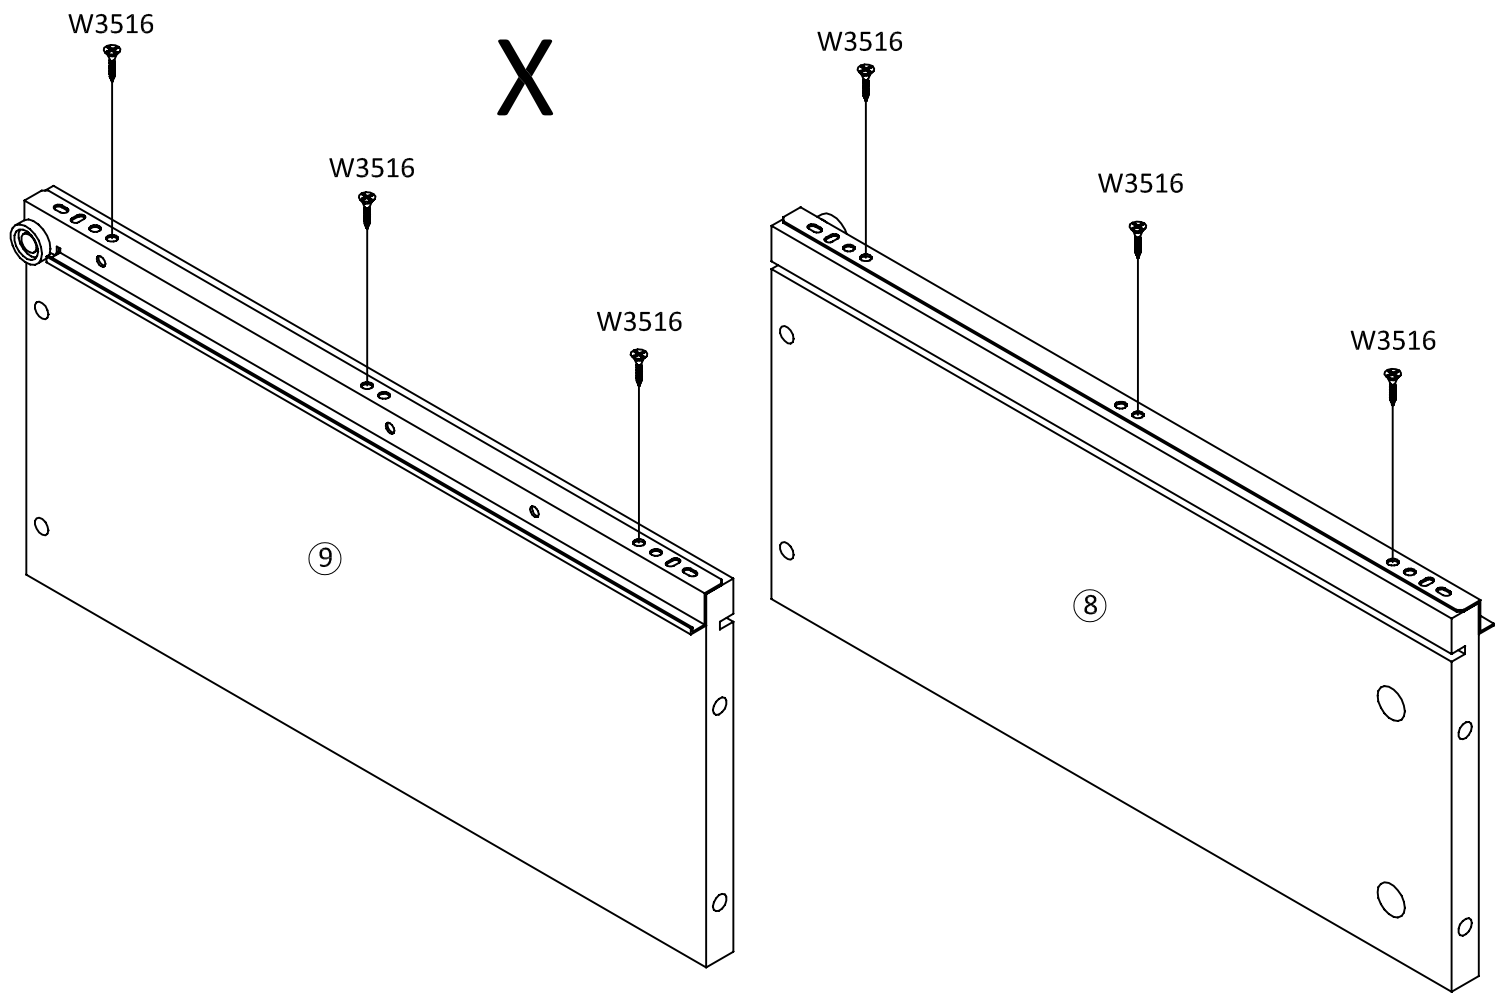

XI

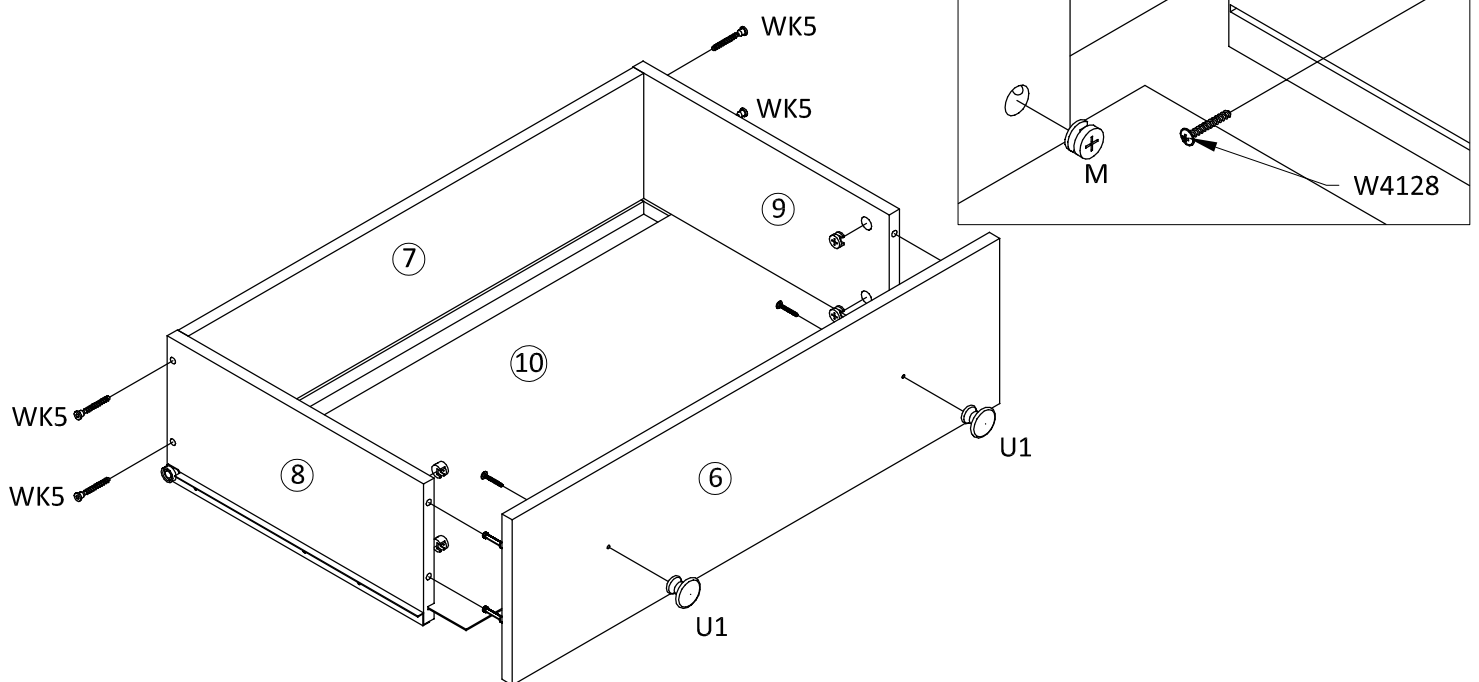

XII

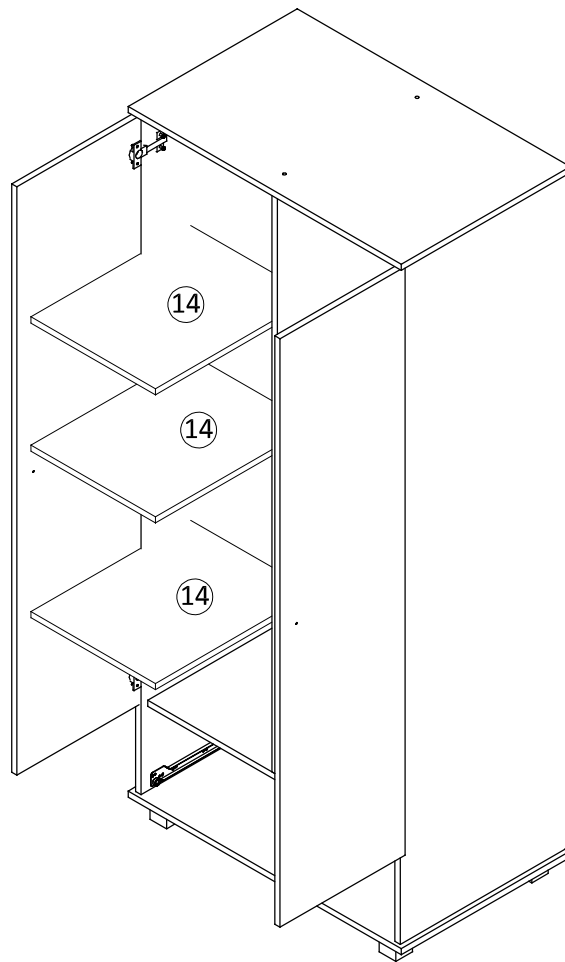

XIII

