

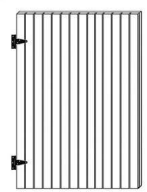
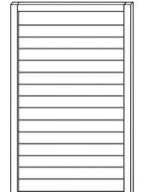
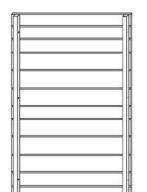

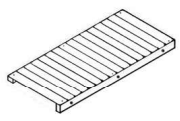

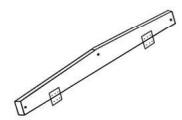


①  x44	⑤  x3	⑨  x2
②  x15	⑥  x3	⑩  x1
③  x6	⑦  x3	⑪  x2
④  x7	⑧  x4	⑫  x2
A  1 Stk	B  2 Stk	C  1 Stk
D  1 Stk	E  4 Stk	F  1 Stk
G  2 Stk	H  1 Stk	I  2 Stk
J  1 Stk	K  1 Stk	

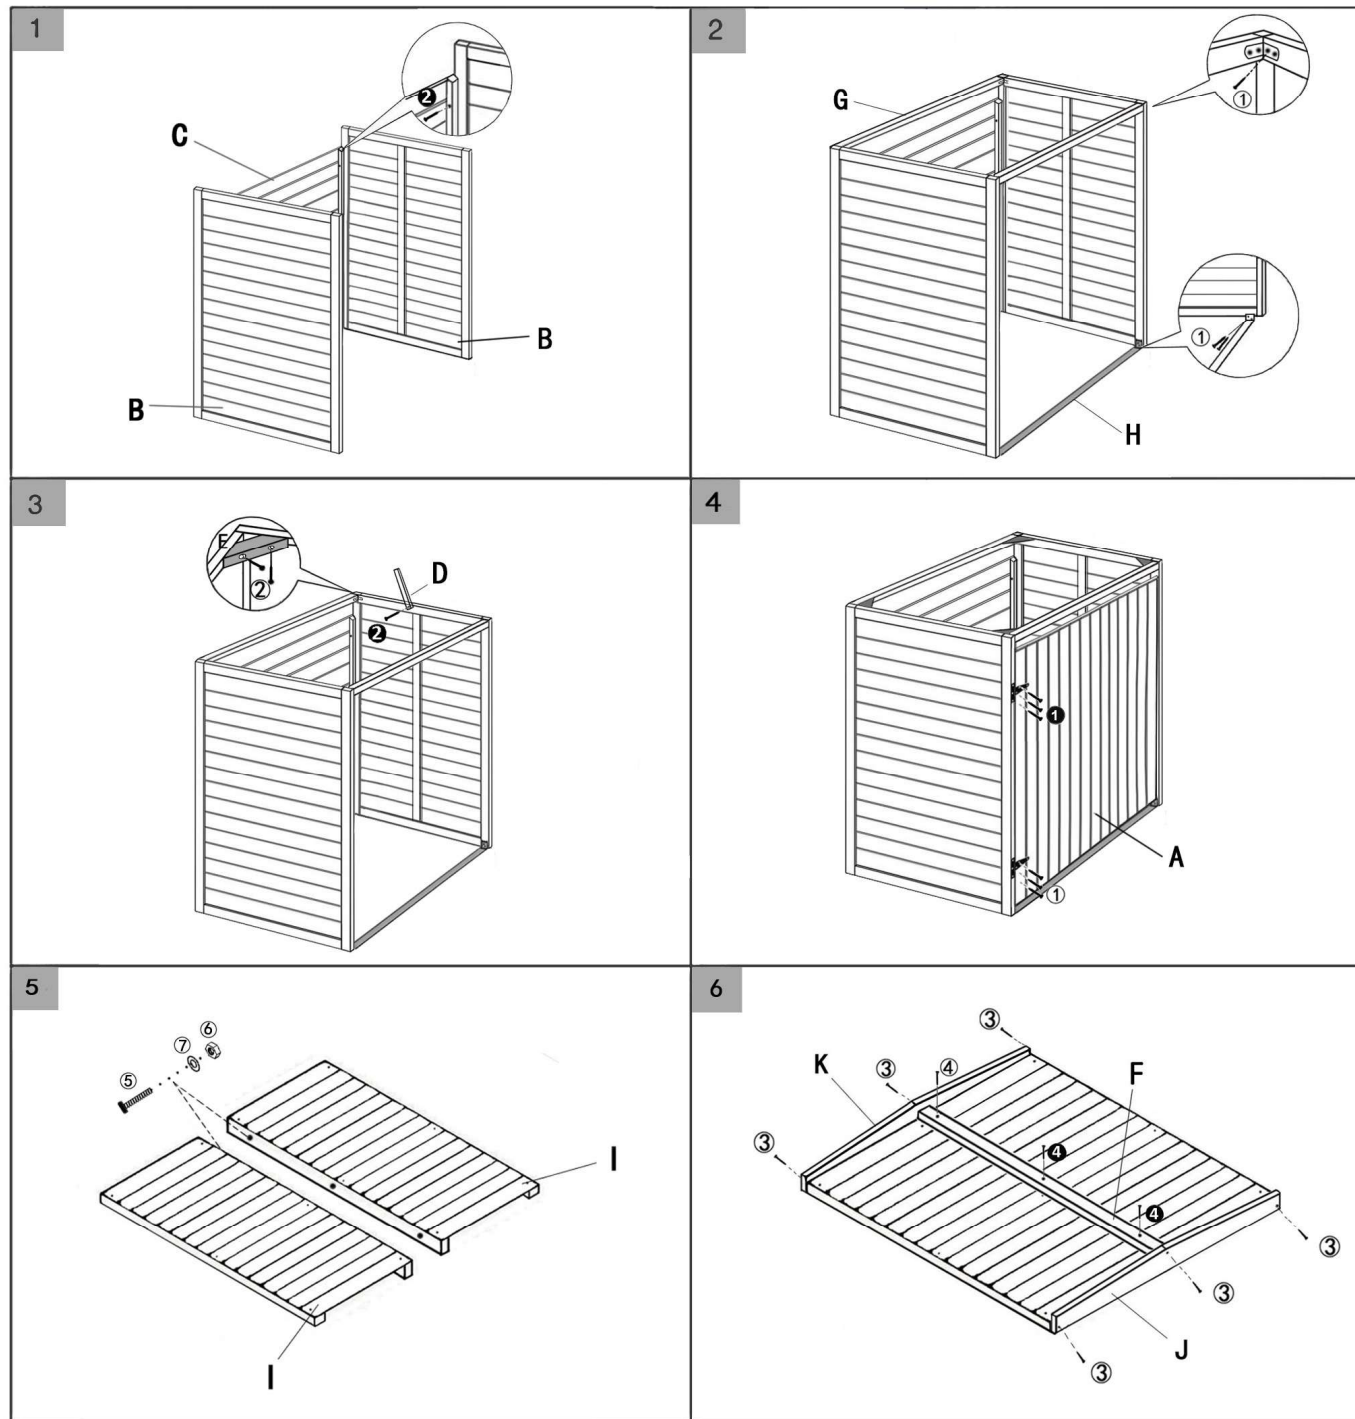


7

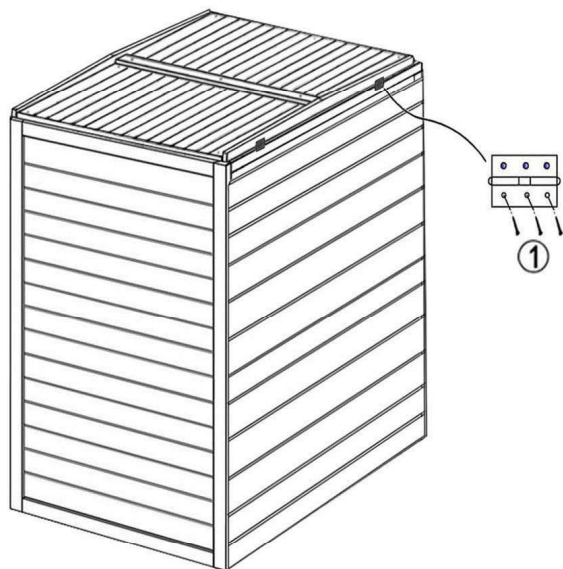


8

Upewnij się, że
kąt otwarcia
pokrywy nie
przekracza 90°

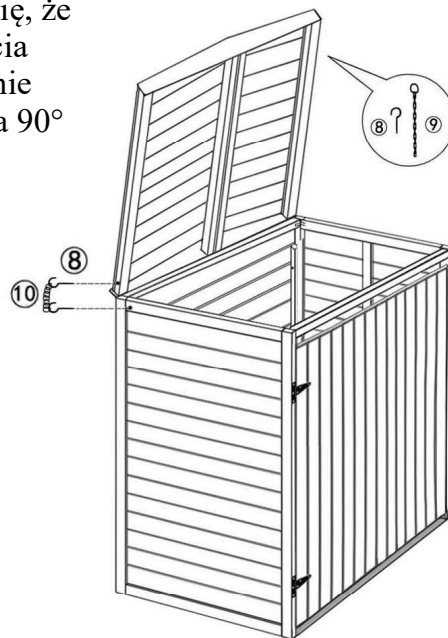

9

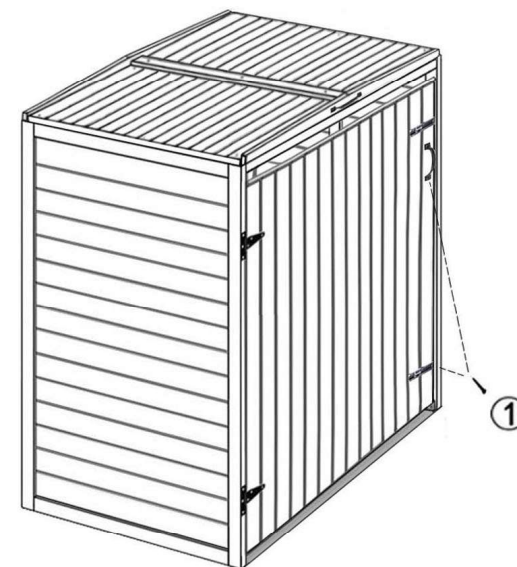

10

