



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Audi A1 Sportback (2010-2018)

A1K KPL

SOLARRIDE Zastorki, osłony przeciwsłoneczne do Audi A1 Sportback (2010-2018) KPL 3kg



5 904035 791269 >

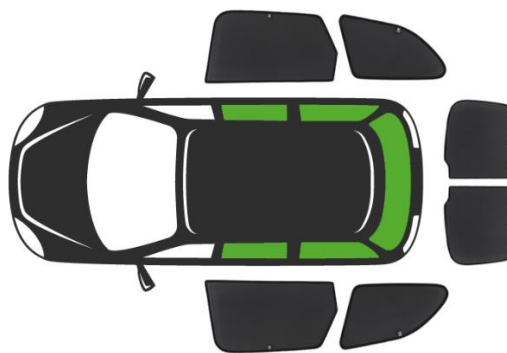

4 x



4 x







Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

