



2


Bohrposition (mm)
Hole pattern (mm)

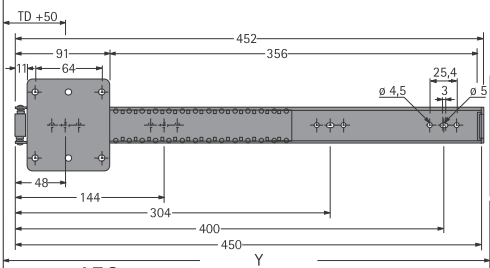


KA 5740/ 450

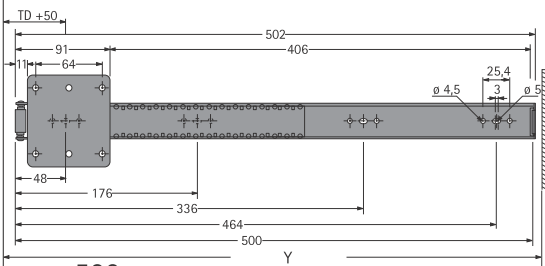


KA 5740/ 500

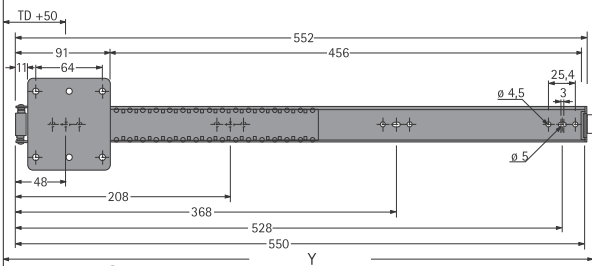


KA 5740/ 550

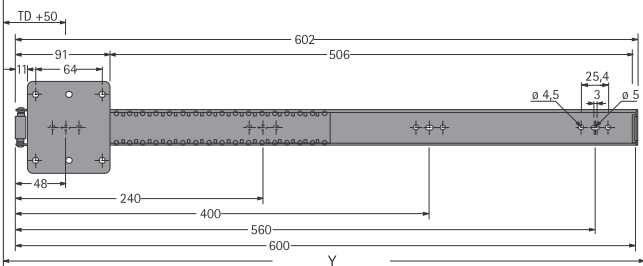


KA 5740/ 600

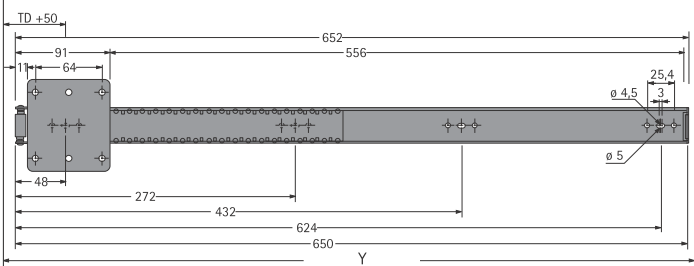


KA 5740/ 650

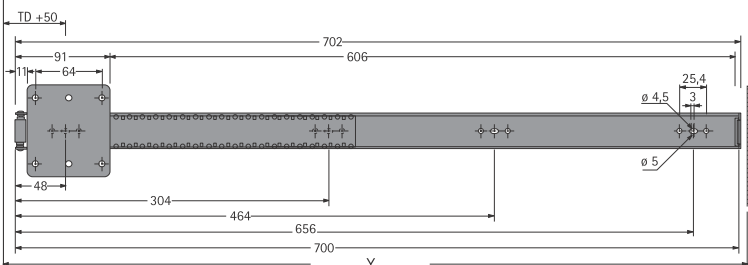


KA 5740/ 700

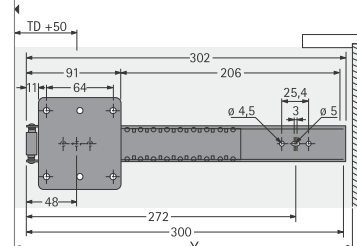

KA 5740/ 300

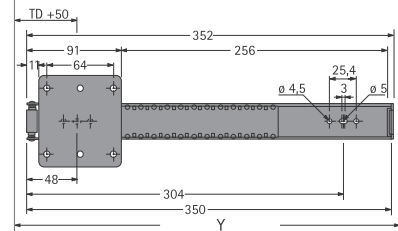

KA 5740/ 350

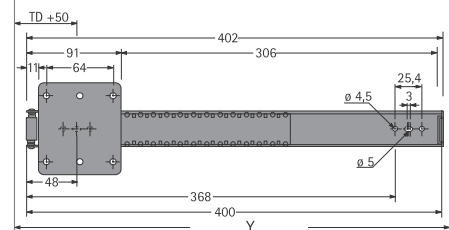

KA 5740/ 400

Y = Mindestkorpustiefe
Min. cabinet depth





KA 5740

Für Drehschiebetür-Anwendung zum Anschrauben
For pocket door application Screw-on assembly



i


Schnitt- und Montagehinweis
Sizing and assembly

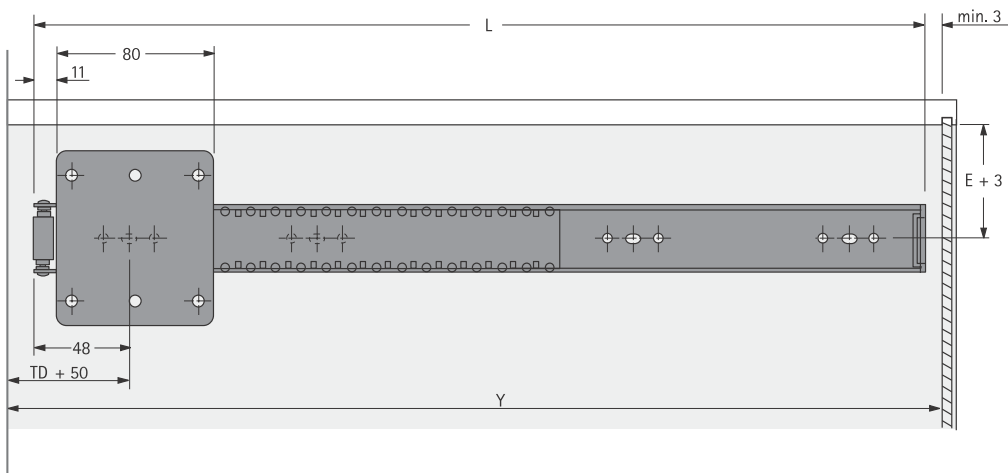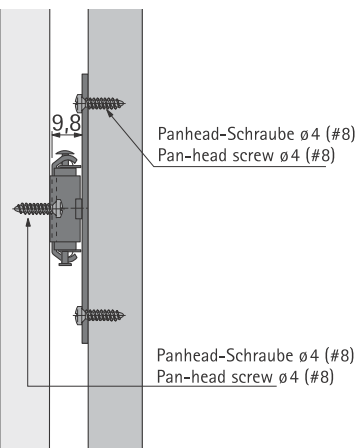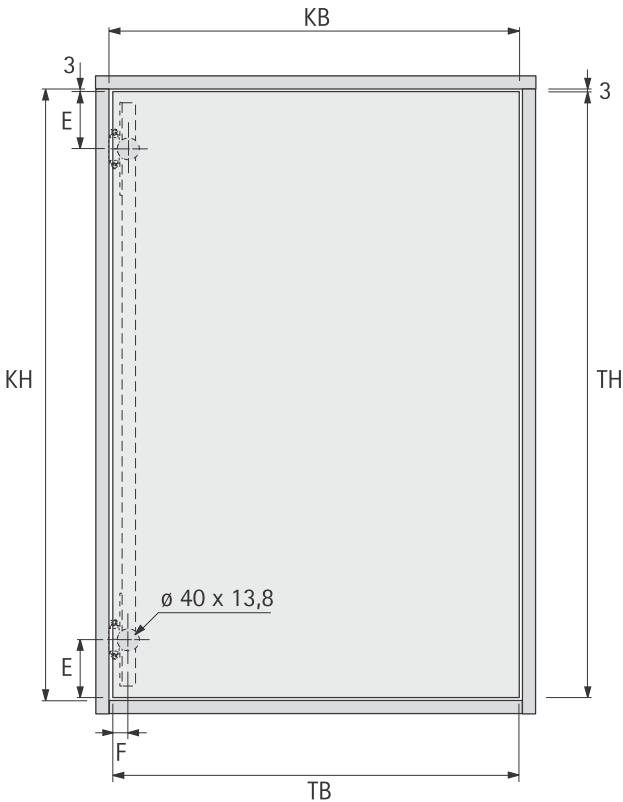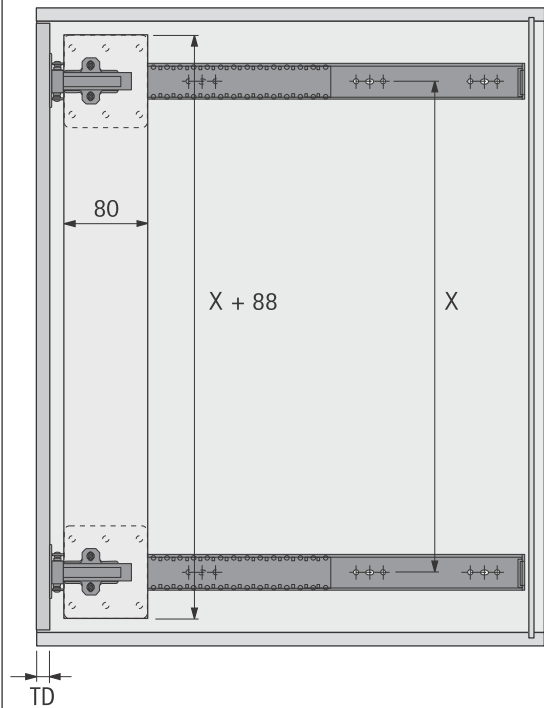

E	min. 60 mm
TH	KH - 2 x 3 mm (TH max. 900 mm)
X	TH - 2E
TB	KB - 2 x 3 mm
Y	L + (TD + 2 mm) + min. 3 mm

i

Anwendung 1 (Distanzplatte 12 mm)
Application 1 (Follow strip 12 mm)

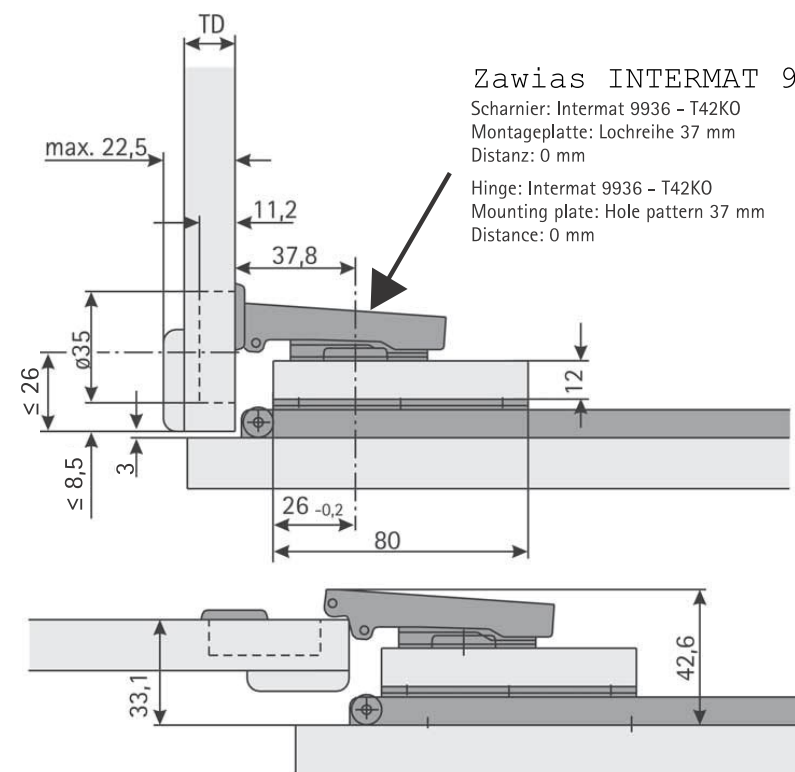

Zawias INTERMAT 9936 - T42 K0

Scharnier: Intermat 9936 - T42K0

Montageplatte: Lochreihe 37 mm

Distanz: 0 mm


Hinge: Intermat 9936 - T42K0

Mounting plate: Hole pattern 37 mm

Distance: 0 mm

i

Anwendung 2 (Distanzplatte 16 - 21 mm)
Application 2 (Follow strip 16 - 21 mm)

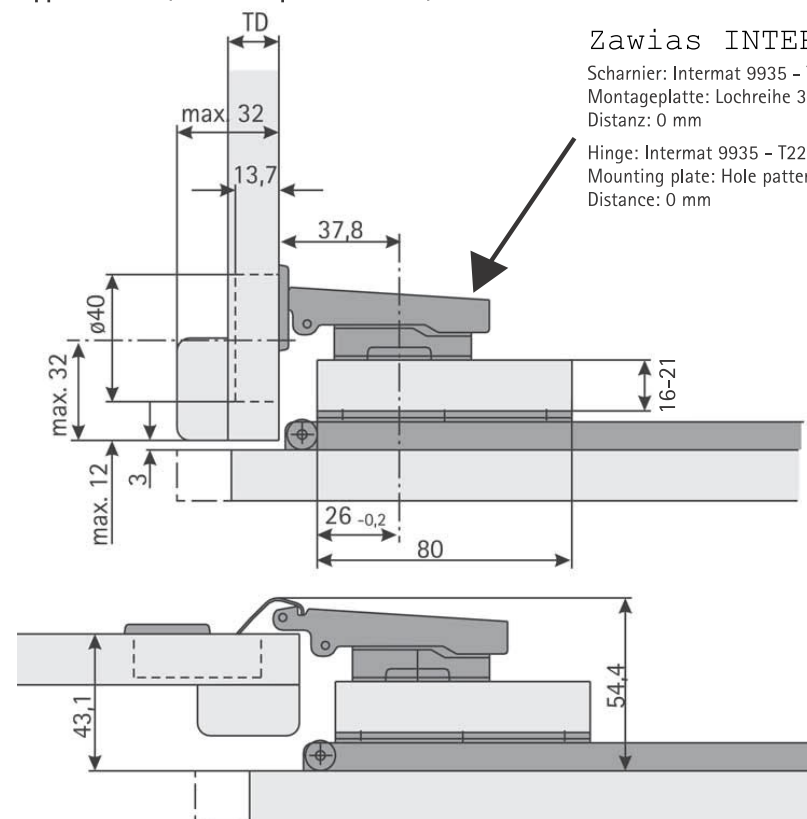

Zawias INTERMAT 9935 - T22K - 5

Scharnier: Intermat 9935 - T22K-5

Montageplatte: Lochreihe 37 mm

Distanz: 0 mm

Hinge: Intermat 9935 - T22K-5

Mounting plate: Hole pattern 37 mm

Distance: 0 mm

i

Montagefolge
Assembly steps

