

Adapter do samochodów amerykańskich

Nr kat: AD-B-01

ZESTAW ŚRUBOWY:

ŚRUBY:

M16x50- 8.8 - 2 szt.

M16x90-8.8 - 1 szt.

PODKŁADKI:

Ø17 - 3 szt.

PODKŁ. SPRĘŻYSTE:

Ø16,3 - 3 szt.

NAKRĘTKI:


M16-8 - 3 szt.

Instrukcja montażu:

1. Wsunąć profil haka do wnętrza belki zaczepowej samochodu i zablokować śrubą M16x90 (podkładka, podkładka sprężysta) .
2. Przykręcić kulę i blachę gniazdka elektrycznego śrubami M16x50 (podkładki, podkładki spręż., nakrętki) . Momenty przykręcenia wg tabeli. Dla niskich zamocowań kuli, blachę gniazdka elektrycznego montować tak aby była uniesiona do góry (otwór montażowy w blasze bardziej na dole) .
3. Podłączyć przewody elektryczne wg instrukcji.

Fitting instructions:

1. Slide the hook bar "1" into the pullbeam of the car and lock it with the bolt M16x90 (washer, spring washer) .
2. Fix the ball and electric plate with the bolts M16x50 (washers, spring washers, nuts. Torque settings according to the table. For low ball mouns, screw the electric plate like this so that it is lifted up (mounting hole in the electric plate on the bottom) .
3. Connect the electric wires according to the instructions.

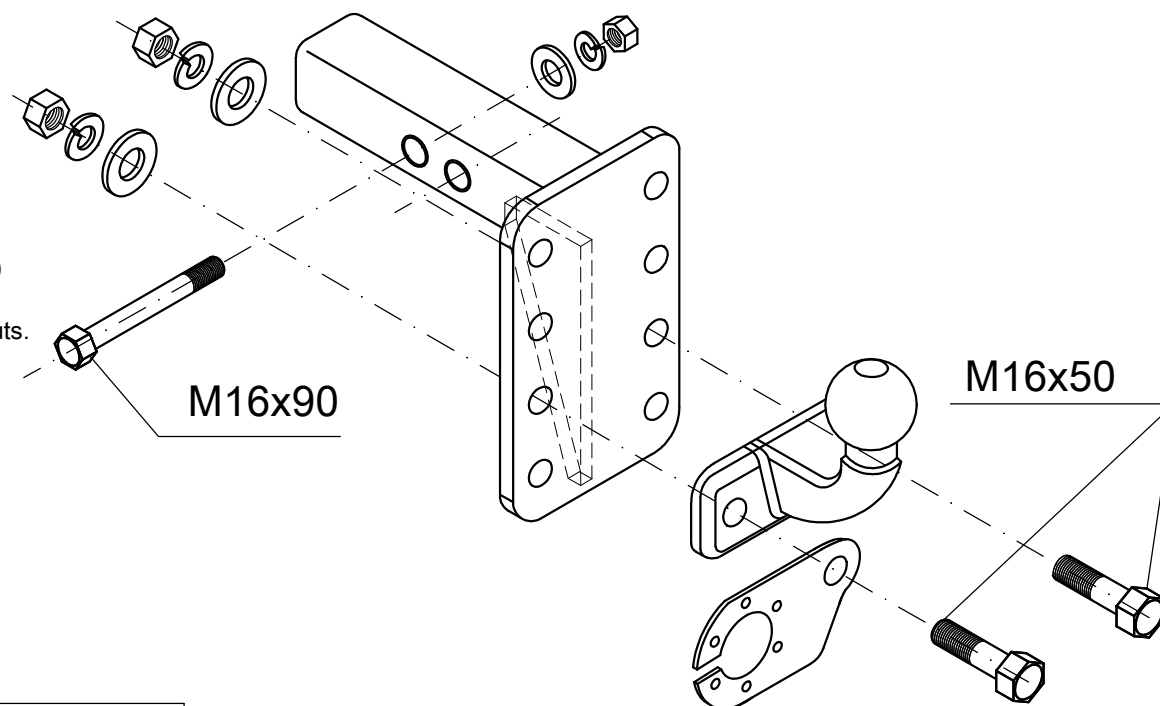

Moment skręcający dla śrub i nakrętek (8.8):

Torque settings for nuts and bolts (8.8)

M6 - 11Nm; M8-25Nm; M10-55Nm; M12-85Nm; M14-135Nm; M16-195Nm.